



[Click Here To View
Item at
www.GapPower.com](http://www.GapPower.com)

*Sales • Rentals
Parts & Service*



POWER TOWERS

LUMINAIRES POWER TOWERS

ENCENDIDA POWER TOWERS

Model numbers: P11000, P11500, P12000, P13000

Numéros de modèle : P11000, P11500, P12000, P13000

Modelos número: P11000, P11500, P12000 y P13000

Read all instructions carefully before operating or servicing this light.

Lire ces instructions avec soin avant toute opération de mise en marche et de réparation.

Lea atentamente las instrucciones antes de usar o dar mantenimiento a esta lámpara.

OPERATING INSTRUCTIONS

1. Plug the cord into any 15 amps or greater 120-volt 60 Hz power source for Model P11000, P11500 and P12000. Model P13000 plug into 240V-60 Hz power source. If you are using an extension cord, make sure it is rated for outdoor use, has three-prong ground and is 16 gauge.
2. When you turn the light on, the ballast (located inside metal housing) produces a humming noise. This noise will diminish as the bulb becomes fully energized (about 5 minutes).
3. If power to the light is interrupted, it takes about 20 minutes to fully re-energize the bulb. You can speed up the process by turning the switch off for 10 minutes before turning the power back on.
4. To adjust the nesting arm and light head, pull T-pin, raise arm to "up" position and replace T-pin.
5. To adjust the light head, if fixture has been on, allow fixture to cool a minimum of 10 minutes before adjusting it. Aim fixture approximately 15° above where you want it and tighten the knobs. Pull the fixture down to the final position and re-tighten the knobs. When adjusting the fixture, release the tension on the knobs by reversing this procedure.
6. Adjusting Mast:
To raise the telescopic mast you must raise the upper-mast first until trigger engages. To extend the mast further, raise the second mast section until trigger engages.
To lower the telescopic mast, grasp the raised mast with one hand, lifting it up as you pull the trigger release, lower the mast slowly.

SAFETY INSTRUCTIONS

WARNING: When using outdoor portable lamps, basic safety precautions should always be followed to reduce the risk of fire, electric shock or personal injury.

CAUTION: Failure to comply with these instructions could result in personal injury, death or property damage. This product was designed for normal open-air use.

NOT INTENDED FOR USE IN POTENTIALLY EXPLOSIVE ATMOSPHERES!

1. **Lighted lamp is hot**, use extreme caution to not touch light fixture during use or for a minimum of 10 minutes after use.
2. The light fixture and telescopic pole will conduct electricity. Exercise extreme caution to avoid contact with electrical wiring.
3. Under wet or damp conditions, use ground fault interrupter circuit. (GFCI)
4. Use only outdoor extension cords that have a three-prong grounding plug and use only matching grounded receptacles that accept the plug.
5. Use only with an extension cord for outdoor use, those designated with SW, SW-A, SOW, SOW-A, STW, STW-A, STOW, STOW-A, SJW, SJW-A OR SJTOW, SJTOW-A.
6. Do not use with extension cord near water or where water may accumulate.
7. Keep lamp at least 16 feet away from pools and spas.
8. Keep plug dry.
9. Plug into standard AC (alternating current) outlet only.
10. Do not submerge.
11. For use only on GFCI protected circuits.
12. Keep away from curtains, draperies and flammable materials.
13. Disconnect power and let unit cool down before changing a bulb or performing any maintenance on this product.
14. All worn or frayed cords must be replaced immediately.
15. When servicing use only identical replacement parts.
16. When using in windy conditions, place light so the wind is at the back of the fixture and set the brake. Support with sand bags if conditions warrant.
17. When transporting light in a vehicle, put brake on platform wheel, so unit won't move.
18. Never use bulb larger than what the fixture is rated for.
19. Do not look directly into lighted bulb.
20. Never operate the fixture with safety lens missing.
21. Keep fixture away from children.
22. Danger high voltage.

SAVE THESE INSTRUCTIONS

Questions about your light contact:

Bull Dog Power Products
by Warner Manufacturing
13435 Industrial Park Boulevard
Minneapolis, MN 55441 U.S.A.

Customer service information:

1-877-992-7637
Fax 1-877-927-6370
www.bulldogpower.com

Adresser toute question relative à l'appareil à:

Bull Dog Power Products
by Warner Manufacturing
13435 Industrial Park Boulevard
Minneapolis, MN 55441 ETATS-UNIS

Service à la clientèle:

Tél. : 1-877-992-7637
Téléc. : 1-877-927-6370
www.bulldogpower.com

**Si desea mayores informes sobre la lámpara,
póngase en contacto con:**

Bull Dog Power Products
by Warner Manufacturing
13435 Industrial Park Boulevard
Minneapolis, MN 55441 E.U.A.

Información de servicio al cliente:

1-877-992-7637
Fax 1-877-927-6370
www.bulldogpower.com