


TA238B/18-6

EXPLODED VIEW AND SPARE PARTS LIST

SCHEMA ECLATE ET LISTE DES PIECES DE RECHANGE

DESPICIE DE LA MAQUINA Y LISTA DE RECAMBIOS

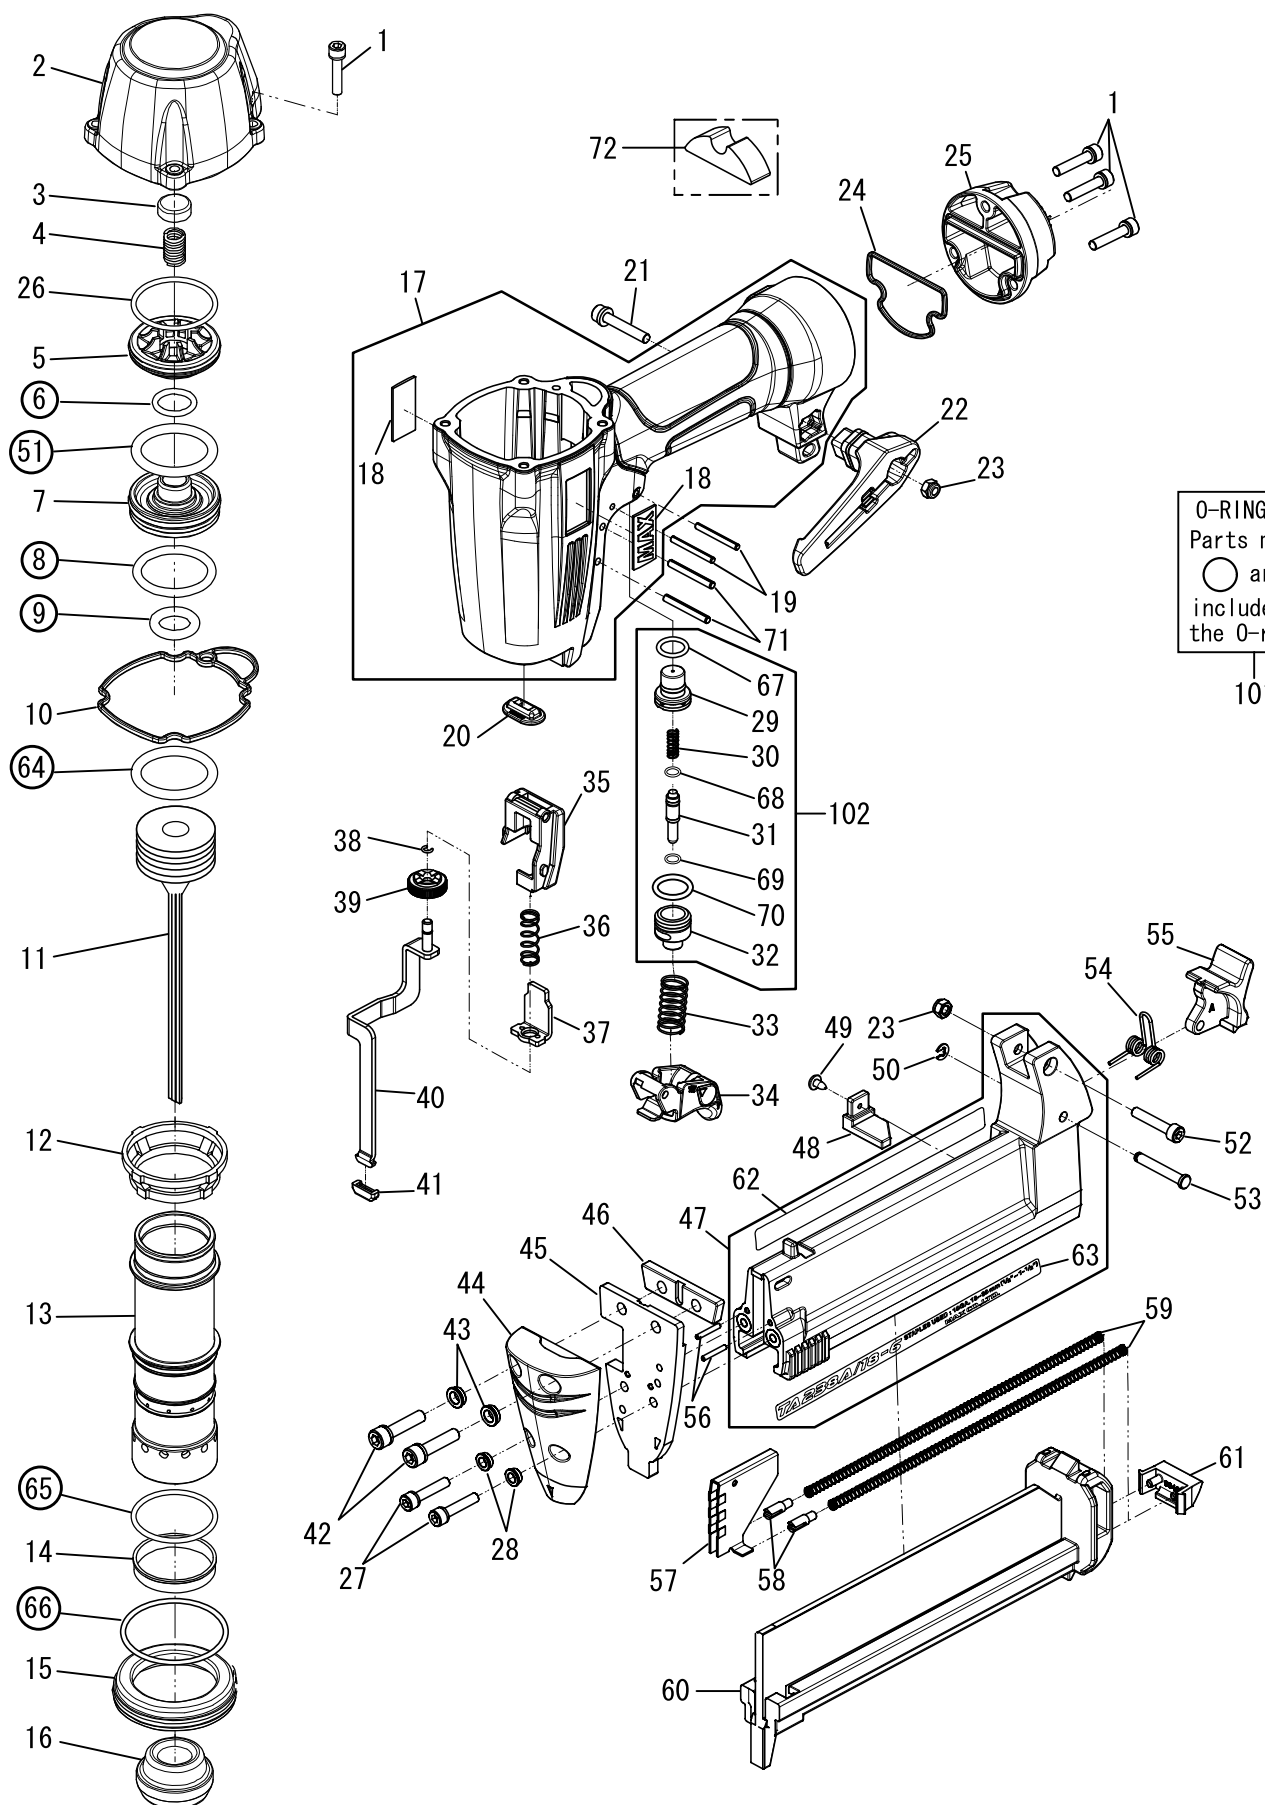

Part NO	Part Code	Description
1	TA19210	HEX. SOC. HD. CAP SCREW ASSY
2	TA19136	CYLINDER CAP
3	TA19137	EXHAUST SEAL
4	TA19138	COMPRESSION SPRING
5	TA19139	HEAD VALVE GUIDE
6	TA19140	O-RING 9140
7	TA19142	HEAD VALVE PISTON
8	TA19143	O-RING 9143
9	TA19144	O-RING 9144
10	TA19145	CYLINDER CAP SEAL
11	TA19915	DRIVER UNIT
12	TA19208	CYLINDER WASHER
13	TA19146	CYLINDER
14	TA19148	CHECK PAWL
15	TA19149	CYLINDER RING
16	TA19907	BUMPER
17	TA70351	FRAME UNIT
18	TA18930	NAME PLATE
19	TA19180	SPRING PIN
20	TA19328	NOZZLE
21	TA19170	HEX. SOC. HD. CAP SCREW
22	TA19171	HOOK
23	TA19172	ELASTIC STOP NUT
24	TA19168	END CAP SEAL
25	TA19169	END CAP
26	TA19141	O-RING 9141
27	TA19329	HEX.SOC.HD.CAP.SCREW
28	TA19347	COLLAR B
29	TA19156	TRIGGER VALVE HEAD
30	TA19157	SPRING
31	TA19158	TRIGGER VALVE STEM
32	TA19162	TRIGGER VALVE GUIDE
33	TA19163	SPRING

34	TA19164	TRIGGER UNIT
35	TA19198	ARM GUIDE
36	TA19199	SPRING
37	TA19200	CONTACT ARM A
38	TA19201	C-RING
39	TA19182	ADJUST DIAL
40	TA19343	CONTACT ARM B
41	TA19202	CONTACT TOP
42	TA19052	HEX.SOC.HD.CAP SCR.ASSY
43	TA19254	COLLAR
44	TA19330	FRONT COVER
45	TA19331	DRIVER GUIDE
46	TA19332	WARE PLATE
47	TA81353	MAGAZINE ASSY (AFTER)
48	TA19340	PUSHER STOPPER
49	TA19346	TAPPING SCREW
50	TA19341	E-RING
51	TA19215	O-RING 9215
52	TA19342	HEX.SOC.HD.CAP.SCREW
53	TA19338	STEP PIN
54	TA19339	SPRING
55	TA19337	CLICK LEVER
56	TA19352	SPRING PIN
57	TA19333	PUSHER
58	TA19334	PUSHER GUIDE
59	TA19335	SPRING
60	TA19344	SLIDER
61	TA19336	TAIL COVER
62	TA19306	WARNING LABEL
63	TA19925	NAME LABEL(CE&USA)
64	TA19209	O-RING 9209
65	TA19147	O-RING 9147
66	TA19150	O-RING 9150
67	TA19155	O-RING 9155

68	TA19159	O-RING 9159
69	TA19160	O-RING 9160
70	TA19161	O-RING 9161
71	TA19165	SPRING PIN
72	TA19173	EXHAUST FILTER
101	TA81265	O-RING KIT