Parts Table of Contents

Section A: Controls Upper Controls, ANSI Models	Page A-3
Upper Controls, CE Models	A-7
Lower Controls, 3084ES Electric Models	A-11 A-13
Section B: Platform and Rails	Page
Platform Installation	B-3
Platform & Rails, 3084	B-7
Section C: Boom	Page
Boom Mount and Pivot	
Upper Boom Assembly	
Section D: Axles	Page
Front Axle Assembly	D-3
Axle Installation, Front	
Axle Installation, Rear	
Wheel Motor, Rear	
Section E: Hydraulics	Page
Main Manifold Assembly, Electric Models	E-3
Main Manifold Assembly, Electric Models (continued)	
Main Manifold Assembly, RT Models	
Main Manifold Assembly, RT Models (continued)	
Hydraulic Hose Routing, RT Models: Steer, Brake, Case Drain	
Hydraulic Hose Routing, RT Models: Lift, Pump	
Hydraulic Hose Routing, RT Models: Platform Level, Axle Float	
Hydraulic Hose Routing, RT Models: Drive Motors	
Hydraulic Hose Routing, ES Models: Steer, Brake, Case Drain	
Hydraulic Hose Routing, ES Models: Lift, Pump	
Hydraulic Hose Routing, ES Models: Platform Level, Axle Float	
Hydraulic Hose Routing, ES Models: Drive Motors	
Steering Cylinder	
Level Cylinder	
Axle Lock Cylinder	. E-35



Parts Table of Contents

Section F: Base	Page
Module Installation	F-3
Control Module – ES, Drawing 1of 2	
Control Module – ES, Drawing 1of 2	
Power Module – ES	
Control Module RT, Drawing 1 of 2	
Control Module, RT Drawing 2 of 2	F-13
Power Module – RT	
Engine Mount – Dual Fuel	F-17
Engine Mount – Diesel	
Engine – Diesel	F-21
Engine – Diesel (continued)	F-23
Engine – Dual Fuel	F-25
Engine – Dual Fuel (continued)	F-27
LP Tank – Dual Fuel	
Generator Option, RT	
Wire Harness – Electric Models	
Wire Harness – RT Models	F-35
Section G: Decals, ANSI Models	Page
Decals, ES Models, ANSI Specification	G-3
Decals, ES Models, ANSI Specification (continued)	
Decals, RT Models, ANSI Specification	G-9
Decals, RT Models, ANSI Specification (continued)	G-11
Section H: Decals, CE Models	Page
Decals, ES Models, CE Specification	
Decals, ES Models, CE Specification (continued)	
Decals, RT Models, CE Specification	
Decals, RT Models, CE Specification (continued)	H-11






SECTION A

CONTROLS

Cont	TENTS	PAGE
	Upper Controls, ANSI Models	 . A-3
	Upper Controls, CE Models	 . A-5
	Upper Control Box Cover Assembly	 . A-7
	Upper Control Joystick	 . A-9
	Lower Controls, 3084ES Electric Models	
	Lower Controls, 3084RT Dual Fuel Models	 A-13
	Lower Controls, 3084RT Diesel Models	 A-15




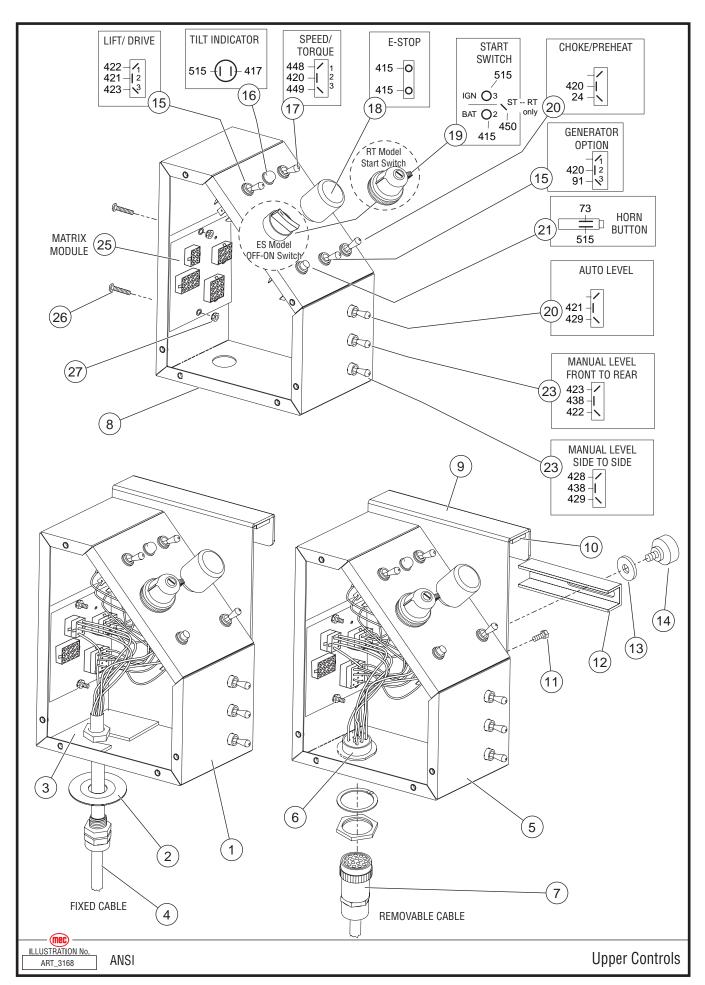

Upper Controls, ANSI Models

ITEM	PART NO.	QTY	DESCRIPTION			
Fixed Co	Fixed Control Box Assembly					
4	83062	1	Assembly With Fixed Cable, ES Models			
1	83063	1	Assembly With Fixed Cable, RT Models			
2	REF	1	Strain Relief Washer (see Wire Harness, Section F)			
3	REF	1	Mounting Plate (see Wire Harness, Section F)			
4	REF	1	Cable, Fixed (see Wire Harness, Section F)			
Remova	ble Control Box	x Assem	bly			
Е	83064	1	Assembly With Removable Cable, ES Models			
5	83065	1	Assembly With Removable Cable, RT Models			
6	REF	1	Harness, Removable (see Wire Harness, Section F)			
7	REF	1	Cable, Removable (see Wire Harness, Section F)			
All Mod	els	•				
8	16242	1	Weldment, Control Box			
9	13865	1	Bracket, Control Box Holder			
10	6350	.5 FT	Tape, Foam			
11	50109	1	Screw, 5/16–18			
12	13864	1	Bracket, Control Box Holder			
13	50063	1	Washer, Flat			
14	8826	1	Thumb Screw, 5/16–18, Flower			
15	6234	1	Switch, Toggle, Lft/Drive			
15	6234	1	Switch, Toggle, Generator Option			
	9184	1	Lens, Amber, Tilt Indicator			
16	9188	1	Light, Bayonet, 14 Volt			
	9179	1	Socket, Indicator Light			
17	6905	1	Switch, Toggle, Speed/Torque			
18	7800	1	Switch, Emergency Stop			
19 RT	91619	1	RT MODELS - Switch, Start			
	91926	1	ES MODELS - Switch, Start			
19 ES	90714	1	ES MODELS - Switch Base			
	8082	1	ES MODELS - Contact Block, N.O.			
20	5630	1	Switch, 2-Position Momentary Single Pole			
21	8044	1	Switch, Button (Horn option)			
	8819	1	Boot			
22						
23	91954	2	Switch, 3-Position Momentary			
24						
25	91663	1	Matrix Module			
26	50189	2	Screw, 10-32 x 125			
27	50238	2	Nut, 10-32 Nylock			




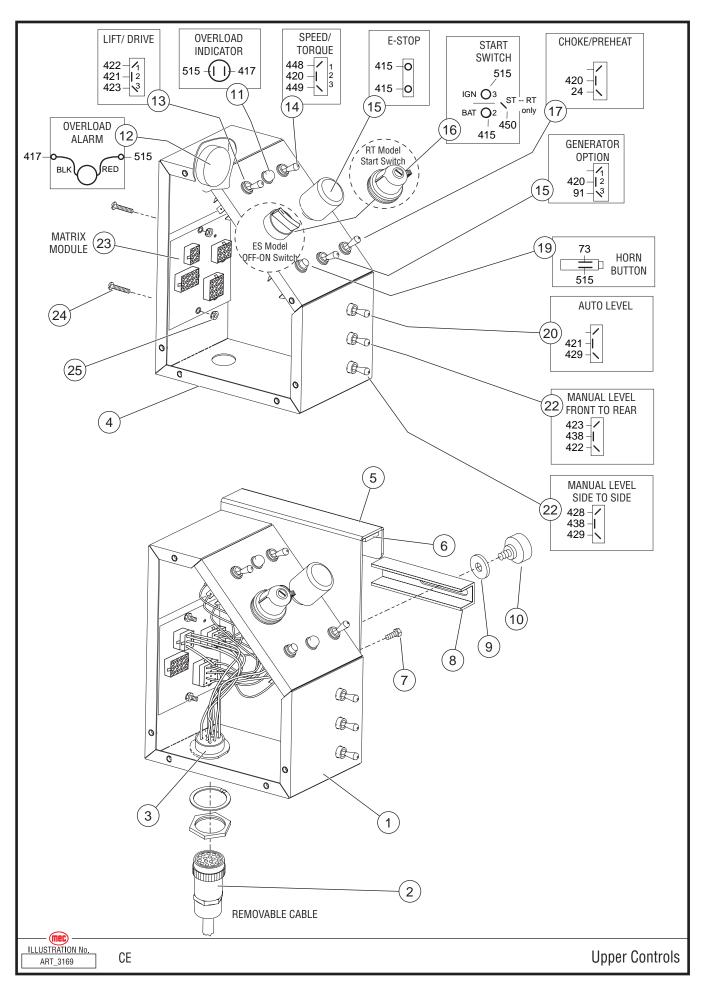

Upper Controls, CE Models

ITEM	PART NO.	QTY	DESCRIPTION
Remova	ible Control Box	Assem	bly
4	83066	1	Assembly With Removable Cable, ES Models
1	83067	1	Assembly With Removable Cable, RT Models
2	REF	1	Harness, Removable (see Wire Harness, Section F)
3	REF	1	Cable, Removable (see Wire Harness, Section F)
4	16242	1	Weldment, Control Box
5	13865	1	Bracket, Control Box Holder
6	6350	.5 FT	Tape, Foam
7	50109	1	Screw, 5/16–18
8	13864	1	Bracket, Control Box Holder
9	50063	1	Washer, Flat
10	8826	1	Thumb Screw, 5/16–18, Flower
	9183	1	Lens, Red, Overload
11	9188	1	Light, Bayonet, 14 Volt
	9179	1	Socket, Indicator Light
12	7553	1	Alarm
13	6234	1	Switch, Toggle, Lft/Drive
10	6234	1	Switch, Toggle, Generator Option
14	6905	1	Switch, Toggle, Speed/Torque
15	7800	1	Switch, Emergency Stop
16 RT	91619	1	RT MODELS - Switch, Start
	91926	1	ES MODELS - Switch, Start
16 ES	90714	1	ES MODELS - Switch Base
	8082	1	ES MODELS - Contact Block, N.O.
17	5694	1	Switch, Toggle, Choke/Preheat (RT Only)
18			
19	8044	1	Switch, Button (Horn option)
20	5630	1	Switch, 2-Position Momentary Single Pole
21	5694	1	Switch, Toggle, Manual Level, Front-Rear
22	91954	2	Switch, 3-Position Momentary
23	91663	1	Matrix module
24	50189	2	Screw, 10-32 x 125
25	50238	2	Nut, 10-32 Nylock




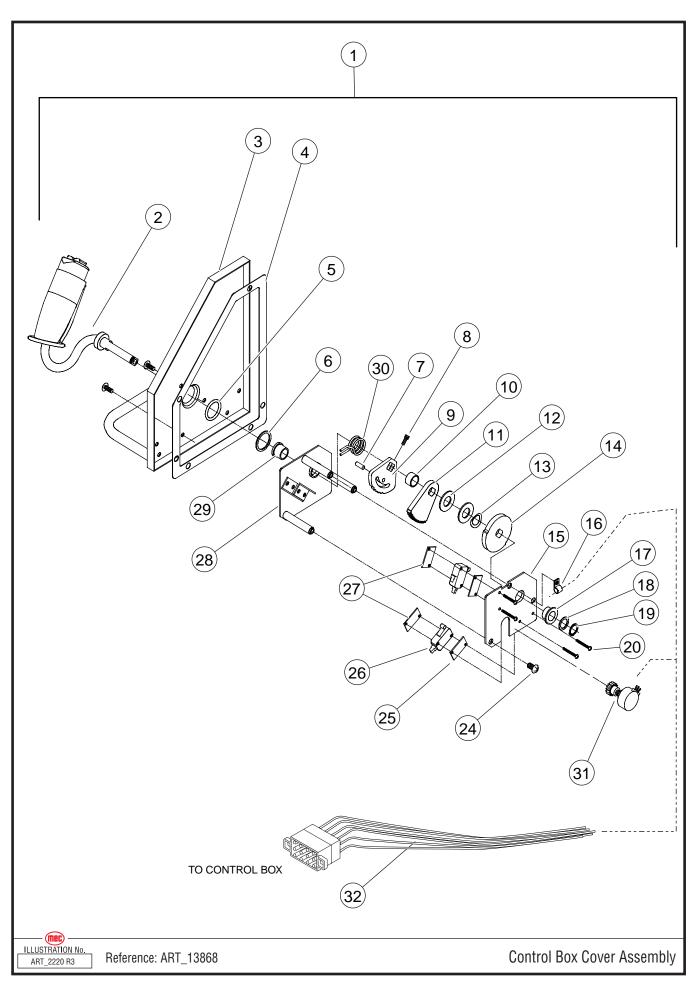

Upper Control Box Cover Assembly

ITEM	PART NO.	QTY	DESCRIPTION
1	83076	1	Control Box Cover Assembly
2	92199	1	Joystick Assembly
3	3772	1	Cover
4	7875	1	Gasket
5	7882	1	0-Ring
6	HDW3768	1	Washer, Flat
7	1008348	1	Pin, Hold Down
8	50155	1	Screw, 6–32 x 1/2 inch
9	13502	1	Bracket, Centering
10	3763	1	Spacer, Step
11	13402	1	Gear, large
12	HDW8531	2	Washer, Flat
13	HDW7881	1	Washer, Bevel
14	3782	1	Cam, Directional
15	13403	1	Plate, Bottom
16	6917	1	Clamp, Cable, 1/4 inch
17	7818	1	Bearing, Bronze, Flanged
18	HDW3771	1	Washer, Flat
19	5736	1	Ring, Retaining, 1/2 inch
20	50139	4	Screw, 4-40 x 5/8 inch
21			
22			
23			
24	50191	12	Screw, 10–32 x 1/2 inch
25	3764	2	Plate, Spacer
26	8696	2	Switch, Limit, Micro V7
27	3765	2	Plate, Strap
28	3766	1	Plate, Top
29	7819	1	Bearing, Bornze, Flanged
30	8435	1	Spring, Joystick Centering
31	91824	1	Potentiometer Assembly
32	REF	1	Wire Harness, (see Wire Harness, Section F)




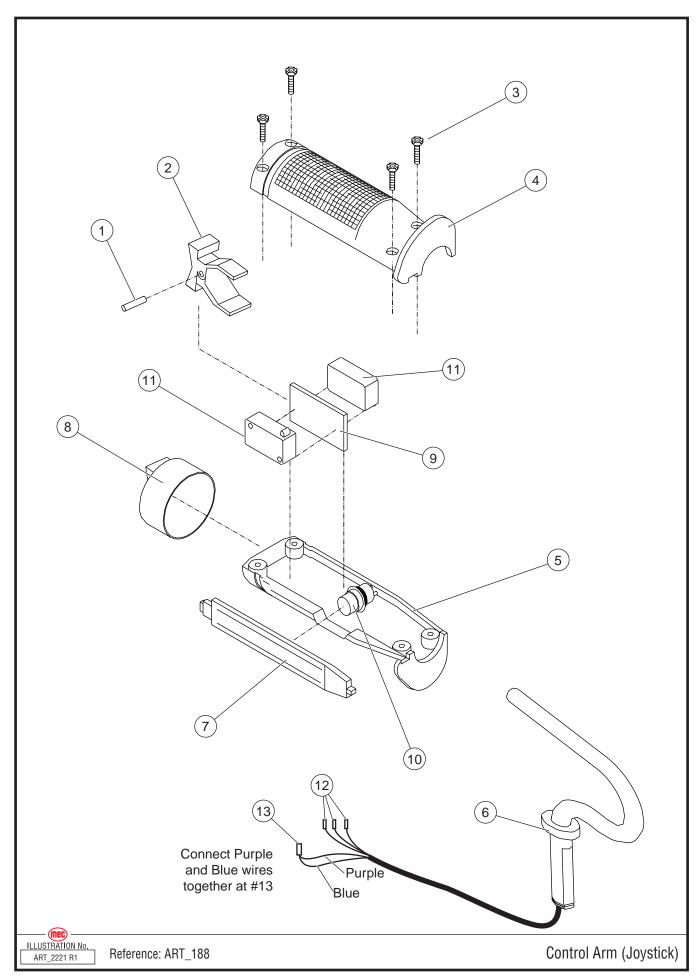

Upper Control Joystick

ITEM	PART NO.	QTY	DESCRIPTION
	92199		Joystick Assembly
	8630		Joystick Assembly without Control Arm (#6)
1	8750	1	Pin (Service Only)
2	8453	1	Switch Actuator (Service Only)
3	HDW8455	4	Screw (Service Only)
4	8752	1	Grip, Top Half (Service Only)
5	8751	1	Grip, Bottom Half (Service Only)
6	13638	1	Control Arm without wire
7	8748	1	Trigger (Service Only)
8	8456	1	Rocker Boot (Service Only)
9	8447	1	Switch Seperator (Service Only)
10	8753	1	Motion Switch, OFF-ON (Service Only)
11	8448	2	Switch (Service Only)
12	91839	3	Amp Socket (not shown)
13	92194	1	Push Connector, 3/16"
	8761		Switch Assembly (not shown) includes item #9, item #11 (x2), wire and connectors




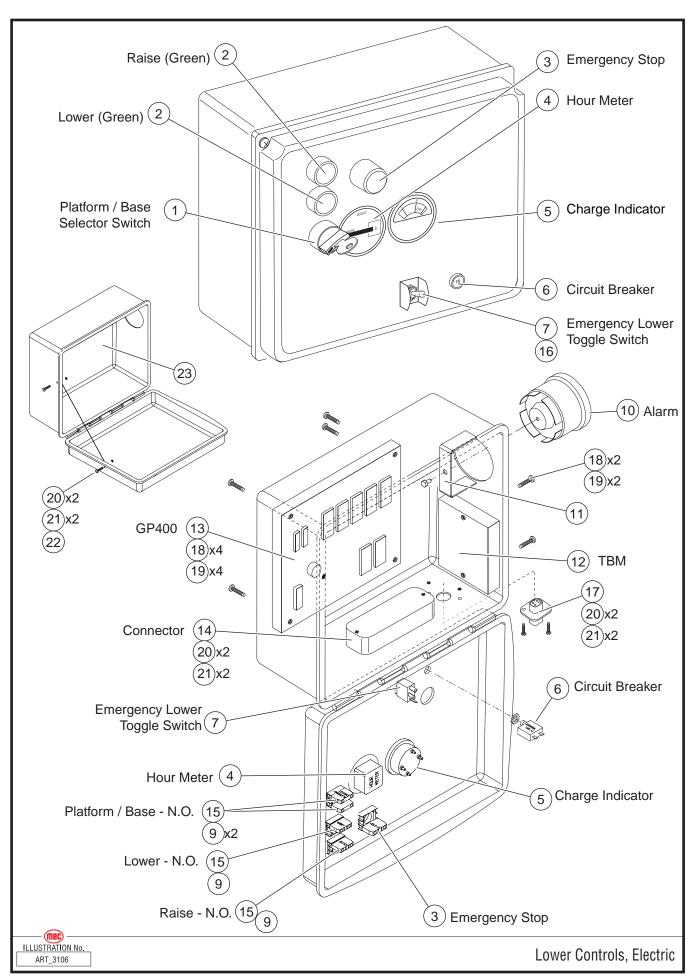

Lower Controls, 3084ES Electric Models

ITEM	PART NO.	QTY	DESCRIPTION
_	83077	1	Lower Control Box Assembly, ES Models
1	9549	1	Switch, 3-Position, Keyed
2	91667	2	Switch, Button, Green
3	7800	1	Switch, Emergency Stop, Red
4	91704	1	Hour Meter
5	91744	1	Charge Indicator
6	7235	1	Circuit Breaker
7	5630	1	Switch, Toggle, 1 Pole 2 Position
8	ı	_	_
9	8082	4	Contact Block, N. O.
10	91711	1	Alarm, 107dB
11	17082	1	Bracket, Alarm Mount
12	91838	1	Terminal Block Module (TBM)
13	91659	1	System Controller, GP400
14	91887	1	Deutsch Connector, DRC 12 70P
15	90714	3	Contact Base
16	1313	1	Switch Guard
17	91290	1	Deutsch Connection, DT14-4P-L012
18	50229	6	Screw, 10-24 x 1.00
19	50230	6	Nut, 10-24 Nylock
20	50233	6	Screw, 8-32 x 1.00
21	50231	6	Nut, 8-32 Nylock
22	91921	1	Lanyard
23	92015C	1	Control Box
	REF		Harness See Section F




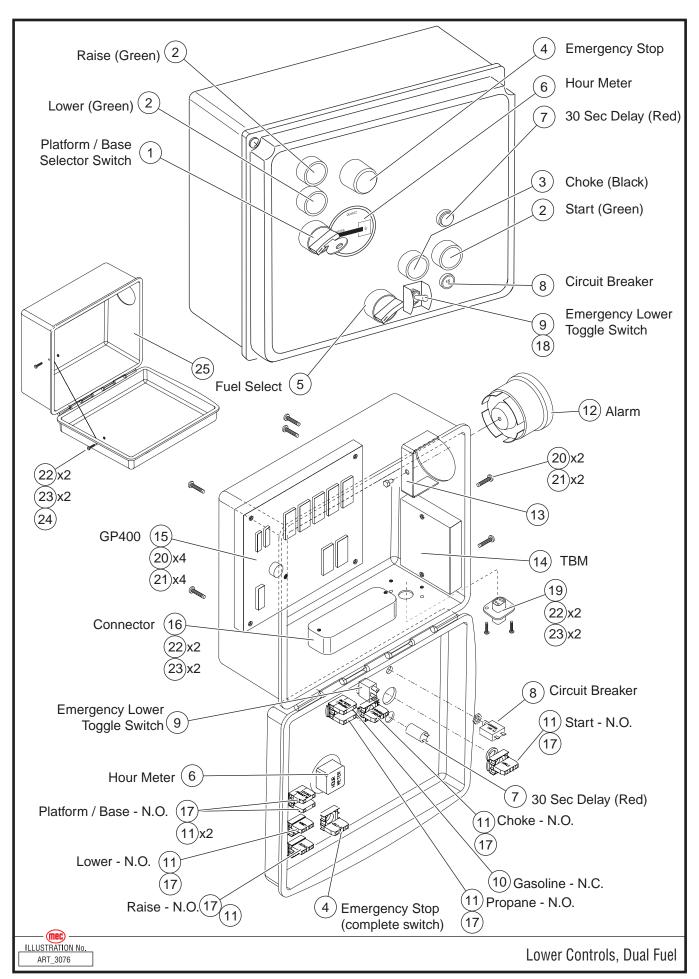

Lower Controls, 3084RT Dual Fuel Models

ITEM	PART NO.	QTY	DESCRIPTION
_	83078	1	Lower Control Box Assembly, DF Models
1	9549	1	Switch, 3-Position, Keyed
2	91667	3	Switch, Button, Green
3	91957	1	Switch, Button, Black
4	7800	1	Switch, Emergency Stop
5	91926	1	Switch, 2-Position
6	91704	1	Hour Meter
7	92254	1	Light, Red
8	7235	1	Circuit Breaker
9	5630	1	Switch, Toggle, 1 Pole 2 Position, Emergency Down
10	8083	1	Contact Block, N. C.
11	8082	7	Contact Block, N. O.
12	91711	1	Alarm, 107dB
13	17082	1	Bracket, Alarm Mount
14	91838	1	Terminal Block Module (TBM)
15	91659	1	System Controller, GP400
16	91887	1	Deutsch Connector, DRC 12 70P
17	90714	6	Contact Base
18	1313	1	Switch Guard
19	91290	1	Deutsch Connection, DT14-4P-L012
20	50229	6	Screw, 10-24 x 1.00
21	50230	6	Nut, 10-24 Nylock
22	50233	6	Screw, 8-32 x 1.00
23	50231	6	Nut, 8-32 Nylock
24	91921	1	Lanyard
25	92016C	1	Control Box
	REF		Harness See Section F



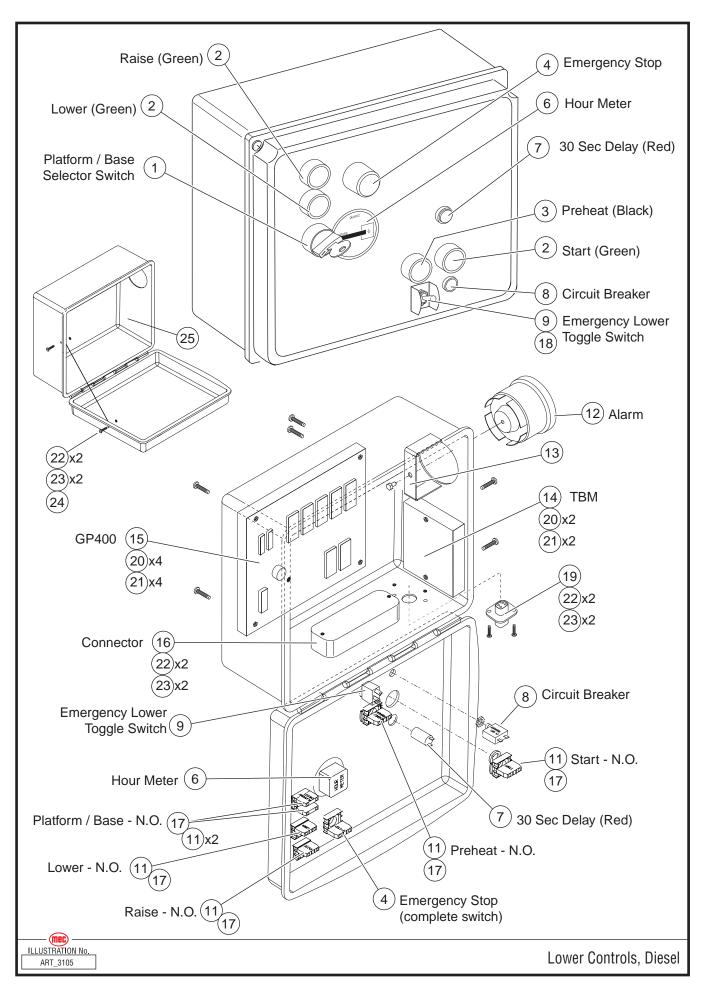

Lower Controls, 3084RT Diesel Models

ITEM	PART NO.	QTY	DESCRIPTION
_	83079	1	Lower Control Box Assembly, Diesel Models
1	9549	1	Switch, 3-Position, Keyed
2	91667	3	Switch, Button, Green
3	91957	1	Switch, Button, Black
4	7800	1	Switch, Emergency Stop
6	91704	1	Hour Meter
7	92254	1	Light, Red
8	7235	1	Circuit Breaker
9	5630	1	Switch, Toggle, 1 Pole 2 Position, Emergency Down
	-		
11	8082	6	Contact Block, N. O.
12	91711	1	Alarm, 107dB
13	17082	1	Bracket, Alarm Mount
14	91838	1	Terminal Block Module (TBM)
15	91659	1	System Controller, GP400
16	91887	1	Deutsch Connector, DRC 12 70P
17	90714	6	Contact Base
18	1313	1	Switch Guard
19	91290	1	Deutsch Connection, DT14-4P-L012
20	50229	6	Screw, 10-24 x 1.00
21	50230	6	Nut, 10-24 Nylock
22	50233	6	Screw, 8-32 x 1.00
23	50231	6	Nut, 8-32 Nylock
24	91921	1	Lanyard
25	92016C	1	Control Box
	REF		Harness See Section F



NOTES:






SECTION B

PLATFORM AND RAILS

Con	TENTS	Page
	Platform Installation	B-3
	Platform & Rails, 3084	B-5
	Platform & Rails, 2684	
	Platform & Rails, 2684 (continued)	B-9




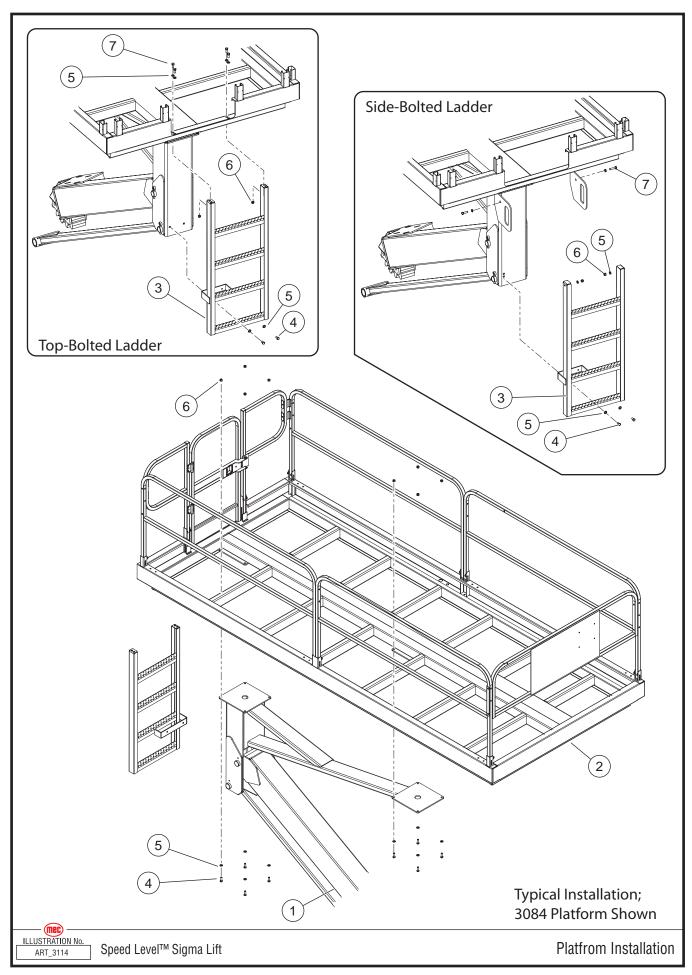

Platform Installation

ITEM	PART NO.	QTY	DESCRIPTION
1	83083	REF	Boom Assembly
2	83080	REF	Platform Assembly, 3084
	83097	REF	Platform Assembly, 2684
3	19258	1	Ladder, Side-Bolted
3	19148	1	Ladder, Top-Bolted
4	50040	10	Bolt, M12 x 35, GR8.8
5	50003	14	Washer, 13.5 mm ID x 24mm OD
6	50054	14	Nut, M12, GR8.8
7	50039	4	Bolt, M12 x 30



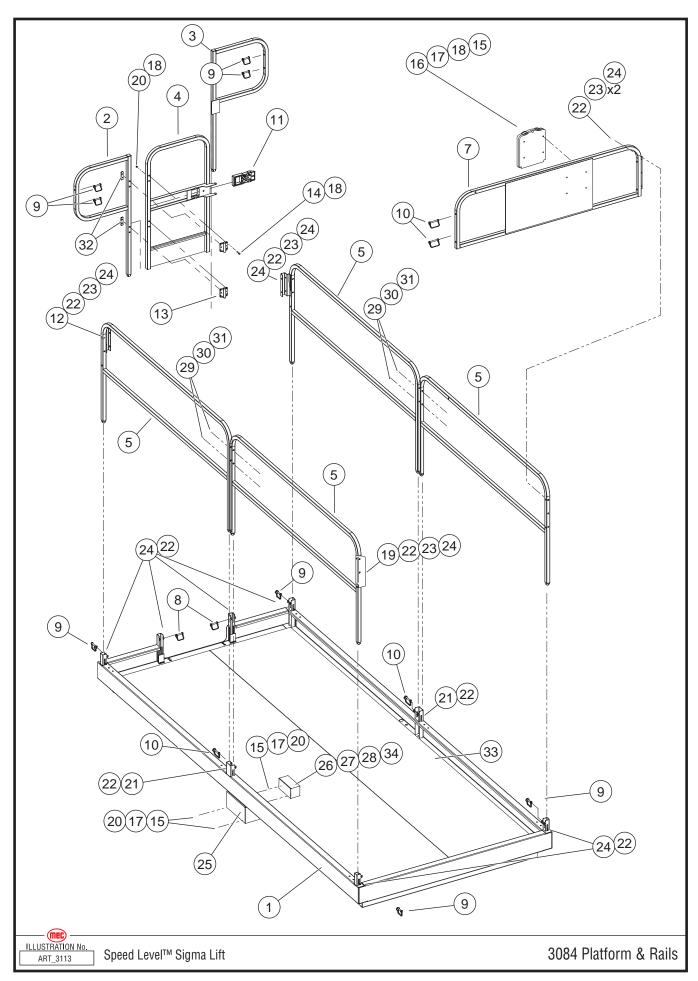


Platform & Rails, 3084

ITEM	PART NO.	QTY	DESCRIPTION
_	83080	1	Platform Assembly, 3084
1	19252	1	Platform Deck
2	19207	1	Entry Rail, RH
3	19221	1	Entry Rail, LH
4	19192	1	Gate
5	19216	4	Side Rail
6			
7	19218	1	Front Rail
8	50182	2	Clip Fastener, 3/8 X 2
9	50183	8	Clip Fastener, 3/8 X 2.25
10	50186	4	Clip Fastener, 3/8 X 3.25
11	16799	1	Gate Latch
	7408	1	Gate Spring (not shown)
	50015	1	Bolt, 8 x 50 (not shown)
	50001	2	Washer, #8 (not shown)
	50048	1	Nut, #8 Nylock (not shown)
12	19215	2	Bracket, Rear Rail
40	17960	2	Hinge - up to Serial # 11800033
13	91888	2	Hinge - Serial # 11800034 - UP
14	50125	8	Bolt, 6mm x 55
15	50047	10	Nut, 6mm
16	8909	1	Manual Enclosure
17	50028	8	Bolt, 6mm x 20
18	50000	10	6mm Washer
19	19228	1	Front Gate Lock
20	50068	4	Fender Washer, M6
21	50024	2	Bolt, M10 x 85
22	50049	17	Nut, M10 Nylock
23	50002	34	Washer, M10
24	50021	15	Bolt, M10 x 55
25	19262	1	Cover, Control Cable
26	91597	1	GFI Power Box
27	91598	1	GFI Cover Plate
28	92007	1	GFI Power Plug, Female
29	50018	4	Bolt, M8 x 80
30	50048	4	Nut, M8
31	50001	8	Washer, M8
32	19238	4	Backing Plate, Hinge
33*	19263	1	Deck Plate, Single Piece
33**	19132	1	Deck Plate, 2-Piece Deck, 30" x 163.75"
33	19144	1	Deck Plate, 2-Piece Deck, 38" x 163.75"
34	92008	1	Strain Relief Connector

^{*}Single-piece deck. **2-piece deck.



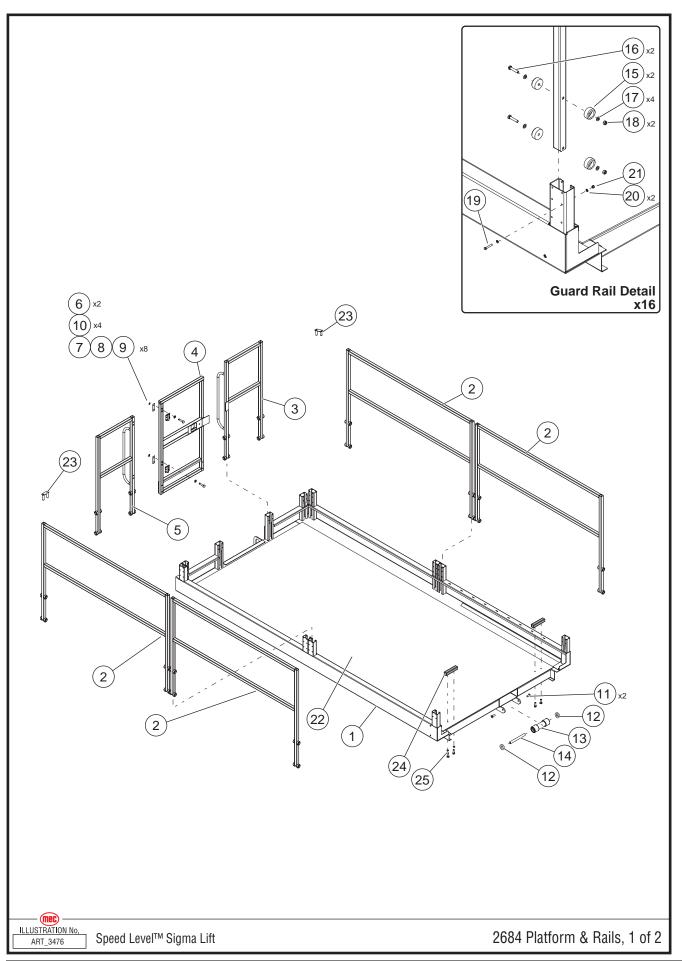


Platform & Rails, 2684

ITEM	PART NO.	QTY	DESCRIPTION	
_	83097	1	Platform Assembly, 2684	
1	19356	1	Platform Weldment	
2	19377	4	Side Rail	
3	19381	1	End Rail, Left	
4	22366	1	Gate Weldment	
	22372	1	Gate Toeboard	
	16799	1	Gate Latch (not shown)	
	7408	1	Gate Spring (not shown)	
	50015	1	Bolt, 8 x 50 (not shown)	
	50001	2	Washer, #8 (not shown)	
	50048	1	Nut, #8 Nylock (not shown)	
5	19384	1	End Rail, Right	
6	91888	2	Hinge	
7	50125	8	Bolt, 6mm x 55	
8	50000	8	Washer, M6 Flat	
9	50047	8	Nut, M6 Nylock	
10	19238	4	Backing Plate, Hinge	
11	50039	10	Screw, M12x1.75 x 30,	
12	91593	10	Bearing	
13	19399	2	Roller	
14	19398	2	Axle, Threaded	
15	19131	64	Rail Wheel	
16	50016	32	Bolt, M8 x 55	
17	50001	64	Washer, M8	
18	50048	32	Nut, M8 Nylock	
19	50283	16	Bolt, M4 x 55	
20	50284	32	Washer, M4	
21	50285	16	Nut, M4 Nylock	
22	19390	1	Platform Deck Plate	
	22459	2	Plate, Corner Cap	
23	22458	4	Pin, Corner Cap	
	50286	4	Bolt, Button Head, M12 x 50	
Items #2	Items #24 and #25 used on serial numbers 12800001 - 12800009 only			
24	22248	2	Block, Deck Extension Stop	
25	50036	4	Bolt, M10-1.5 x 50	
23	50006	4	Washer, M10 Nordloc	

... continued



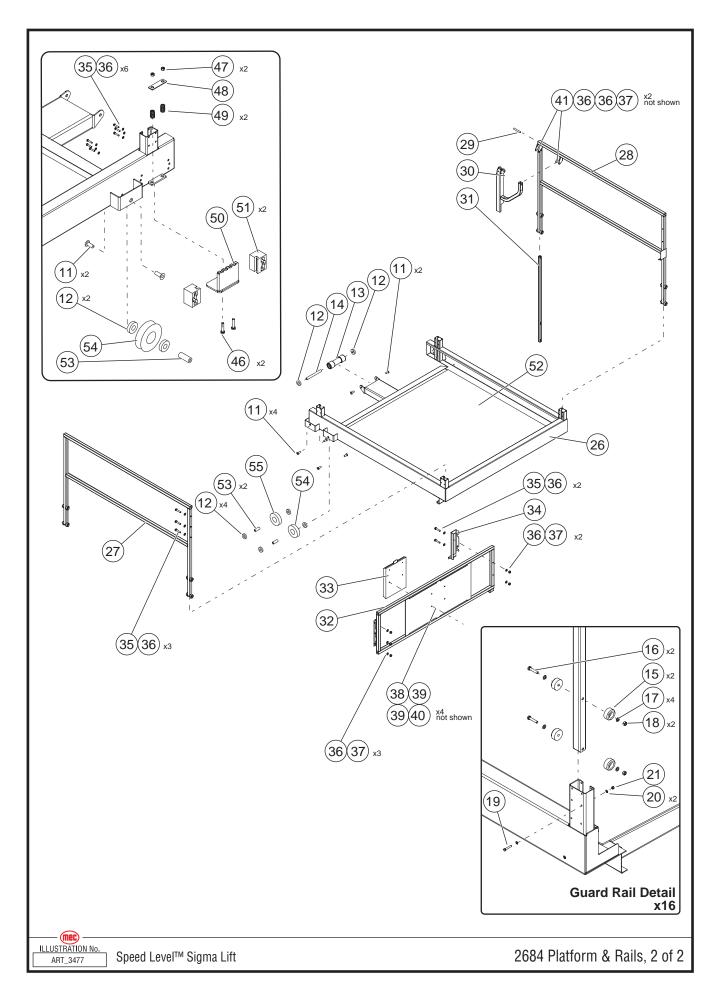

Platform & Rails, 2684 (continued)

ITEM	PART NO.	QTY	DESCRIPTION
_	83097	1	Platform Assembly, 2684
11		10	Screw, Countersink,
12	91593	10	Bearing,
13	19399	2	Roller
14	19398	2	Axle, Threaded,
15	19131	64	Rail Wheel,
16	50016	32	Bolt, M8 x 55
17	50001	64	Washer, M8
18	50048	32	Nut, M8 Nylock
19	50283	16	Bolt, M4 x 55
20	50284	32	Washer, M4
21	50285	16	Nut, M4 Nylock
26	19337	1	Platform Extension Weldment
27	19357	1	Side Rail, Deck Extension, Right Side
28	19366	1	Side Rail, Deck Extension, Left Side
29	92219	1	Spring Pin, M8 x 55
30	19367	1	Deck Extension Handle Weldment
31	19370	1	Deck Extension Bar
32	19374	1	Gate, Material Loading
33	8909	1	Manuals Case
34	19376	1	Latch, Material Loading Gate
35	50015	11	Bolt, M8 x 50
36	50001	20	Washer, M8
37	50048	7	Nut, M8 Nylock
38	50028	4	Bolt, M6 x 20
39	50000	8	Washer, M6
40	50047	4	Nut, M6
41	50287	2	Bolt, Button Head Cap Screw,M8 x 70
42			
43			
44			
45			
46	50288	2	Cap Screw, Shouldered, M10 x 60
47	50053	2	Nut, M10
48	19389	1	Plate
49	92218	2	Spring
50	19385	1	Weldment, Locking Rack
51	19388	2	Locking Track
52	19391	1	Platform Extension Deck Plate
53	16791	3	Threaded Axle
54	16793	2	V-Wheel
55	16792	1	Flat Wheel



N	Ω	rec
1.4	•	- N






SECTION C

BOOM

Contents	Page
Boom Mount and Pivot	 C-3
Lower Boom Assembly	 C-5
Upper Boom Assembly	 C-7




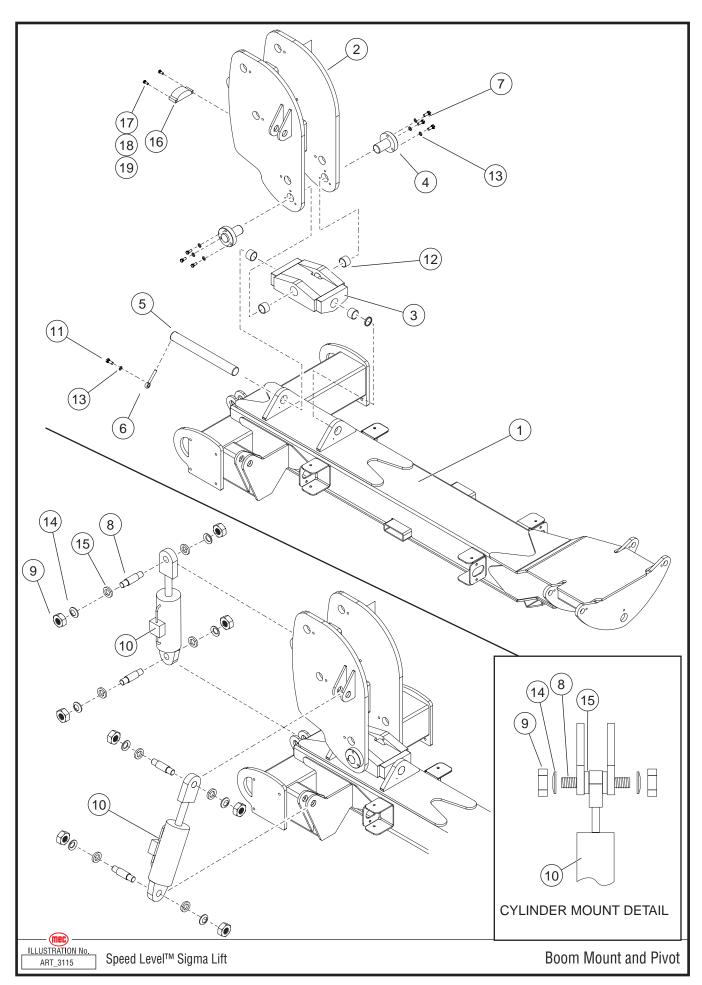

Boom Mount and Pivot

ITEM	PART NO.	QTY	DESCRIPTION
_	83081	1	Chassis Assembly
1	19020	1	Chassis Weldment
2	19031	1	Boom Mount Weldment
3	19013	1	Level Pivot Weldment
4	19124	2	Pin
5	19123	1	Pin
6	18152	1	Pin Retainer
7	50023	6	Bolt, M12 x 50
8	19122	4	Pin
9	50119	8	Nut, Nylock 1-1/4"
10	19081	2	Cylinder, Level
11	50039	1	Bolt, M12 x 30
12	92011	4	Bearing, Flange
13	50007	6	Washer, M12 Nord-Lock
14	50065	8	Flat Washer, 11/4
15	19164	8	Spacer
16	92009	1	CAN Tilt Angle Transducer, Model 151
17	50125	2	Screw, M6 x 55
18	50047	2	Nut, M6 Nylock
19	50068	2	Washer, M6 Fender
20	92040	as needed	Spacer




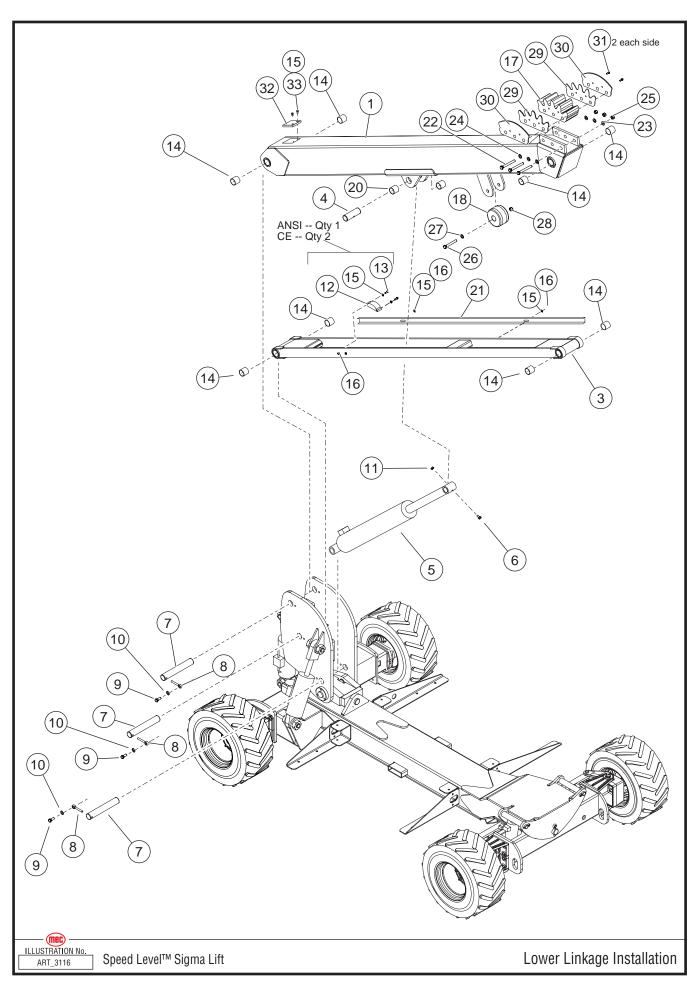

Lower Boom Assembly

ITEM	PART NO.	QTY	DESCRIPTION
	83082	1	3084 Lower Boom Assembly
	83095	1	2684 Lower Boom Assembly
4	19034	1	3084 Lower Boom Weldment
1	19327	1	2684 Lower Boom Weldment
2			
2	19049	1	3084 Lower Tension Weldment
3	19329	1	2684 Lower Tension Weldment
4	19118	1	Cylinder Mount Pin
5	19084	1	Lift Cylinder
6	50024	1	Bolt, M10.9 x 65
7	19121	3	Pin, Boom Mount
8	18152	3	Pin Retainer
9	50039	3	Bolt, M12 x 30
10	50007	3	Washer, M12 Nordlock
11	50049	1	Lock Nut, M10
12	90844	1	ANSI Specifications - EZfit Angle Transducer, Model 120
12	30044	2	CE Specifications - EZfit Angle Transducer, Model 120
13	50016	2	ANSI Specifications - Screw, M8 x 55
13	30010	4	CE Specifications - Screw, M8 x 55
14	92011	8	Flange Bearing
15	50001	10	M8 Washer
16	50048	4	ANSI Specifications - M8 Lock Nut
10		6	CE Specifications - M8 Lock Nut
17	19199	1	Gear, Pivot
18	91963	1	Wheel
19			
20	92012	2	Flange Bearing, 2.0 x 1.0
21	19158	1	3084 Cable Cover
	19436	1	2684 Cable Cover
22	50058	3	Bolt, HHCS 1"-8 x 8", GR8, ZP
23	50063	3	Washer, 1" ZP STD FLAT
24	50064	3	Washer, 1" ZP FLAT XT
25	50120	3	Nut, NNYL 1"-8
26	50059	1	Bolt, 3/4-10 x 5.5
27	50062	1	Washer, 3/4 Std
28	50118	1	Nut, 3/4-10 Jam Nylock
29	19240	2	Spacer, Lower Boom Gear Shield
30	19241	2	Guard
31	50031	4	Bolt, M8 x 25
32	19157	1	Wear Pad
33	50124	2	Cap Screw, M8 x 1.25 x 20, Button Head Allen



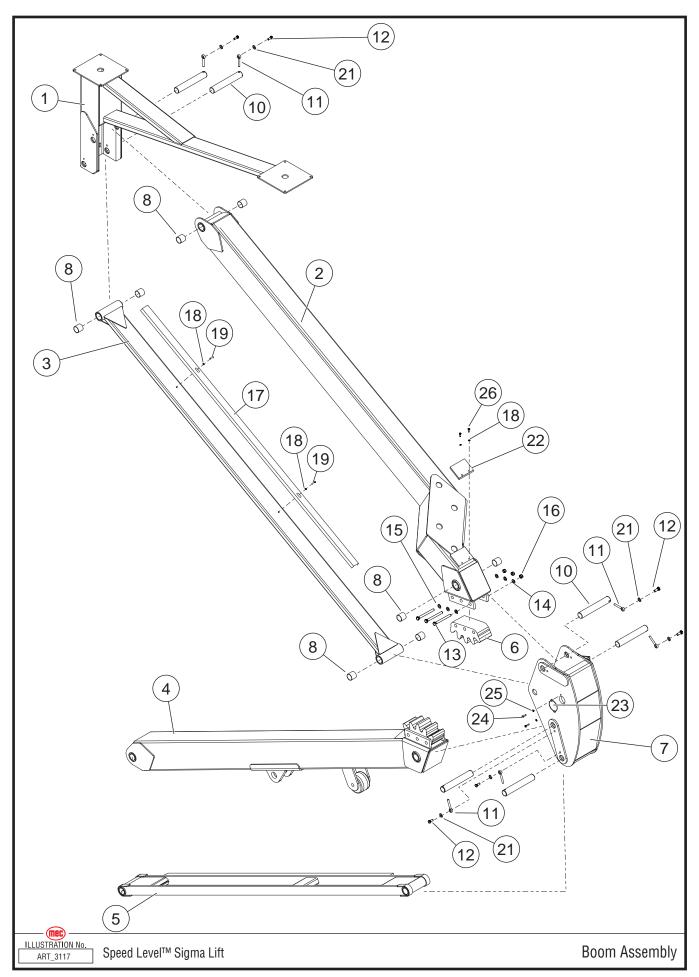

Upper Boom Assembly

ITEM	PART NO.	QTY	DESCRIPTION
_	83083	1	3084 Upper Boom Assembly
	83096	1	2684 Upper Boom Assembly
1	19068	1	Platform Pivot Weldment
2	19073	1	3084 Upper Boom Weldment
	19332	1	2684 Upper Boom Weldment
3	19058	1	3084 Upper Tension Weldment
J	19334	1	2684 Upper Tension Weldment
4	REF	1	Lower Boom Weldment (see "Lower Boom Assembly" on Page C-5)
5	REF	1	Lower Tension Weldment (see "Lower Boom Assembly" on Page C-5)
6	19199	1	Gear, Pivot
7	19055	1	Boom Pivot Weldment
8	92011	8	Flange Bearing
9	-		
10	19121	6	Boom Mount Pin
11	18152	6	Pin Retainer
12	50046	6	Bolt, M12 x 35
13	50058	3	Bolt, HHCS 1"-8 x 8", GR8, ZP
14	50063	3	Washer, 1" ZP STD FLAT
15	50064	3	Washer, 1" ZP FLAT XT
16	50120	3	Nut, NNYL 1"-8
17	19158	1	3084 Cable Cover
	19436	1	2684 Cable Cover
18	50001	4	M8 Washer Standard
19	50048	2	M8 Lock Nut
_	1	_	_
21	50007	6	Split Lock Washer, M12
22	19157	1	Wear Pad
23	19183	1	Grease Port Cover
24	50037	2	Bolt, M12 x 20
25	50003	2	Washer, M12
26	50124	2	Bolt



NOTES:






SECTION D

AXLES

Contents	Page
Front Axle Assembly	
Axle Installation, Front	
Axle Installation, Rear	
Wheel Motor, Rear	
Wheel Motor, Front	




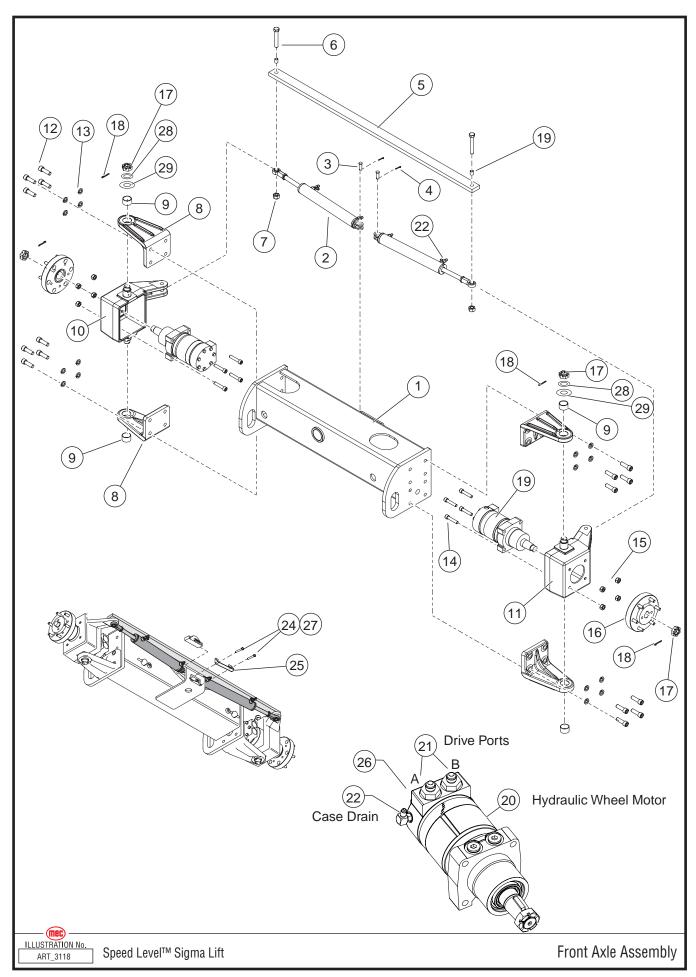

Front Axle Assembly

ITEM	PART NO.	QTY	DESCRIPTION
_	83084	1	Front Axle Assembly
1	19008	1	Front Axle Weldment
2	91019	2	Cylinder, Steering
	90990	_	Seal Kit, Steer Cylinder (not shown)
3	50172	2	Pin, Clevis, ½ DIA. X 1 3/8" LG
4	50178	2	Pin, Cotter, .12 DIA. X 1" LG
5	19079	1	Rod, Tie Steering
6	50154	2	Screw, 5/8" - 11. 4" LG, GR 5
7	HDW6633	2	Nut, Lock, 5/8" - 11, GR 5
8	40334	4	Mount, Motor W/Bearings
9	9307	4	Bearing, 1.50 x 1.0 DIA
10	40308	1	Mount, Wheel Motor, RH, FRONT
11	40464	1	Mount, Wheel Motor, LH, FRONT
12	50012	16	Screw, M16 X 50, GR 12, Socket Head
13	50008	16	Lock Washer, M16
14	50072	8	Screw, ½"-13, 2.50" LG, GR 8, Socket Head
15	HDW8457	8	Nut, ½"-13, GR8
16	10709	2	Hub
17	HDW8568	6	Nut, 1 1/8" - 18
18	50177	6	Pin, Cotter, .156 DIA. X 1.75" LG
19	7292	2	Bearing
20	7300P	2	Motor, Wheel, Hyd.
21	50659	4	Fitting, MB-MJ-12-8
22	50665	4	Fitting, MB-MJ90-4-4
23	92010	1	CAN Tilt Angle Transducer, (152)
24	50017	2	Screw, M8 x 60
25	19197	1	Guard
26	50645	2	Fitting, MJ-FJX-8-8
27	50048	2	Locknut, M8
28	20312	8	Washer Bearing
29	20311	4	Washer, 2.550 x 1.560




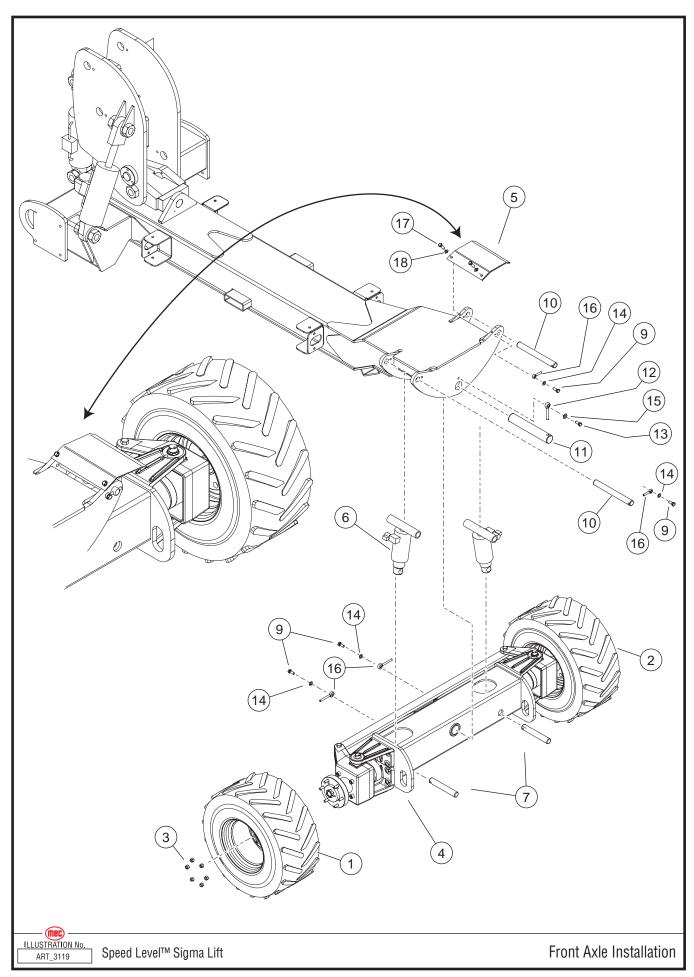

Axle Installation, Front

ITEM	PART NO.	QTY	DESCRIPTION
	91166	1	Wheel/tire Assy, LH - 10 PLY - PNEUMATIC (ANSI standard)
	91168	1	Wheel/tire Assy, LH - 10 PLY - FOAM (ANSI option) (CE standard)
1	91578	1	Wheel/tire Assy, LH - Non-Marking PNEUMATIC (ANSI option)
	91580	1	Wheel/tire Assy, LH - Non-Marking FOAM (ANSI, CE option)
	91581	1	Wheel/tire Assy, LH - Turf PNEUMATIC (ANSI option)
	91165	1	Wheel/tire Assy, RH - 10 PLY - PNEUMATIC (ANSI standard)
	91167	1	Wheel/tire Assy, RH - 10 PLY - FOAM (ANSI option) (CE standard)
2	91577	1	Wheel/tire Assy, RH - Non-Marking PNEUMATIC (ANSI option)
	91579		Wheel/tire Assy, RH - Non-Marking FOAM (ANSI, CE option)
	91581	1	Wheel/tire Assy, RH - Turf PNEUMATIC (ANSI option)
incl	91180	_	Wheel (service)
incl	91181	_	Tire 26x12.00-380 (service)
3	50165	12	Nut, Lug, ½" - 20, GR 5
4	REF		Front Axle Assembly
5	19162	2	Cover
6	19087	2	Cylinder, Axle Lock
7	18074	2	Pin, Ø1.25"
8			
9	50033	4	Bolt, M10 x 25
10	19119	2	Pin, Ø1.25
11	19120	1	Pin, Ø7.0
12	18152	1	Pin Retainer, 0.5 x 3.80
13	50039	1	Bolt, M12 x 30
14	50006	4	Lock Washer, M12
15	50007	1	Lock Washer, M10
16	18151	4	Pin Retainer, .375 x 3.75
17	50027	4	Bolt, M6 x 10
18	50068	4	Washer, M6 Flat




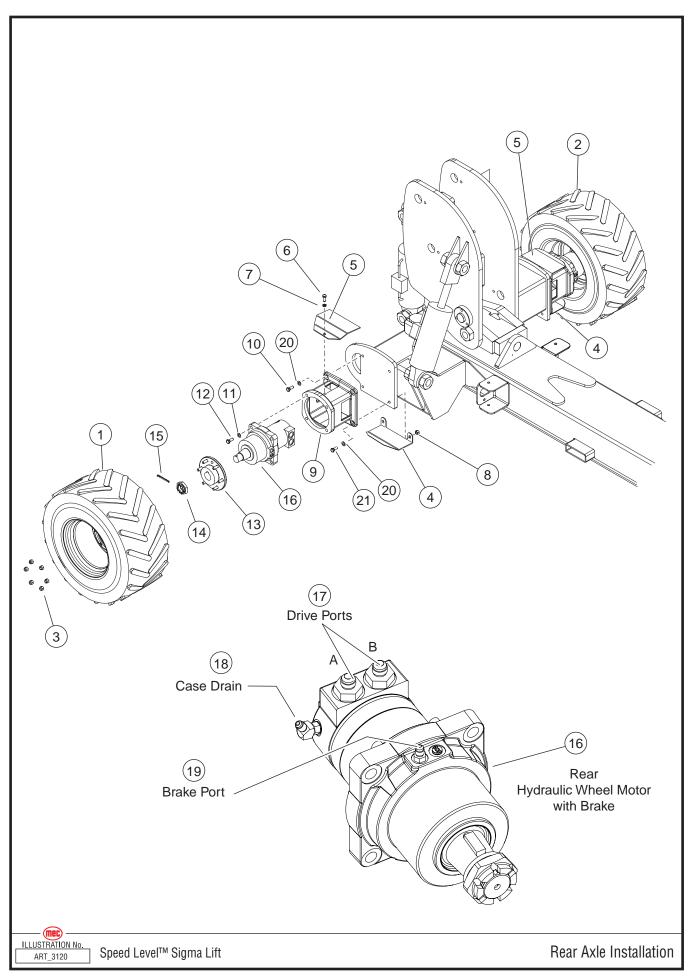

Axle Installation, Rear

ITEM	PART NO.	QTY	DESCRIPTION
	91166	1	Wheel/tire Assy, LH - 10 PLY - PNEUMATIC (ANSI standard)
	91168	1	Wheel/tire Assy, LH - 10 PLY - FOAM (ANSI option) (CE standard)
1	91578	1	Wheel/tire Assy, LH - Non-Marking PNEUMATIC (ANSI option)
	91580	1	Wheel/tire Assy, LH - Non-Marking FOAM (ANSI, CE option)
	91581	1	Wheel/tire Assy, LH - Turf PNEUMATIC (ANSI option)
	91165	1	Wheel/tire Assy, RH - 10 PLY - PNEUMATIC (ANSI standard)
	91167	1	Wheel/tire Assy, RH - 10 PLY - FOAM (ANSI option) (CE standard)
2	91577	1	Wheel/tire Assy, RH - Non-Marking PNEUMATIC (ANSI option)
	91579		Wheel/tire Assy, RH - Non-Marking FOAM (ANSI, CE option)
	91581	1	Wheel/tire Assy, RH - Turf PNEUMATIC (ANSI option)
incl	91180	_	Wheel (service)
incl	91181	_	Tire 26x12.00-380 (service)
3	50165	12	Nut, Lug, ½" - 20, GR 5
4	16349	2	Bottom Hose Cover
5	19168	2	Top Hose Cover
6	50010	2	Screw, M8 x 25
7	50001	2	Washer, Lock, M8
8	50051	4	Nut, M16
9	40258	2	Mount, Motor, Rear Axle, Machined
10	50043	8	Bolt, M16 x 40
11	50253	8	Washer, Lock, 5/8
12	50151	8	Screw, 5/8"-11, 2.25" LG, GR 5
13	14773	2	Hub
14	HDW9037	_	Nut, Castle, M42 X 3 (service)
15	50170	2	Pin, Cotter, .250 DIA. X 3" LG
16	91319	2	Wheel Motor, Hyd W/brake
17	50659	4	Fitting, MB-MJ-12-8
18	50646	2	Fitting, MB-MJL-4-4
19	50647	2	Fitting, MB-MJ90L-4-4
20	50008	8	Washer, Lock, M16
21	50044	8	Bolt, M16 x 60 G10.9




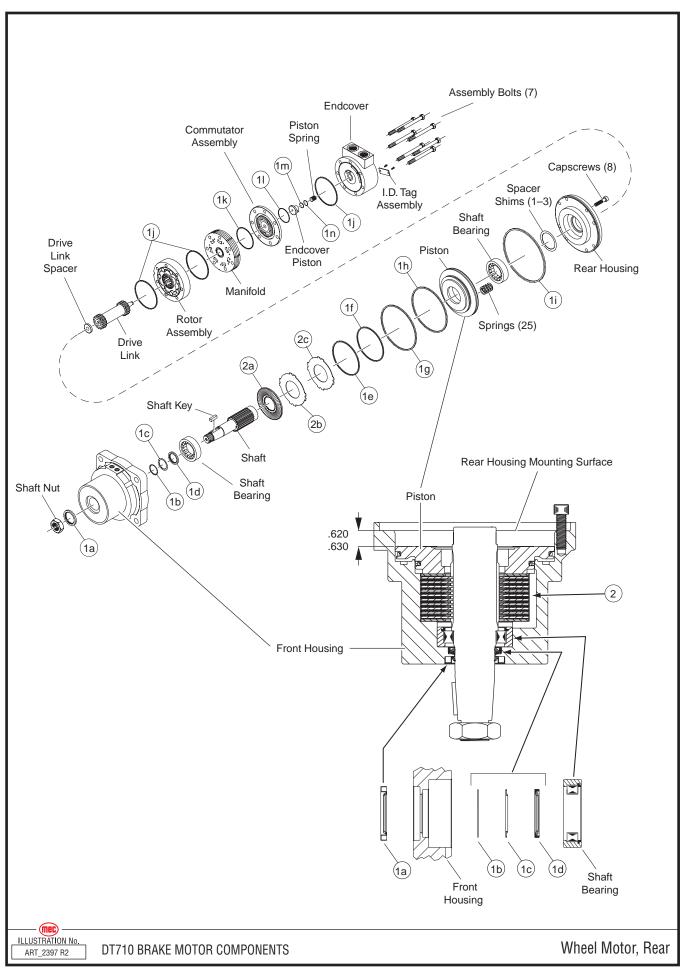

Wheel Motor, Rear

ITEM	PART NO.	QTY	DESCRIPTION
_	91319	-	Wheel Motor W/brake
1	9781	_	Seal Kit
1a	incl	1	Dust Seal
1b	incl	1	Metal Backup Shim
1c	incl	1	Backup Seal
1d	incl	1	Shaft Seal
1e	incl	1	Small Piston O-ring Seal
1f	incl	1	Small Piston Seal
1g	incl	1	Large Piston O-ring Seal
1h	incl	1	Large Piston Seal
1i	incl	1	O-ring Seal
1j	incl	3	Body Seal
1k	incl	1	Manifold Seal
11	incl	1	Commutator Seal
1m	incl	1	O-ring Seal
1n	incl	1	Backup Seal
_	_	_	-
2	91138	_	Disk Kit
2a	incl	10	Friction Disk
2b	incl	9	Disk Stamping
2c	incl	2	Thick Disk Stamping



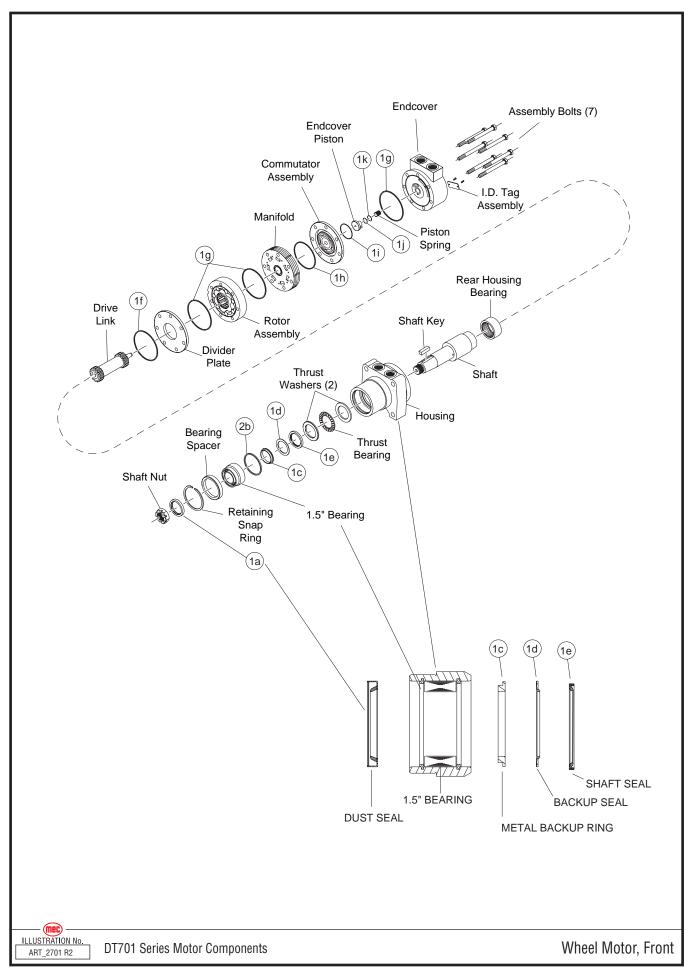

Wheel Motor, Front

ITEM	PART NO.	QTY	DESCRIPTION
_	7300P	_	Motor Wheel Hyd Painted
1	90592	_	Seal Kit
1a	incl	1	Dust Seal
1b	incl	1	High Pressure Seal
1c	incl	1	Metal Backup Shim
1d	incl	1	Teflon Back Up Seal
1e	incl	1	Shaft Seal
1f	incl	1	Housing Seal
1g	incl	3	Body Seals
1h	incl	1	Manifold Seal
1i	incl	1	Commutator Seal
1j	incl	1	O-ring Seal
1k	incl	1	Teflon Backup Seal



NOTES:






SECTION E

HYDRAULICS

Cont	ENTS	Page
	Main Manifold Assembly, Electric Models	E-3
	Main Manifold Assembly, Electric Models (continued)	
	Main Manifold Assembly, RT Models	
	Main Manifold Assembly, RT Models (continued)	
	Leveling Manifold Assembly	
	Hydraulic Hose Routing, RT Models: Steer, Brake, Case Drain	
	Hydraulic Hose Routing, RT Models: Lift, Pump	
	Hydraulic Hose Routing, RT Models: Platform Level, Axle Float	
	Hydraulic Hose Routing, RT Models: Drive Motors	
	Hydraulic Hose Routing, ES Models: Steer, Brake, Case Drain	
	Hydraulic Hose Routing, ES Models: Lift, Pump	
	Hydraulic Hose Routing, ES Models: Platform Level, Axle Float	
	Hydraulic Hose Routing, ES Models: Drive Motors	
	Lift Cylinder	
	Steering Cylinder	
	Level Cylinder	
	Axle Lock Cylinder	F-35



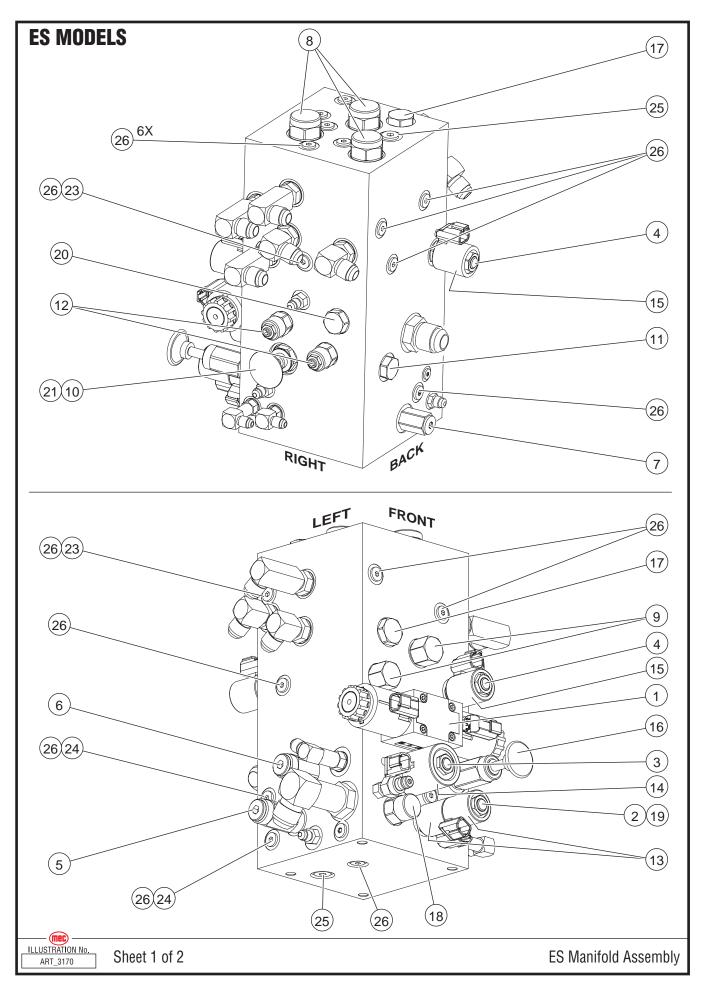


Main Manifold Assembly, Electric Models

ITEM	PART NO.	QTY	DESCRIPTION
_	83072	_	Manifold Assembly, ES Models
	91743		Manifold w/ valves, no fittings, ES Models
1	91144	1	Valve, Drive, 4 way 3 Position
2	91146	1	Valve, Steer, 4 Way 3 Position
3	91145	1	Valve, Lift Spool, 3 Way
4	91147	2	Valve, Series Parallel Spool, 4 way 3 position
5	91150	1	Valve, Relief, Steer
6	91149	1	Valve, Relief, Lift
7	91476	1	Valve, Relief,
8	91151	3	Valve, Piloted Spool 4 way 3 position
9	91152	2	Valve, Piloted Poppet
10	91012	1	Valve, Manual — Pull
11	91153	1	Valve, Load Shuttle Check
12	91350	2	Valve, Counterbalance
13	91141	2	Coil, Series 8, 12V
14	91142	1	Coil, Series 10, 12V
15	91141	2	Coil, Series
16	91015	1	Hand Pump, Brake Release
17	91351	2	Flow Divider / Combiner
18	91352	1	Pressure Compensator
19	91141	1	Coil
20	REF	1	Cavity Plug
21	91354	1	Orifice Disc
22	91355	1	Orifice Plug, Steer
23	91356	2	Orifice Plug, Flow Divider Bleed
24	REF	2	Orifice Plug
25	7484	2	Port Plug M 0.38" O-Ring, RBG-6
26	HDW7314	19	Port Plug M ¼", O-Ring, RBG-4

... continued




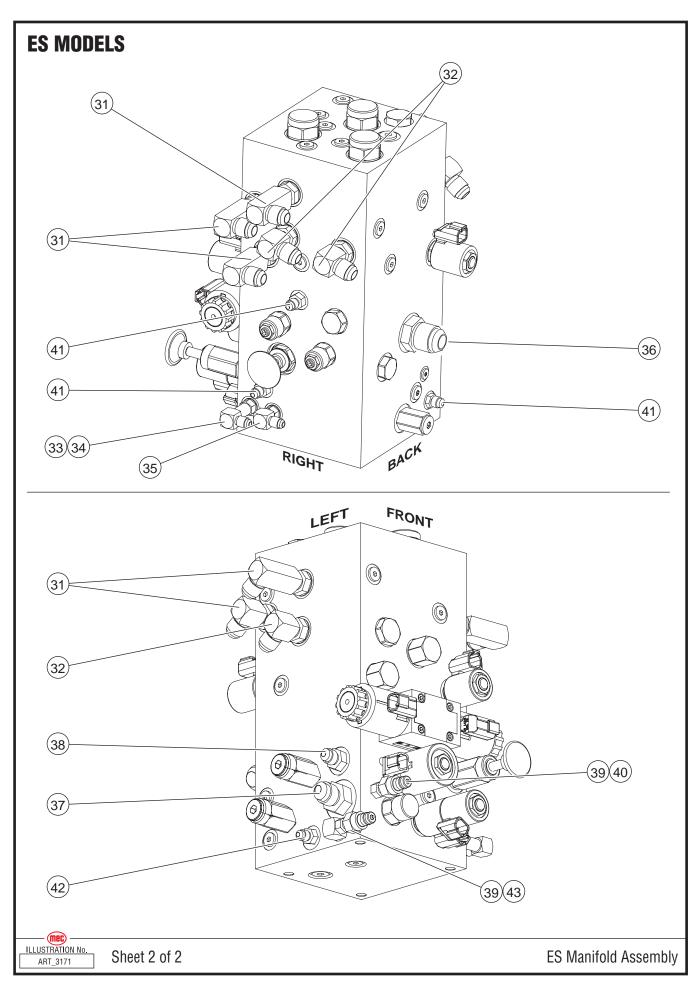

Main Manifold Assembly, Electric Models (continued)

ITEM	PART NO.	QTY	DESCRIPTION
31	50796	4	Elbow, 90°, Male, ½", O-Ring, Male, ½", MB-MJ90LL-8-8
32	50792	4	Elbow, 90°, Male, ½", O-Ring, Male, ½", MB-MJ90-8-8
33	50770	1	Fitting, Orifice 1/16" (Electric only)
34	50794	1	ELBOW, 90°, Male ¼" O-ring, Male ¼", MB-MJ90LL-4-4
35	50647	1	ELBOW, 90°, Male ¼" O-ring, Male ¼", MB-MJ90L-4-4
36	50763	1	Fitting, Male ¾" O-ring, Male ¾", MB-MJ-12-12
37	50659	1	Fitting, Male ¾" O-ring, Male ¾",MB-MJ-12-8
38	50799	1	Fitting, Male .37 JIC, Male .37 O-RING, MB-MJL-8-6
39	HDW7971	2	Fitting, Male Disconnect, 1/4" NPT
40	50950	1	Adapter Male 1/4" O-ring Male 1/4" NTP, MP-MB-4-4
41	50769	3	Adapter, Male ¼", O-ring, Male ¼" 37° MB-MJ-4-4
42	50775	1	Adapter, Male ¼", O-ring, Male ¼" MB-MJ-6-4
43	50952	1	Elbow, 90°, MP-MB90-4-4
44	50960	2	Port Plug, MB-06-Plug



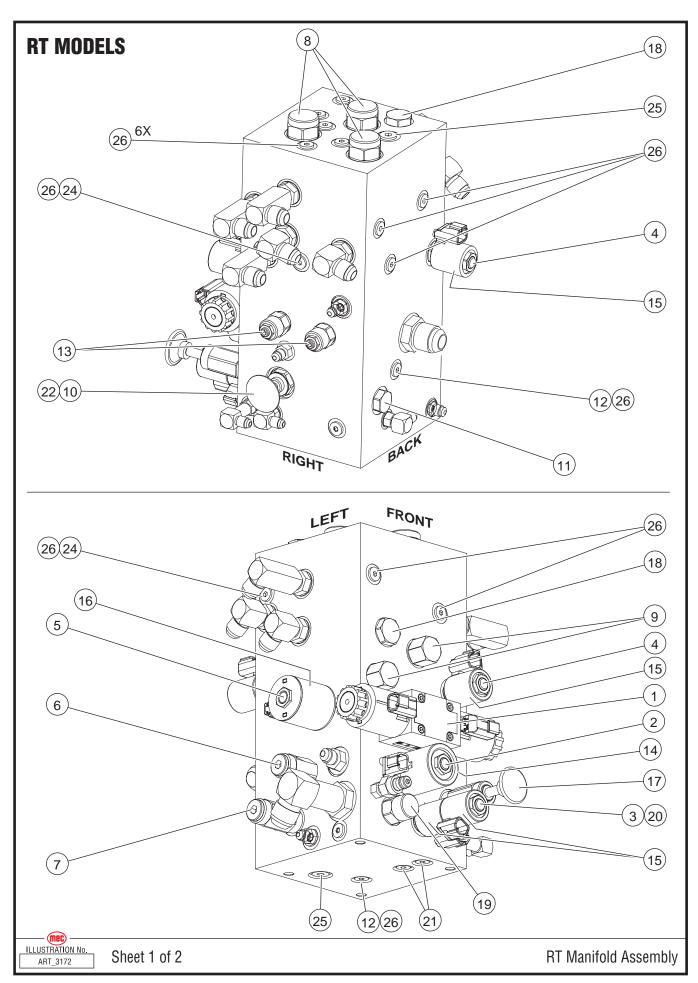


Main Manifold Assembly, RT Models

ITEM	PART NO.	QTY	DESCRIPTION
_	83071	_	Manifold Assembly, RT Models
	91140		Manifold w/ valves, no fittings, RT Models
1	91144	1	Valve, Drive, 4 way 3 Position
2	91145	1	Valve, Lift Spool, 3 Way
3	91146	1	Valve, Steer, 4 Way 3 Position
4	91147	2	Valve, Series Parallel Spool, 4 way 3 position
5	91148	1	Valve, Proportional
6	91149	1	Valve, Relief, Lift
7	91150	1	Valve, Relief, Steer
8	91151	3	Valve, Piloted Spool 4 way 3 position
9	91152	2	Valve, Piloted Poppet
10	91012	1	Valve, Manual — Pull
11	91153	1	Valve, Load Shuttle Check
12	91154	2	Valve, Load Shuttle Check
13	91350	2	Valve, Counterbalance
14	91142	1	Coil, Series 10, 12V
15	91142	1	Coil, Series 10, 12V
16	91142	1	Coil, Series 10, 12V
17	91015	1	Hand Pump, Brake Release
18	91351	2	Flow Divider / Combiner
19	91352	1	Pressure Compensator
20	91141	2	Coil, Series 8, 12V
21	91353	2	Valve, Check
22	91354	1	Orifice Disc
23			
24	91356	2	Orifice Plug, Flow Divider Bleed
25	7484	2	Port Plug M 0.38" O-Ring, RBG-6
26	HDW7314	20	Port Plug M 1/4", O-Ring, RBG-4

... continued




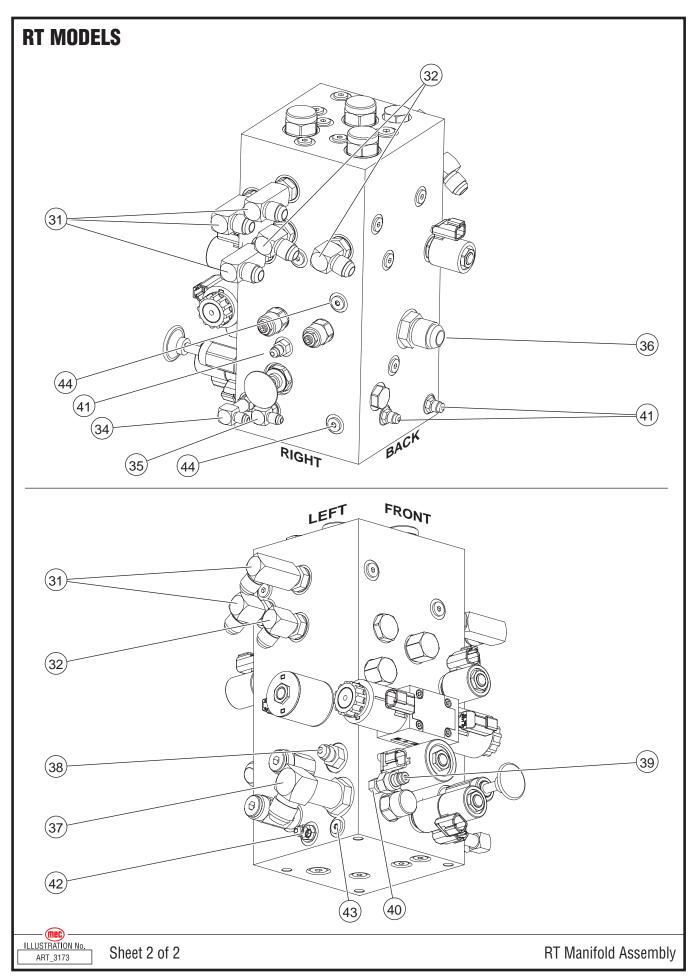

Main Manifold Assembly, RT Models (continued)

ITEM	PART NO.	QTY	DESCRIPTION
31	50796	4	Elbow, 90°, Male, ½", O-Ring, Male, ½", MB-MJ90LL-8-8
32	50792	4	Elbow, 90°, Male, ½", O-Ring, Male, ½", MB-MJ90-8-8
33			
34	50794	1	ELBOW, 90°, Male ¼" O-ring, Male ¼", MB-MJ90LL-4-4
35	50647	1	ELBOW, 90°, Male ¼" O-ring, Male ¼", MB-MJ90L-4-4
36	50763	1	ELBOW, 90°, Male ¾" O-ring, Male ¾", MB-MJ-12-12
37	50821	1	ELBOW, 90°, Male ¾" O-ring, Male ¾",MB-MJ90LL-12-12
38	50658	1	Fitting, Male .37 JIC, Male .37 O-RING, MB-MJL-6-6
39	HDW7971	1	Fitting, Male Disconnect, 1/4" NPT
40	50950	1	Adapter Male 1/4" O-ring Male 1/4" NTP, MP-MB-4-4
41	50769	3	Adapter, Male ¼", O-ring, Male ¼" 37° MB-MJ-4-4
42	50775	1	Adapter, Male ¼", O-ring, Male ¼" MB-MJ-6-4
43	50961	1	Port Plug, MB-04-Plug
44	50960	2	Port Plug, MB-06-Plug




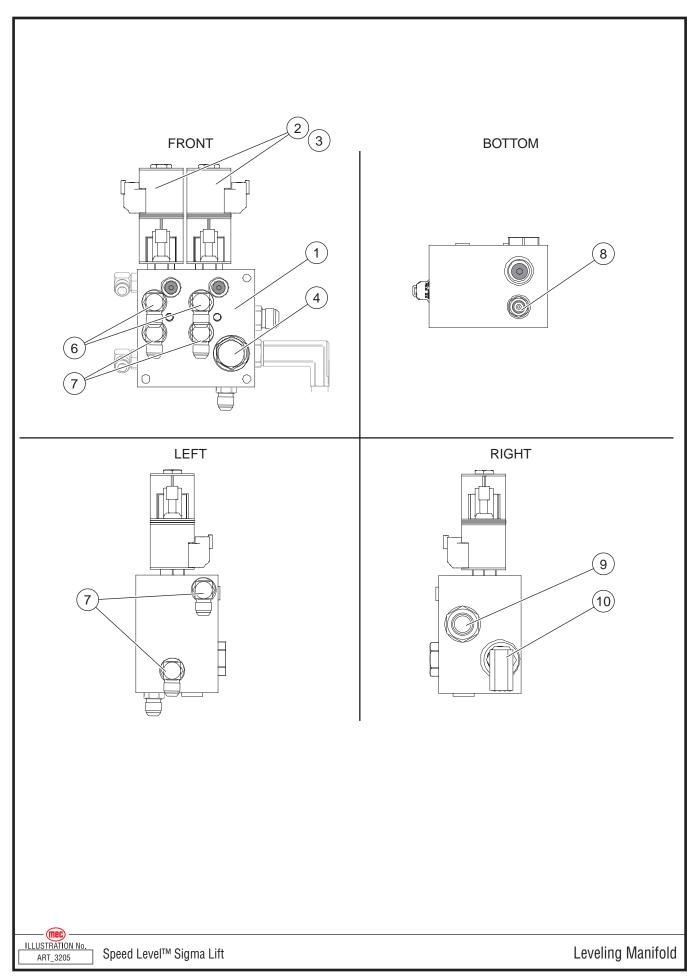

Leveling Manifold Assembly

ITEM	PART NO.	QTY	DESCRIPTION
	83093	1	Leveling Manifold Assembly w/ Fittings
1	19300	1	Leveling Manifold Assembly w/o Fittings
2	92123	2	Valve
3	91143	2	Coil
4	91473	1	Check Valve
5			
6	50661	2	Fitting, MB-MJ-90LL-6-4 (MB-MJ-90-4-4
7	50660	4	Fitting, MB-MJ-90-6-4
8	50775	1	MB-MJ-6-4
9	50763	1	MB-MJ-12-12
10	50821	1	MB-MJ-90LL-12-12




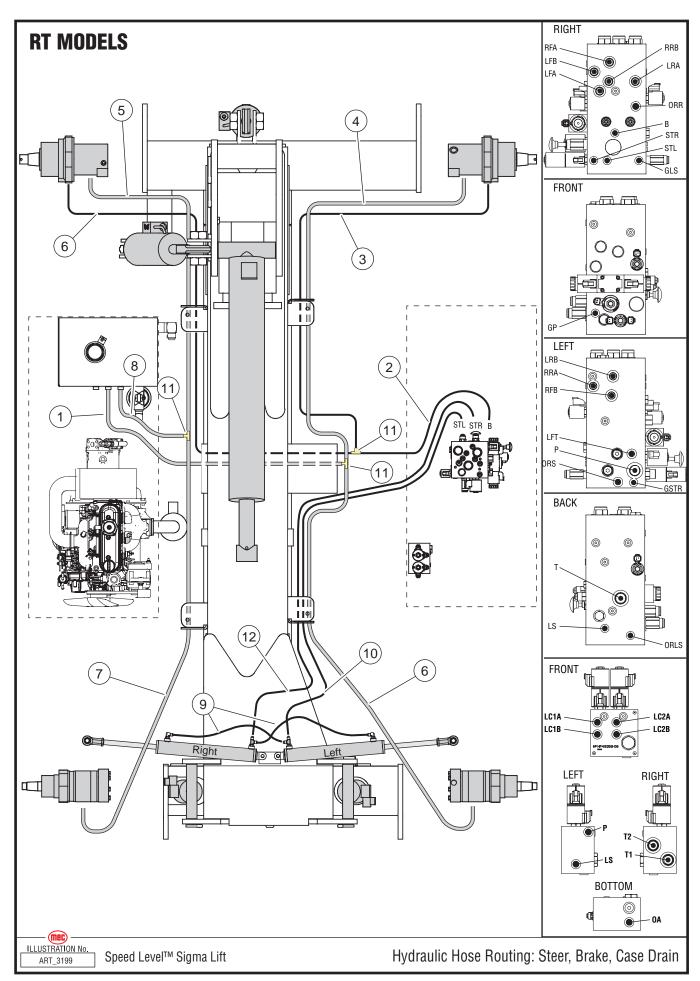

Hydraulic Hose Routing, RT Models: Steer, Brake, Case Drain

ITEM	PART NO.	QTY	DESCRIPTION
1	19340	1	Hose Assy, 1/4" x 65", 4G4FJX-4G4FJX
2	19358	1	Hose Assy, 1/4" x 15", 4G4FJX-4G4FJX90S
3	19359	1	Hose Assy, 1/4" x 86", 4G4FJX-4G4FJX90S
4	19361	1	Hose Assy, 1/4" x 73", 4G4FJX-4G4FJX90S
5	19362	1	Hose Assy, 1/4" x 52", 4G4FJX-4G4FJX90S
6	19363	2	Hose Assy, 1/4" x 89", 4G4FJX-4G4FJX
7	19364	1	Hose Assy, 1/4" x 77", 4G4FJX-4G4FJX
8	19365	1	Hose Assy, 1/4" x 38", 4G4FJX-4G4FJX
9	90316	2	Hose Assy, 1/4" x 21", 4G4FJX-4G4FJX
10	19364	1	Hose, Lt Steer Cyl, 1/4" x 77", 4G4FJX-4G4FJX
11	50927	3	Tee, MJT-04
12	19359	1	Hose, Rt Steer Cyl, 1/4" x 86", 4G4FJX-4G4FJX90S




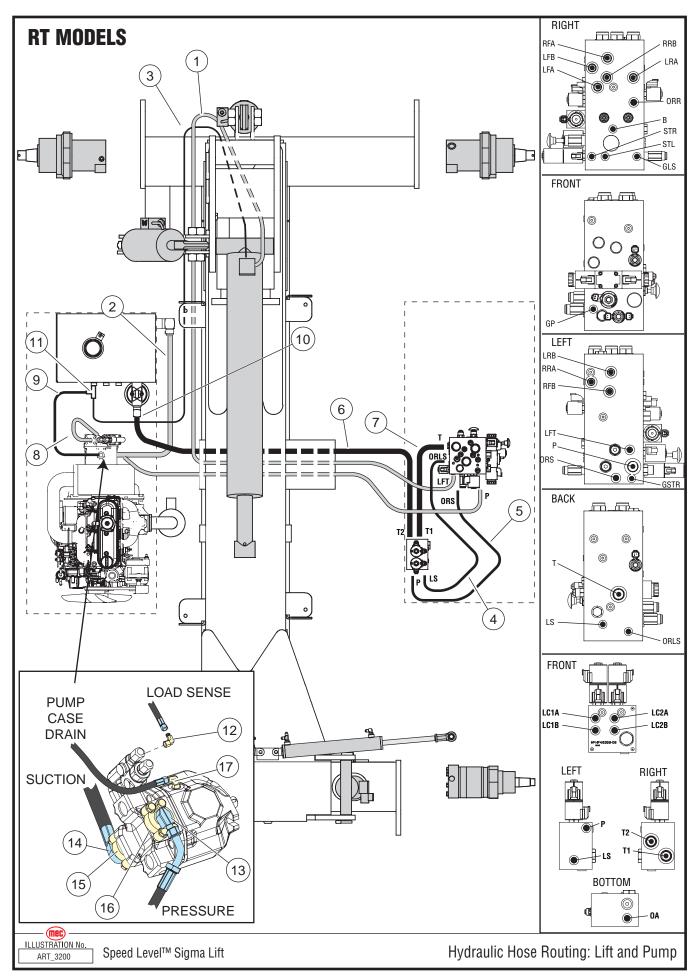

Hydraulic Hose Routing, RT Models: Lift, Pump

ITEM	PART NO.	QTY	DESCRIPTION
1	19341	1	Hose Assy, 3/8" x 132", 6G6FJX90S-6G6FJX
2	91265	1	Hose Assy, 1" x 22", 16G16FJX-16G16FJX
3	19342	1	Hose Assy, 3/8" x 118", 6G6FJX-6G6FJX
4	19369	1	Hose Assy, 1/4" x 28", 4G4FJX-4G4FJX45
5	19370	1	Hose Assy, 1/4" x 33", 4G4FJX-4G4FJX90S
6	19343	1	Hose Assy, 3/4" x 90", 12G12FJX-12G12FJX90S
7	19347	1	Hose Assy, 3/4" x 21", 12G12FJX-12G12FJX90S
8	91423	1	Hose Assy, 3/4" X 82", 12M3K-12FJX-12FJX45
9	90276	1	Hose Assy, 1/4" X 24", 4G1-4FJX-6FJX-24
10	50916	2	Fitting, MP-MJ 90
11	50892	1	Tee, MJ-FJX-MJT-4
12	50665	1	Fitting, MB-MJ-90-4-4
13	91163	1	Adapter ¾" Flange, Male 1" JIC 90
14	HDW91176	1	Adapter 1" Flange, Male 1" JIC
15	91161	1	Flange Kit #16
16	91162	1	Flange Kit #12
17	50660	1	Fitting, MB-MJ-90-6-4




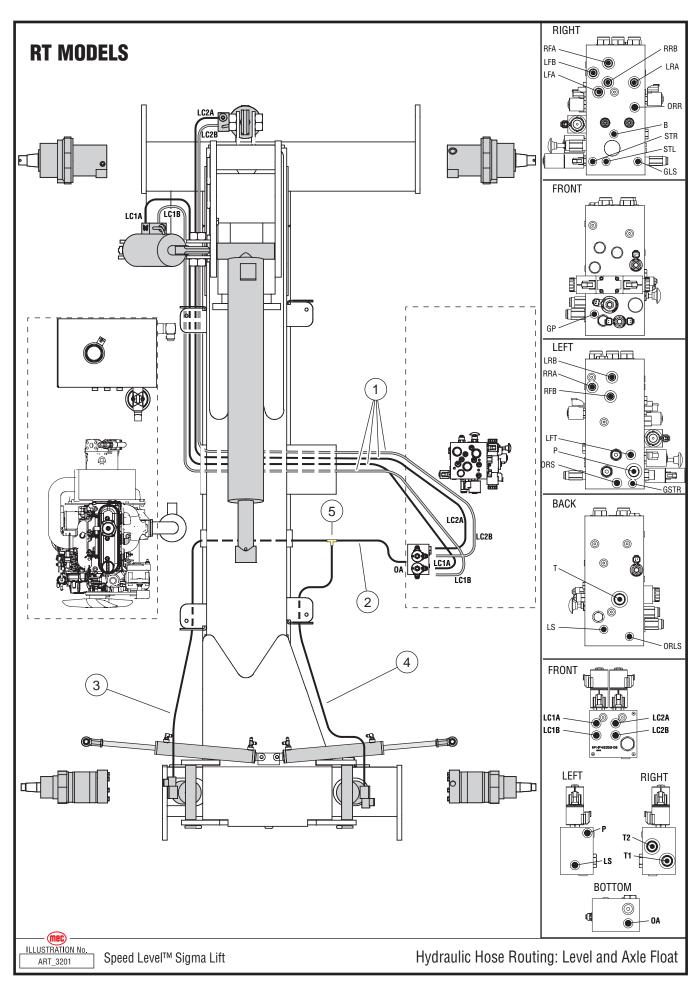

Hydraulic Hose Routing, RT Models: Platform Level, Axle Float

ITEM	PART NO.	QTY	DESCRIPTION
1	19349	4	Hose Assy, 1/4" x 120", 4G4FJX-4G4FJX
2	90316	1	Hose Assy, 1/4" x 21", 4G4FJX-4G4FJX
3	19361	1	Hose Assy, 1/4" x 73", 4G4FJX-4G4FJX90S
4	19340	1	Hose Assy, 1/4" x 65", 4G4FJX-4G4FJX
5	50927	1	Tee, MJT-4




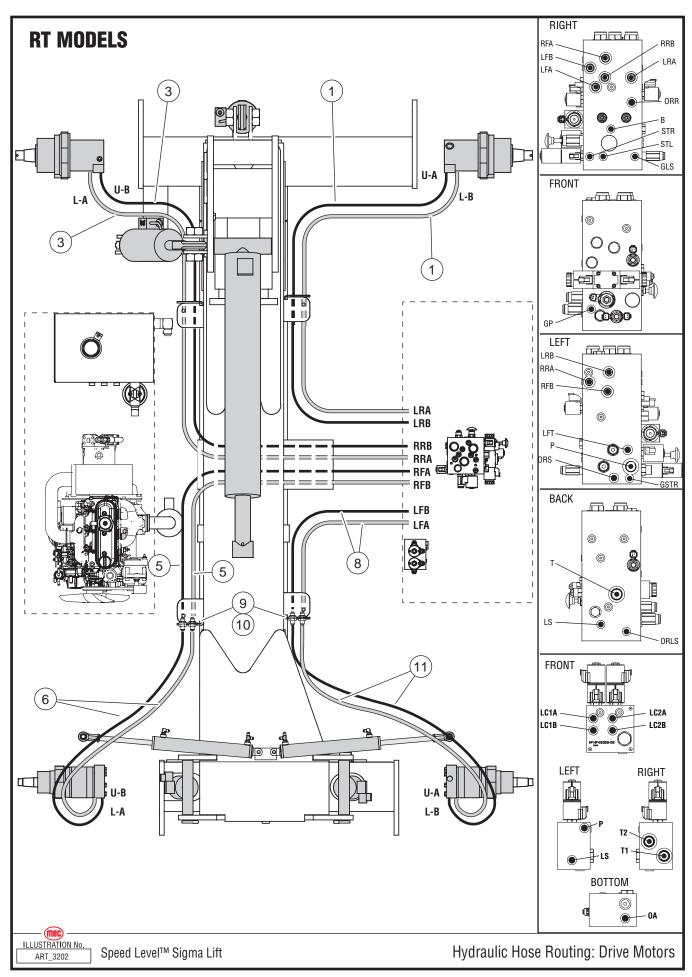

Hydraulic Hose Routing, RT Models: Drive Motors

ITEM	PART NO.	QTY	DESCRIPTION
1	19355	2	Hose Assy, 1/2" x 49", 8M3K-8FJX-8FJX45
2			
3	19357	2	Hose Assy, 1/2" x 102", 8M3K-8FJX-8FJX45
4			
5	19353	2	Hose Assy, 1/2" x 61", 8M3K-8FJX-8FJX
6	19352	2	Hose Assy, 1/2" x 37", 8M3K-8FJX-8FJX90S
7			
8	19354	2	Hose Assy, 1/2" x 44", 8M3K-8FJX-8FJX
9	50904	4	Adapter, Male 1/2" JIC-1/2" JIC Bulkhead MJ-MJH-8-8
10	91193	4	Jamnut, 3/4-16
11	19350	2	Hose Assy, 58"




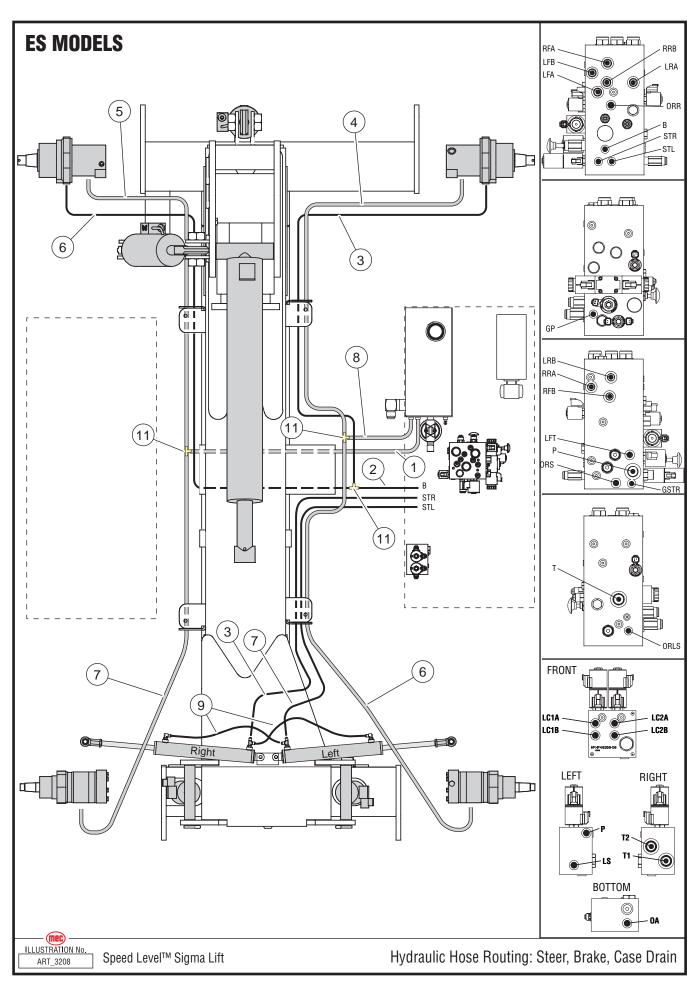

Hydraulic Hose Routing, ES Models: Steer, Brake, Case Drain

ITEM	PART NO.	QTY	DESCRIPTION
1	19340	1	Hose Assy, 1/4" x 65", 4G4FJX-4G4FJX
2	19358	1	Hose Assy, 1/4" x 15", 4G4FJX-4G4FJX90S
3	19359	2	Hose Assy, 1/4" x 86", 4G4FJX-4G4FJX90S
4	19361	1	Hose Assy, 1/4" x 73", 4G4FJX-4G4FJX90S
5	19362	1	Hose Assy, 1/4" x 52", 4G4FJX-4G4FJX90S
6	19363	2	Hose Assy, 1/4" x 89", 4G4FJX-4G4FJX
7	19364	1	Hose Assy, 1/4" x 77", 4G4FJX-4G4FJX
8	19365	1	Hose Assy, 1/4" x 38", 4G4FJX-4G4FJX
9	90316	2	Hose Assy, 1/4" x 21", 4G4FJX-4G4FJX
10			
11	50927	3	Tee, MJT-04




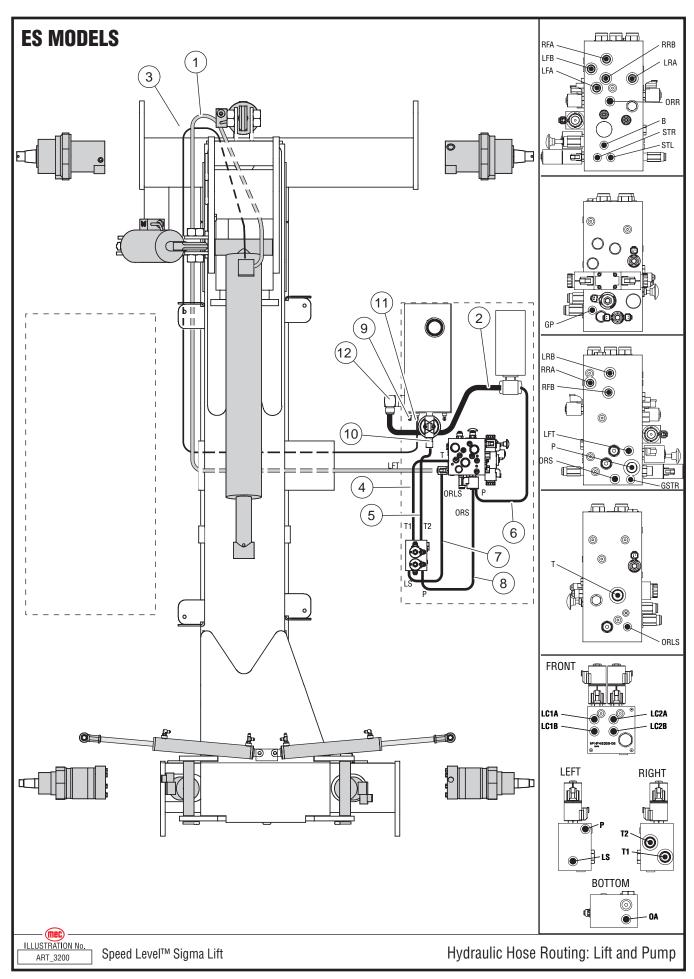

Hydraulic Hose Routing, ES Models: Lift, Pump

ITEM	PART NO.	QTY	DESCRIPTION
1	19341	1	Hose Assy, 3/8" x 132", 6G6FJ90X - 6G6FJX
2	91698	1	Hose Assy, 3/4" x 35", 12G12FJX - 12G12FJX
3	91909	1	Hose Assy, 3/8" x 150", 6G6FJX - 6G6FJX
4	91879	1	Hose Assy, 3/4" x 16", 12G12FJX - 12G12FJX
5	19347	1	Hose Assy, 3/4" x 21", 12G12FJX - 12G12FJX90S
6	90315	1	Hose Assy, 1/2" x 21", 8G8FJX - 8G8FJX90S
7	19369	1	Hose Assy, 1/4" x 28", 4G4FJX - 4G4FJX45
8	19370	1	Hose Assy, 1/4" x 33", 4G4FJX - 4G4FJX90S
9	50665	2	Fitting, 90°, MB - MJ90 - 04 - 04
10	50906	1	Fitting, MJ - MP - 12 - 12
11	50892	1	Tee, MJFJX - MJT - 4
12	50907	1	Fitting, MJ - MP - 12 - 20




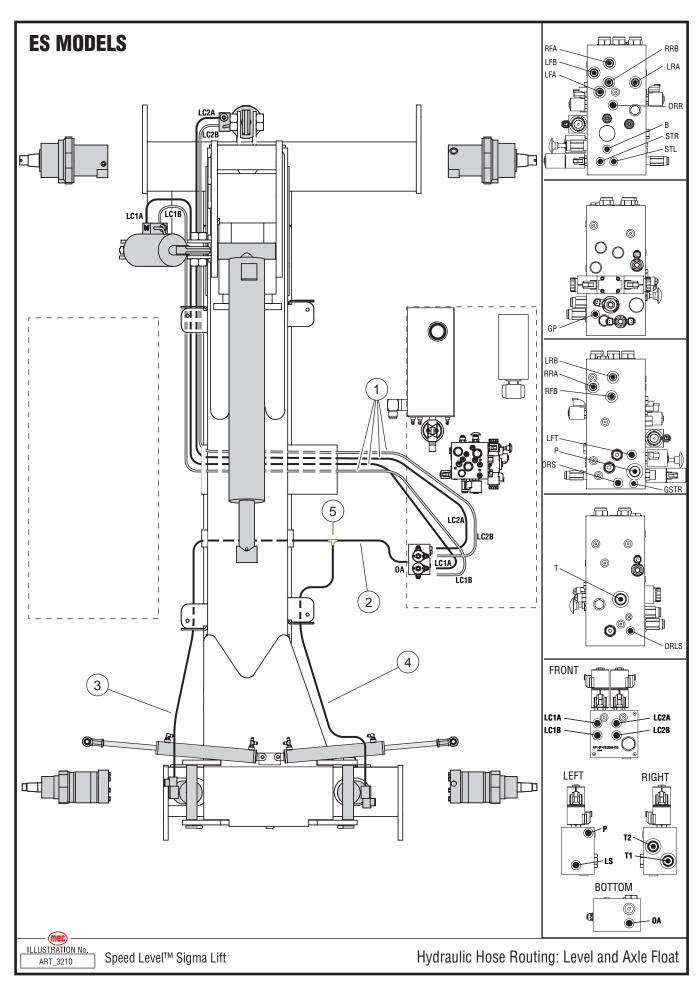

Hydraulic Hose Routing, ES Models: Platform Level, Axle Float

ITEM	PART NO.	QTY	DESCRIPTION
1	19349	4	Hose Assy, 1/4" x 120", 4G4FJX-4G4FJX
2	90316	1	Hose Assy, 1/4" x 21", 4G4FJX-4G4FJX
3	19361	1	Hose Assy, 1/4" x 73", 4G4FJX-4G4FJX90S
4	19340	1	Hose Assy, 1/4" x 65", 4G4FJX-4G4FJX
5	50927	1	Tee, MJT-4




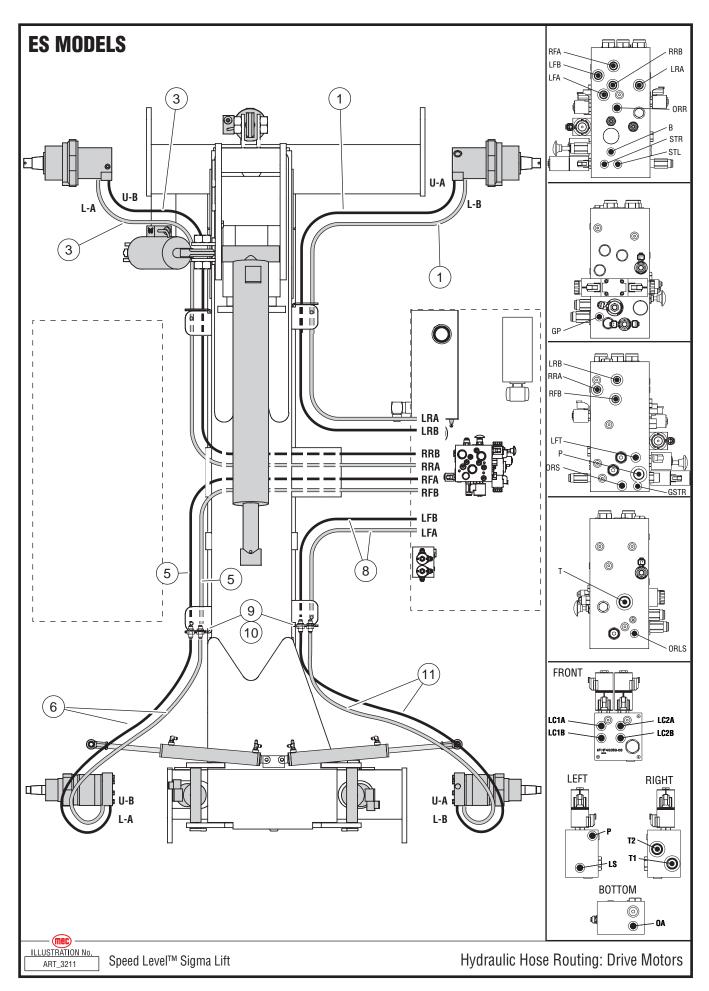

Hydraulic Hose Routing, ES Models: Drive Motors

ITEM	PART NO.	QTY	DESCRIPTION
1	19355	2	Hose Assy, 1/2" x 49", 8M3K-8FJX-8FJX45
2			
3	19357	2	Hose Assy, 1/2" x 102", 8M3K-8FJX-8FJX45
4			
5	19353	2	Hose Assy, 1/2" x 61", 8M3K-8FJX-8FJX
6	19352	2	Hose Assy, 1/2" x 37", 8M3K-8FJX-8FJX90S
7			
8	19354	2	Hose Assy, 1/2" x 44", 8M3K-8FJX-8FJX
9	50904	4	Adapter, Male 1/2" JIC-1/2" JIC Bulkhead MJ-MJH-8-8
10	91193	4	Jamnut, 3/4-16
11	19350	2	Hose Assy, 58"




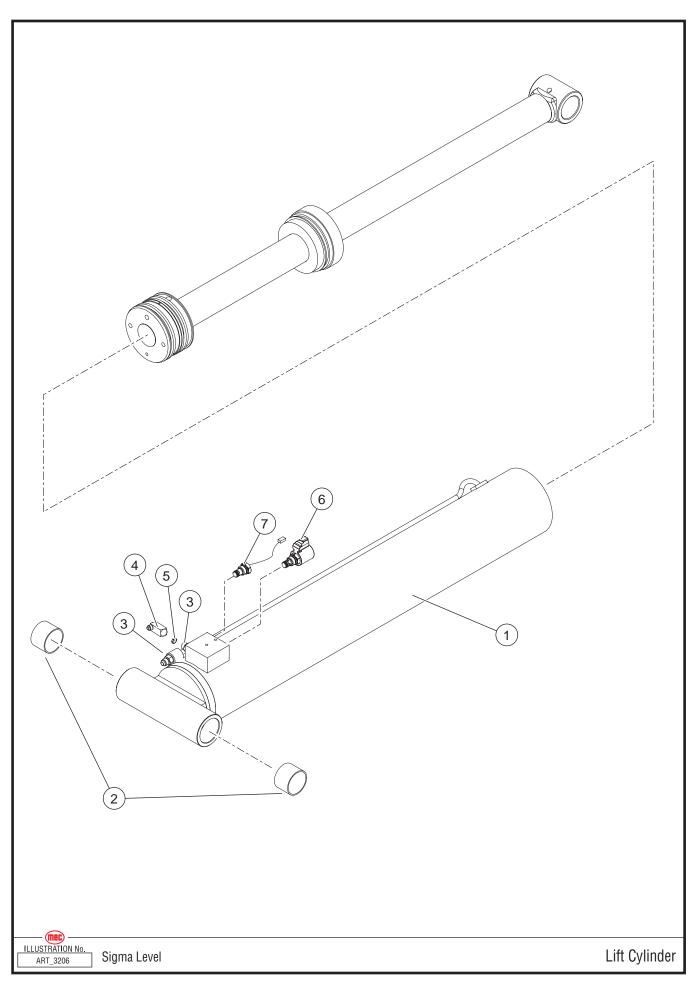

Lift Cylinder

ITEM	PART NO.	QTY	DESCRIPTION
1	19084	1	Lift Cylinder
_	92077		Seal Kit
2	6669	4	Bearing
3	50776	2	Fitting, MB-MJ-6-6
4	50890	1	Fitting, MJ-FJX-90-6-6
5	91732	1	Orifice
6	91464	1	Valve, 2-Way, NC
"	91141	1	Coil, 12V
7	90845	1	Pressure Sensor (CE only)




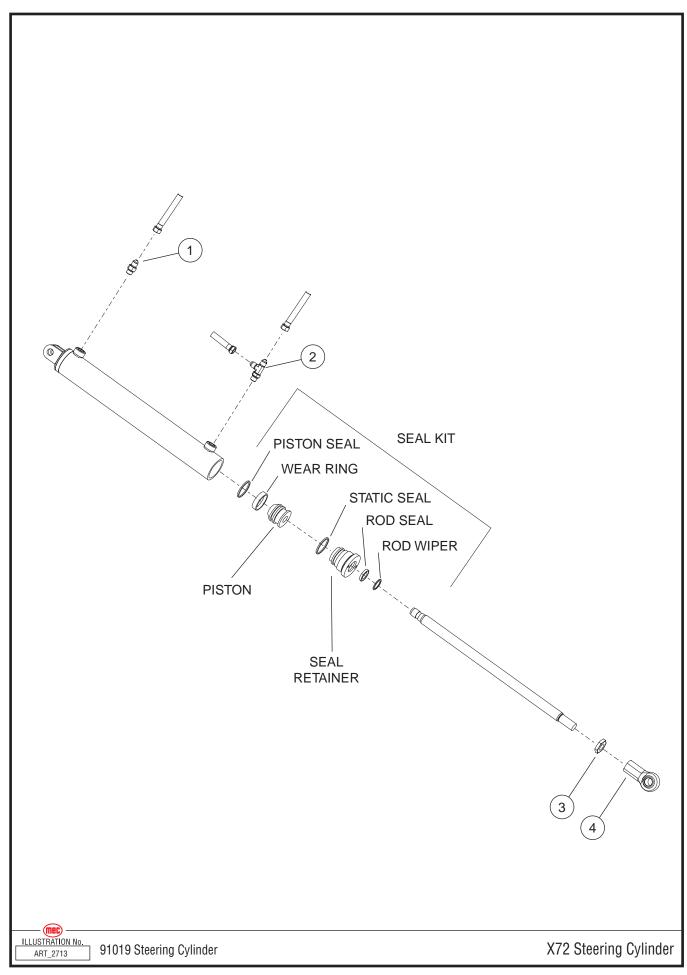

Steering Cylinder

ITEM	PART NO.	QTY	DESCRIPTION
_	91019	2	Steering Cylinder
_	90990		Seal Kit (Service)
1	50769	1	Adapter Male ¼" O-Ring-Male ¼" JIC
2	50962	1	Tee, MJ-MB-MJT-4
3	HDW5925	1	Jamnut 5/8-18
4	7293	1	Rod End
5	50665	2	Fitting, 90, MJ-FJX90-4-4




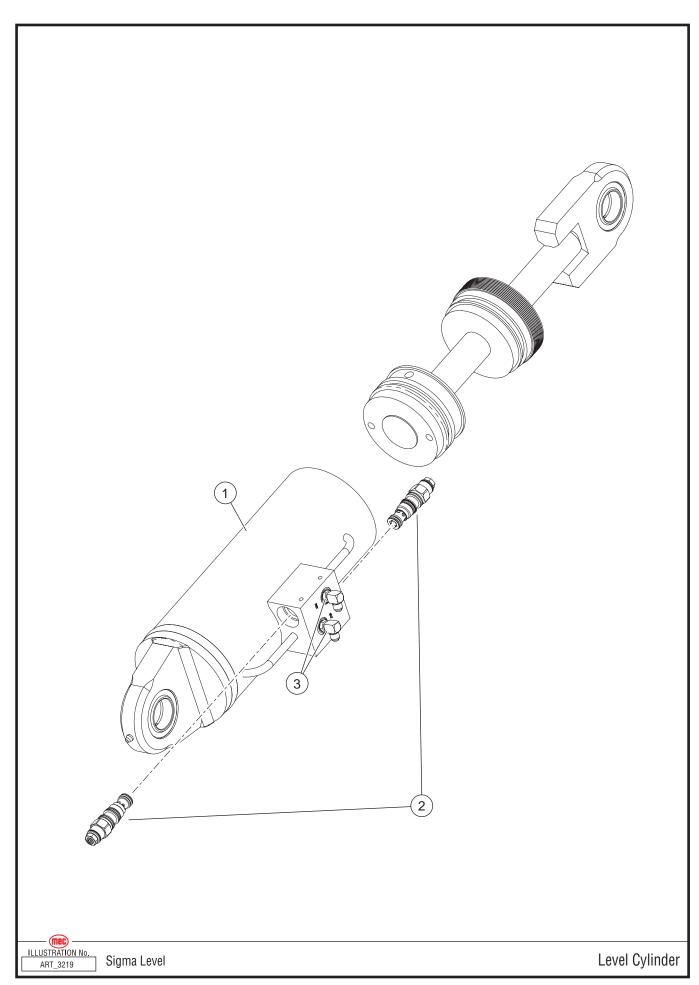

Level Cylinder

ITEM	PART NO.	QTY	DESCRIPTION
1	19081	2	Level Cylinder
_	92078		Seal Kit (Service)
2	92125	4	Counterbalance Valve
3	50665	4	Fitting, MB-MJ90-4-4



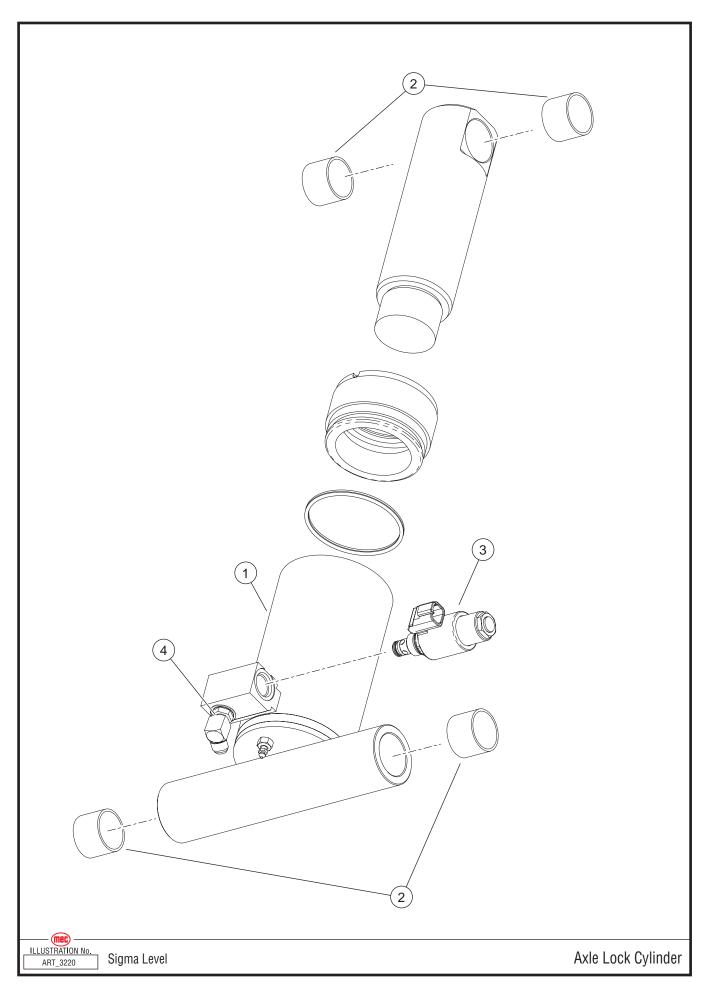

Axle Lock Cylinder

ITEM	PART NO.	QTY	DESCRIPTION
1	19087	2	Axle Lock Cylinder
_	92079		Seal Kit (Service)
2	7896	4	Bearing
3	92192	1	Valve
4	50665	2	Fitting, MB-MJ90-4-4



N	Ω	rec
1.4	•	- N




SECTION F

BASE

Contents	Page
Module Installation	F-3
Control Module – ES, Drawing 1of 2	F-5
Control Module – ES, Drawing 1of 2	
Power Module – ES	F-9
Control Module RT, Drawing 1 of 2	
Control Module, RT Drawing 2 of 2	
Power Module – RT	
Engine Mount – Dual Fuel	
Engine Mount – Diesel	
Engine – Diesel	
Engine – Diesel (continued)	
Engine – Dual Fuel	
Engine – Dual Fuel (continued)	
LP Tank – Dual Fuel	
Generator Option, RT	
Wire Harness – Electric Models	
Wire Harness - RT Models	F_25




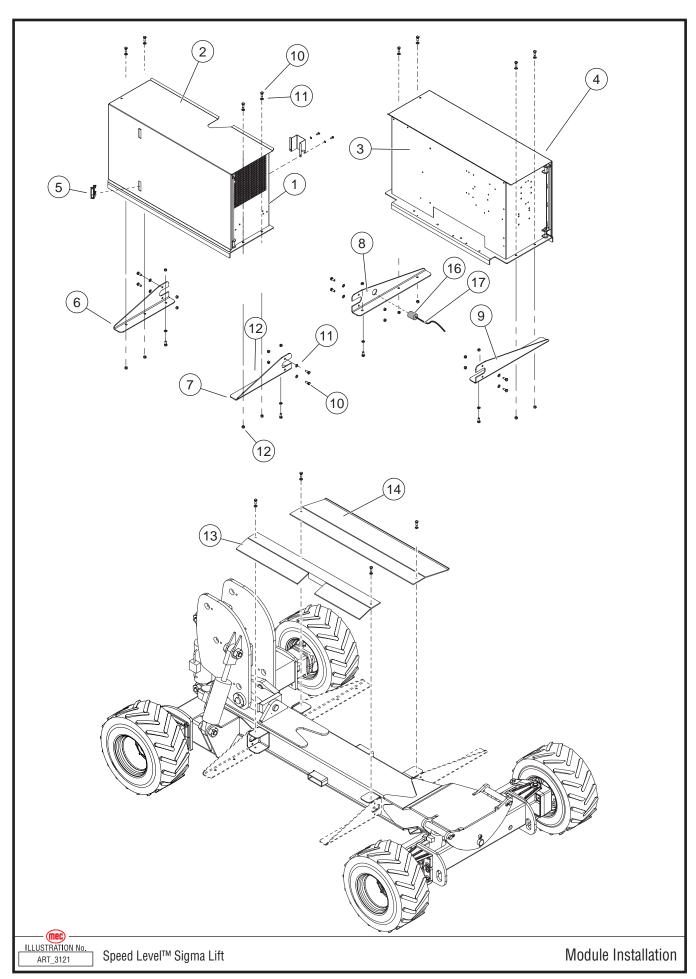

Module Installation

ITEM	PART NO.	QTY	DESCRIPTION	
1	16978	1	Power Module Weldment, ES	
'	16213	1	Power Module Weldment, RT	
2	16984	1	Power Module Door, ES	
	16220	1	Power Module Door, RT	
3	16989	1	Control Module, ES	
J	16153	1	Control Module, RT	
4	16985	1	Control Module Door, ES	
7	16156	1	Control Module Door, RT	
5	8386	4	Door Latch Trigger	
6	19106	1	Module Bracket, Right Front	
7	19105	1	Module Bracket, Right Rear	
8	19104	1	Module Bracket, Left Rear	
9	19103	1	Module Bracket, Left Front	
10	50039	24	Bolt, M12 x 30	
11	50003	24	Washer, M12	
12	50050	24	Nut, M12 Nylock	
13	19155	1	Hose Cover, Right Side	
14	19154	1	Hose Cover, Left Side	
15	19159	1	RT Models Exhaust Cover	
16	90749	1	Plug, Marinco 15 amp	
17	REF		Cable, Power To Platform, 14G See "Wire Harness" pages at the end of Section F	




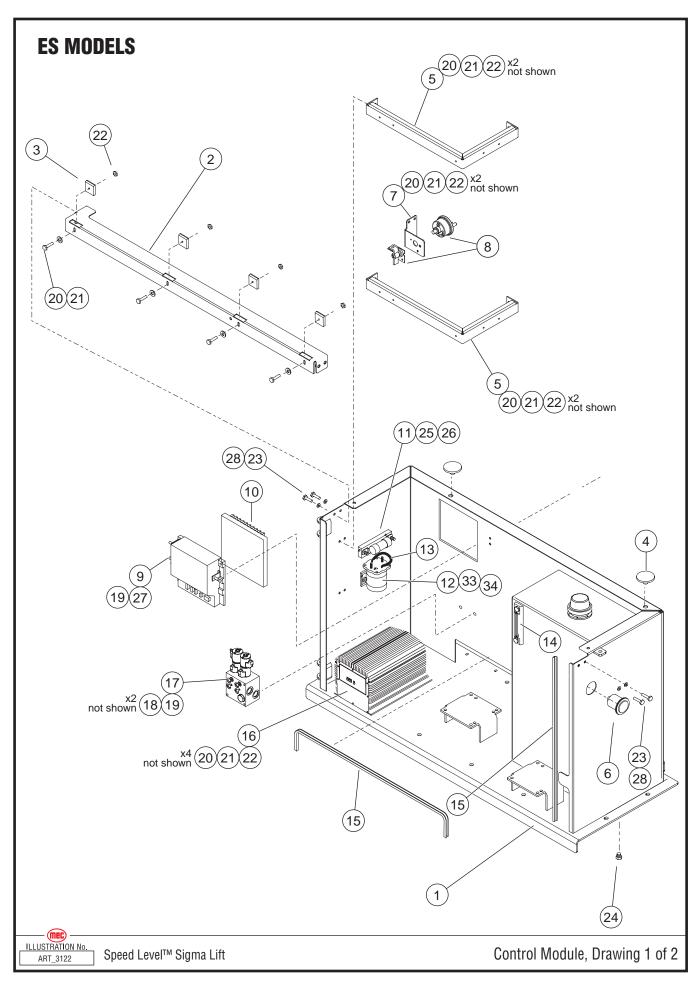

Control Module – ES, Drawing 1of 2

ITEM	PART NO.	QTY	DESCRIPTION	
1	REF	_	Control Module Weldment See "Module Installation" on Page F-3.	
2	16154	1	Bracket, Cross Support	
3	14896	4	Block, Slide, Door	
4	25429	2	Pad	
5	16226	2	Bracket, Control Box	
6	90749	1	Plug, Battery Charger Connection	
7	16229	1	Bracket, Battery Disconnect	
8	8841	1	Switch, Battery Disconnect	
9	91658	1	Motor Controller	
10	19276	1	Heat Sink	
11	91709	1	Fuse, 300 AMP	
12	91745	1	Contactor, Solenoid 48V, 12V Coil	
13	8368	1	Diode	
14	9370	1	Fluid Level Gauge	
15	6121	5 ft	Trim Lock	
16	91633	1	Battery Charger	
17	93093	1	Manifold, Leveling See Section E - Hydraulics	
18	50237	3	Screw, Hex M8 x 100	
19	50048	6	Nut, M8 Nylock	
20	50028	14	Screw, Hex, M6 x 20	
21	50068	15	Washer, M6 Fender	
22	50047	14	Nut, M6 Nylock	
23	50150	4	Screw, 5/16–18 × ³ / ₄ , GR5	
24	HDW9200	1	Plug, ¼ NPT	
25	HDW7778	2	Screw, FPH MS 1/4-20 x 12	
26	HDW8267	2	Nut,Top Lk 1/4-20 Gr C	
27	50282	2	Screw, Hex, M8 x 35	
28	50061	4	Washer, 5/16 Flat	




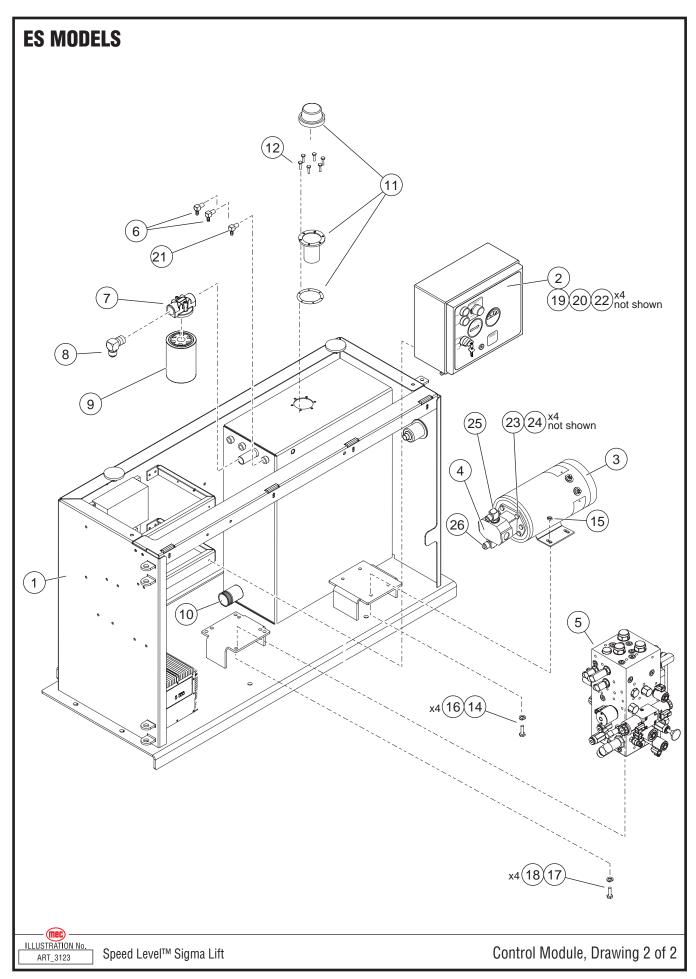

Control Module – ES, Drawing 1of 2

ITEM	PART NO.	QTY	DESCRIPTION
1	REF	_	Control Module Weldment
2	83077	1	Control Box See Section A - Controls
3	91640	1	Electric Motor
4	91673	1	Pump, 10CC
5	83072	1	Hydraulic Manifold See Section E - Hydraulics
6	HDW6727	2	Fitting, MP-MJ-4-4 90
7	6714	1	Filter Head
8	50916	1	Elbow, 90° ¾ NPT – ¾ JIC
9	6156	1	Filter Cartridge
10	50650	1	Nipple, MJ-MP-12-20
11	9367	1	Filler/Strainer
12	50143	6	Bolt, 32 × 1.57
13			
14	50031	4	Screw, Hex, M8 x 25
15	50048	4	Nut, M8 Nylock
16	5000	4	Washer, M8
17	50147	4	Screw, 3/8 × 1
18	HDW7783	4	Lock Washer, 3/8
19	50214	4	Screw, M6 x 30
20	50047	4	Nut, M6 Nylock
21	50919	1	Fitting, MP-MJ-4-6 90
22	50068	4	Washer, M6 Fender
23	50188	4	Screw, Hex Fine Thread 3/8-24 x 1.5
24	50062	4	Washer, 3/8
25	50762	1	Fitting, MB-MJ-10-8 90
26	50763	1	Fitting, MB-MJ-12-12 90




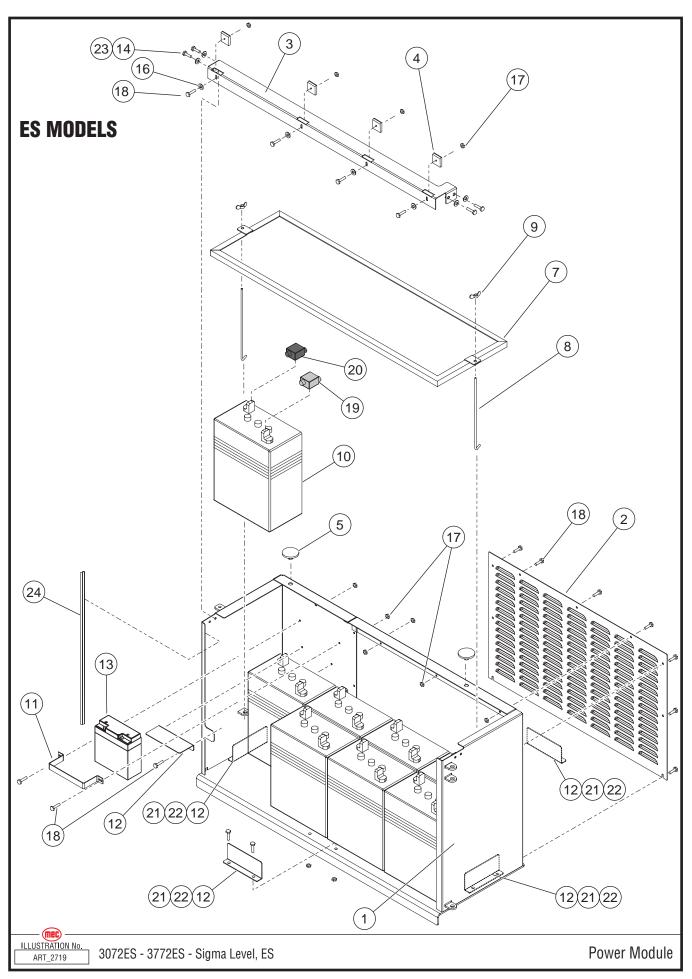

Power Module - ES

ITEM	PART NO.	QTY	DESCRIPTION	
1	REF	-	Weldment, Battery Module See "Module Installation" on Page F-3.	
2	16974	1	Panel, Battery Module	
3	16977	1	Crossbar, Battery Module	
4	14896	4	Block, Slide, Door	
5	25429	2	Pad	
6				
7	16983	1	Battery Holddown	
8	2987	2	Holddown Rod	
9	6110	2	Wingnut	
10	91641	8	Battery, 375 AH, UL16	
11	16619	1	Bracket, Battery	
12	16620	5	Shelf, Battery	
13	90898	1	Battery, 12VDC / 17-18 AH	
14	HDW5724	4	Screw, 5/16–18, 3/4" LG, GR 5	
15				
16	50068	17	Washer, M6 Fender	
17	50047	17	Nut, M6 Nylock	
18	50028	18	Screw, Hex, M6 x 20	
19	91790	8	Battery Boot, Red, Positive	
20	91790	8	Battery Boot, Black, Negative	
21	91789	4	Screw, Hex, M8 x 20	
22	50030	4	Nut, M8 Nylock	
23	50061	4	Washer, 5/16 Flat	
24	6121	26"	Trim Lock, 1/4"	




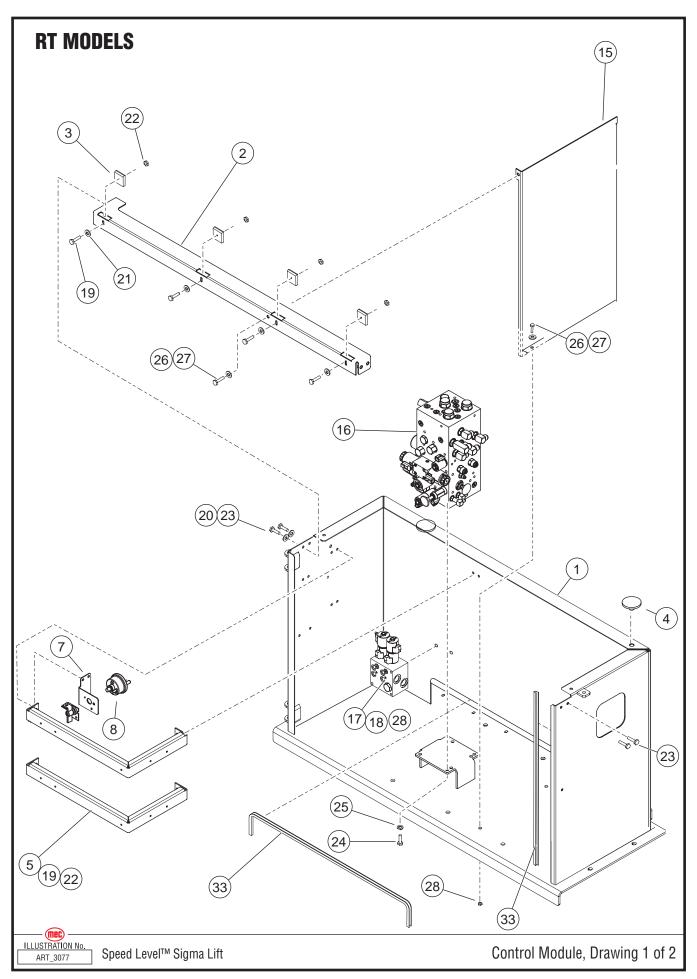

Control Module RT, Drawing 1 of 2

ITEM	PART NO.	QTY	DESCRIPTION
1	REF	_	Control Module Weldment See "Module Installation" on Page F-3.
2	16154	1	Bracket, Cross Support
3	14896	4	Block, Slide, Door
4	25429	2	Pad
5	16226	2	Bracket, Control Box
6			
7	16229	1	Bracket, Battery Disconnect
8	8841	1	Switch, Battery Disconnect
9			
10			
11			
12			
13			
14			
15	16152	1	Bulkhead
16	83071	1	Hydraulic Manifold See Section E - Hydraulics
17	83093	1	Manifold, Leveling See Section E - Hydraulics
18	50237	3	Screw, Hex M8 x 100
19	50028	8	Screw, M6 x 20
20	50000	4	Washer, M6 Flat
21	50068	8	Washer, M6
22	50047	8	Nut, M6 x 1.0 Nylock
23	50150	4	Screw, 5/16–18 × ¾, GR5
24	50147	4	Screw, 3/8 × 1
25	HDW7783	4	Lock Washer, 3/8
26	50001	5	Washer, M8 Flat
27	50030	5	Screw, Hex M8 x 20
28	50048	5	Nut, M8 Nylock
29	50047	3	Nut, M6 Nylock
30			
31			
32			
33	6121	5 ft	Trim Lock




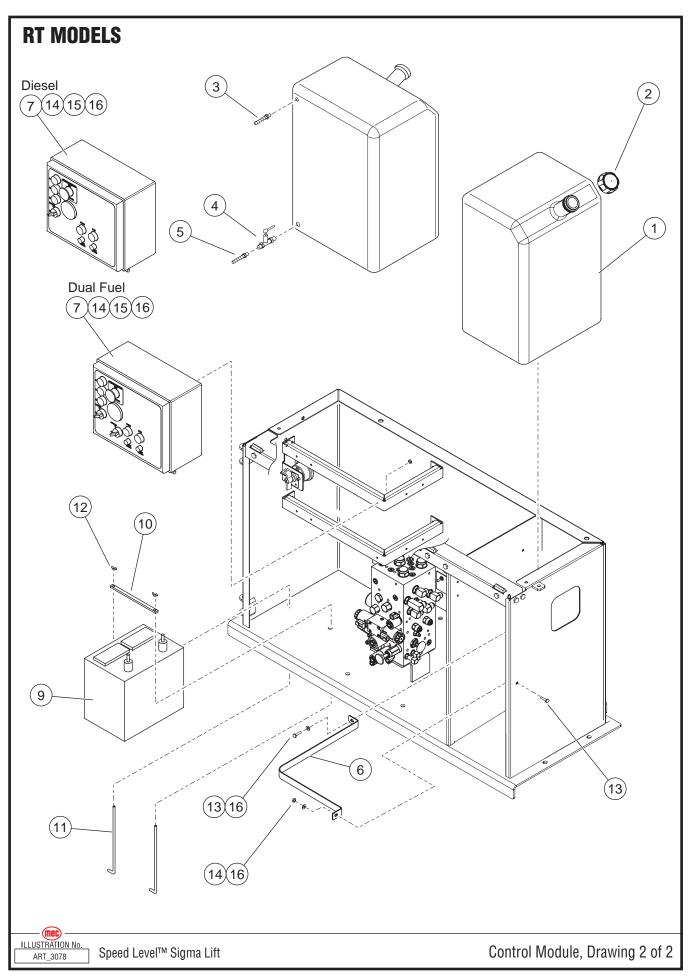

Control Module, RT Drawing 2 of 2

ITEM	PART NO.	QTY	DESCRIPTION
1	91023	1	Fuel Tank, Plastic
2	91091	1	Fuel Tank Cap
3	HDW91233	1	Plug (Dual Fuel) 1/8 NPT, 3/19 Hose Barb
3	HDW91320	1	Adapter (Diesel)
4	6919	1	Fuel Shutoff
5	HDW91279	1	Adapter, Male 1/8 NPT, 5/16 Hose Barb
	7788	1	Clamp (Not Shown)
	6458	90 IN	Hose, Fuel Line (Not Shown)
6	16225	1	Bracket, Fuel Tank
7	83078	1	Dual Duel Models Control Box Assy
,	83079	1	Diesel Models Control Box Assy
8			
9	6854	1	Battery, 12VDC, Grp 24 Deep Cycle
10	3436	1	Hold Down Bar
11	2987	2	Hold Down Rod
12	HDW6110	2	Wing Nut
13	50028	2	Screw, M6 x 20
14	50047	6	Nut, M6 Nylock
15	50239	4	Screw, Hex M6 x 30
16	50130	6	Washer, M6 Fender




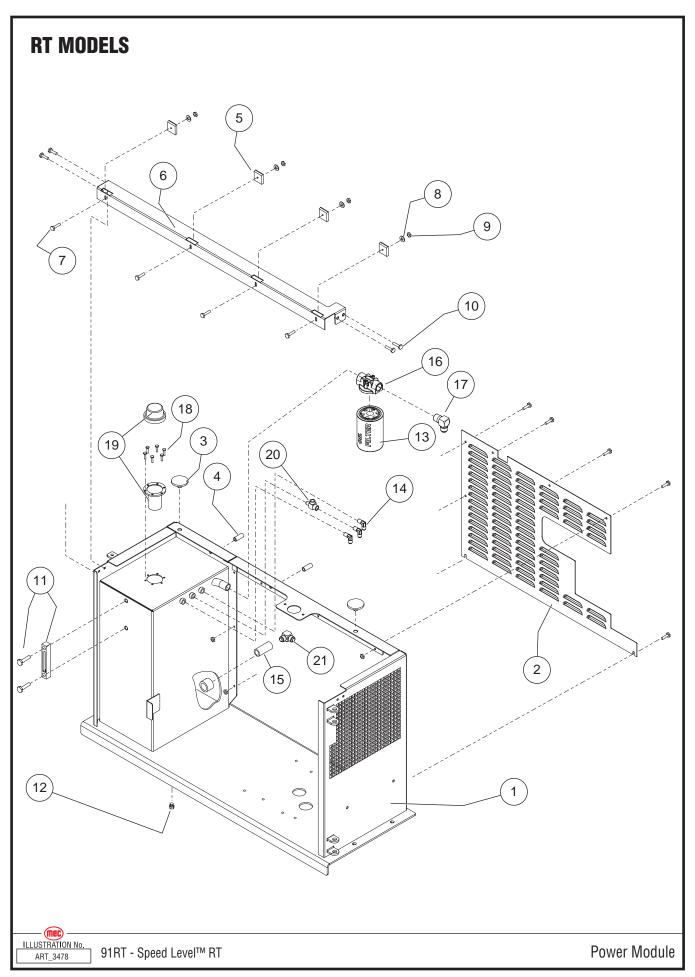

Power Module - RT

ITEM	PART NO.	QTY	DESCRIPTION
1	16213	REF	Power Module Weldment
2	16247	1	Guard, Engine Module
3	25429	2	Pad
4	40620	2	Spacer, Insulator
5	14896	4	Slide Block, Door
6	14826	1	Bracket, Cross Support
7	50028	11	Screw, M6 x 20
8	50068	13	Washer, M6 Fender
9	50047	12	Nut, M6 Nylock
10	HDW5724	4	Screw, 5/16 - 18 x 3/4 inch, GR5
11	9370	1	Level Gauge
12	HDW9200	1	Plug, 1/4 NPT
13	6156	1	Filter Cartridge
14	50664	2	Elbow, MP-MJ90-4-4
15	50648	1	Fitting, MJ-MP-16-20
16	6714	1	Filter Head
17	HDW9268	1	Elbow, 90° 1/4 NPT - 3/4 JIC
18	HDW8482	6	Bolt, 32 × 1.57
19	9367	1	Filler/Strainer
20	50893	1	Tee, MJ-FJX-MJT-6
21	50649	1	Elbow 90, MJ-FJX90-16-16
22	50061	4	Washer, 5/16 Flat
23	50920	1	Fitting, MJ-MP90-6-4




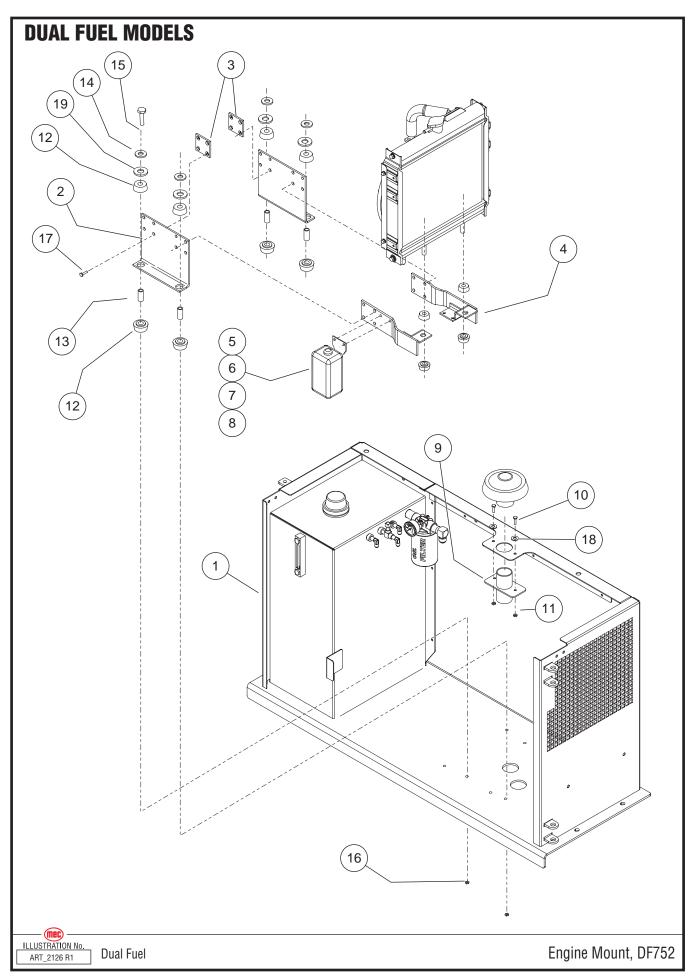

Engine Mount – Dual Fuel

ITEM	PART NO.	QTY	DESCRIPTION
1	16213	REF	Power Module Weldment
2	16211	2	Engine Mount, Dual Fuel
3	16210	2	Spacer
4	91131	1	Radiator Bracket Kit
5	91127	1	Coolant Overflow Tank
6	50028	2	Screw, M6 x 20
7	50047	2	Nut, M6 Nylock
8	6458	3 FT	Hose
9	16295	1	Air Intake Weldment
10	HDW5723	2	Screw, 1/4 - 20 x 3/4
11	HDW8267	4	Nut, 1/4 - 20
12	7736	8	Insulator, Rubber
13	40620	4	Spacer - Isolator
14	HDW8567	4	Washer, Flat, 3/8
15	HDW8279	4	Bolt, 3/8 - 16 x 2 1/2 GR8
16	HDW8268	4	Nut, 3/8 - 16
17	HDW91234	12	Screw, M10-1.25 x 25 8.8
18	50130	2	Washer, 1/4 Flat
19	90480	4	Washer, 3/8 x 1-1/2 Fender




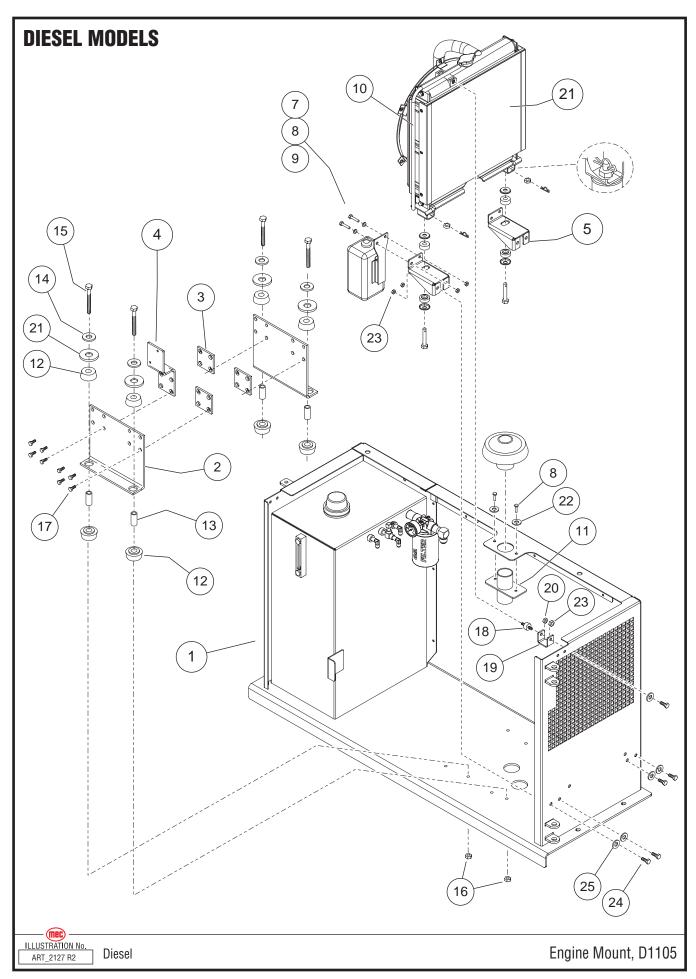

Engine Mount – Diesel

ITEM	PART NO.	QTY	DESCRIPTION
1	16213	REF	Power Module Weldment
2	16209	2	Engine Mount, Diesel
3	16210	3	Spacer
4	16207	1	Bracket, Solenoid Mount
5	16345	2	Bracket, Radiator Mount
6			
7	91127	1	Coolant Overflow Tank
8	50028	2	Screw, M6 x 20
9	50047	2	Nut, M6 Nylock
10	6458	3 FT	Hose
11	16295	1	Air Intake Weldment
12	7736	8	Insulator, Rubber
13	40620	4	Spacer - Isolator
14	HDW8567	4	Washer, Flat, 3/8
15	HDW8279	4	Screw, 3/8 - 16 x 2 1/2 GR8
16	HDW8268	4	Nut, 3/8 - 16
17	HDW91234	12	Screw, M10 - 1.25 x 25 8.8
18	91591	1	Vibration Isolator
19	16346	1	Radiator Brace
20	50047	1	Nut, M6
21	90480	4	Washer, 3/8 x 1-1/2 Fender
22	50130	2	Washer, 1/4 Flat
23	50049	5	Nut, M10 Nylock
24	50215	5	Bolt, M10 x 20 HHCS
25	50002	5	Washer, M10 Flat



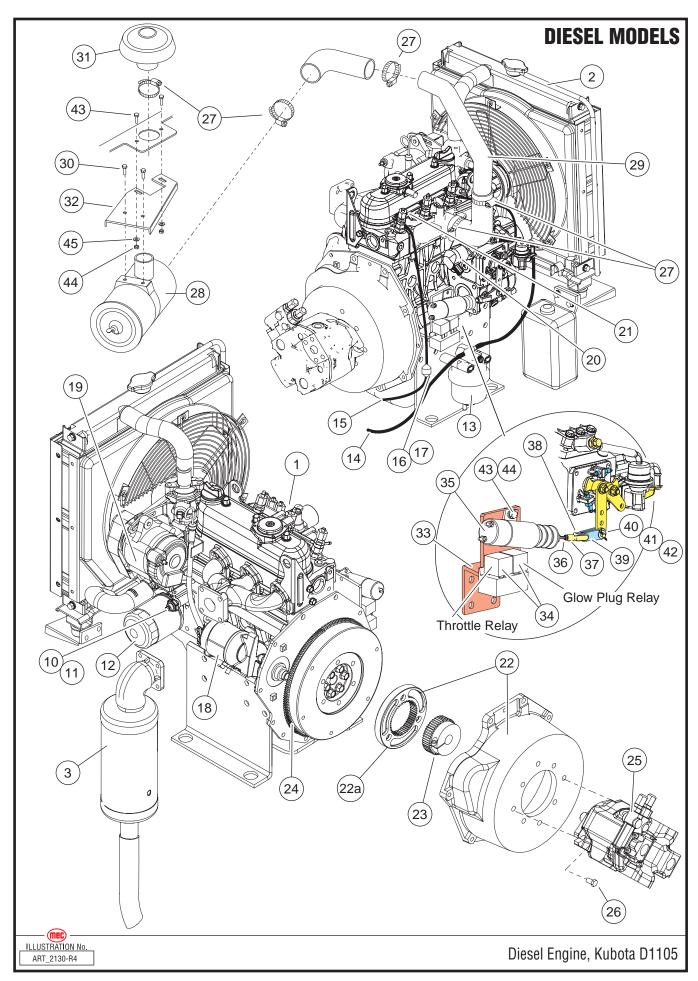


Engine – Diesel

ITEM	PART NO.	QTY	DESCRIPTION	
Addition	Additional attaching engine parts found earlier in this section			
	84036		Engine Subassembly, Diesel	
1	91429	1	Engine Kit, D1105	
2	91113	1	Radiator Kit	
	9831		Radiator	
3	19405	1	Muffler Kit	
	92164		Gasket, Exhaust (not shown)	
4				
5				
6	-			
7	-			
8	-			
9	-			
10	91175	1	Oil Pressure Switch	
11	HDW91187	1	Fitting, 1/8 NPT, m–F	
12	8665	1	Oil Filter	
13	91116	1	Fuel Filter Assembly	
	91123		Fuel Filter Element	
14	6458	8 FT	Hose, Fuel, 5/16	
15	91199	6 FT	Hose, Fuel, 3/16	
16	91114	1	Valve, Check	
17	7788	5	Hose Clamp	
18	8413	incl	Starter	
19	90227	incl	Alternator	
20	8001	incl	Fuel Solenoid	
21	9832	incl	Glow Plugs	
22	91112	1	KTR housing Kit, D905	
22a	91572		Coupler, Outer	
23	91130	1	Hub	
24	91630	1	Ring Gear	
25	91160	1	Hydraulic Pump	
26	HDW6433	2	Screw, 3/8-16 × 1"	

... continued




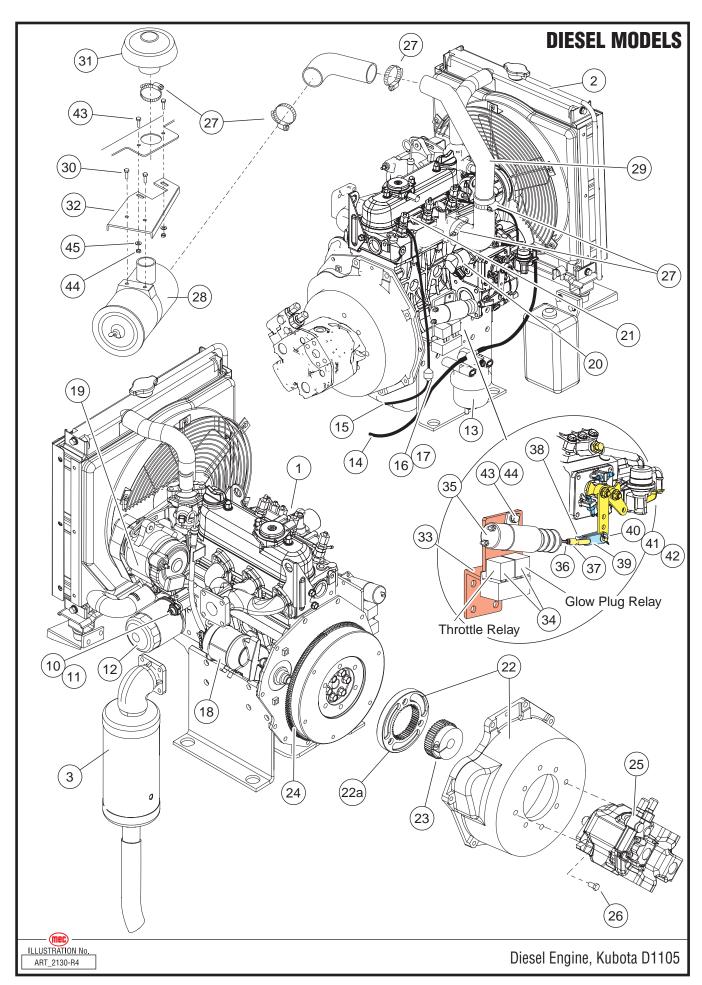

Engine – Diesel (continued)

ITEM	PART NO.	QTY	DESCRIPTION
27	7545	5	Hose Clamp
28	91111	1	Air Cleaner kit
	8667		Air Filter Element
29	16720	1	Tube, Intake Extension
30	946640	2	Screw,
31	91799	1	Breather Cap
32	16721	1	Bracket
33	16207	1	Bracket, Solenoid
34	91375	2	Relay
35	91589	1	Solenoid, Throttle
36	HDW91231	1	Jamnut, 1/4–28
37	91117	1	Yoke
38	91588	1	Washer, ¼" Rubber
39	16347	2	Throttle Link
40	HDW5217	1	Washer, Flat, 5/16"
41	HDW91590	1	Clevis Pin, 5/16 x 1"
42	HDW5290	1	Cotter Pin, 1/8" × 1"
43	50028	4	Screw, M6 x 20
44	50047	4	Nut, M6 Nylock
45	HDW5217	2	Flat Washer



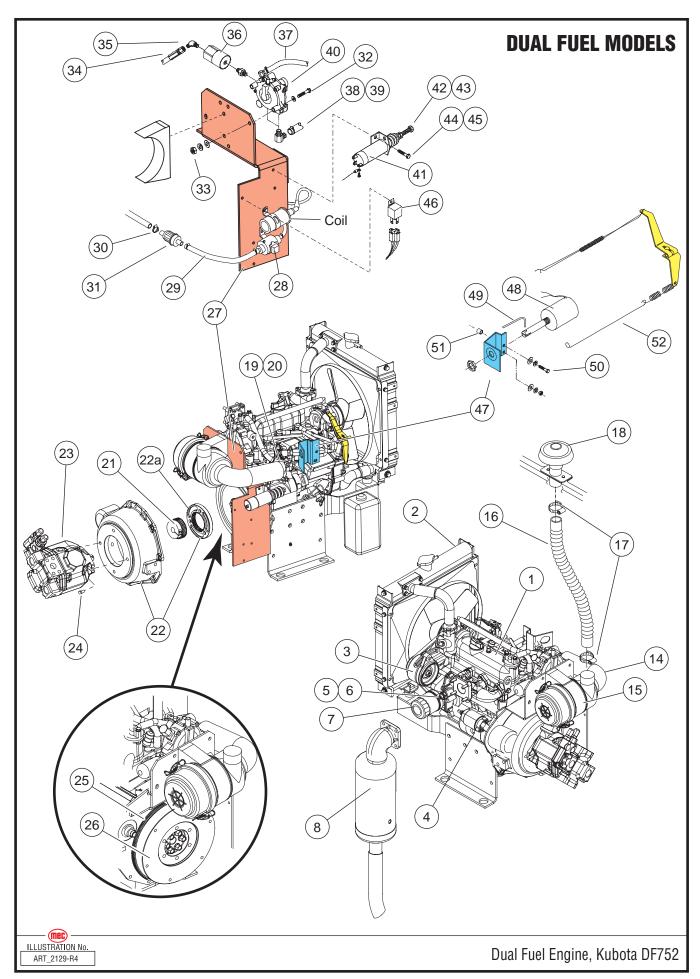


Engine – Dual Fuel

ITEM	PART NO.	QTY	DESCRIPTION	
		·		
Additional attaching engine parts found earlier in this section 91035 Engine Subassembly, Dual Fuel				
	91035		Eligille Subassellibly, Dual Fuel	
4	01105		Francisco Wicharla DEZEO	
1	91125	1	Engine, Kubota DF752	
2	8472	1	Radiator	
3	90227	1	Alternator, 40 AMP	
4	8365	1	Starter	
5	91175	1	Oil Pressure Switch	
6	HDW91187	1	Fitting, 1/8 NPT, M-F	
7	8516	1	Oil Filter	
8	19405	1	Muffler	
	92164		Gasket, Exhaust (not shown)	
9				
10				
11				
12				
13				
14	91136	1	Air Filter Element	
15	91188	1	Intake Hose	
16	91340	1	Hose, 2.00" I.D. Flex	
17	7545	2	Hose Clamp	
18	91799	1	Breather Cap	
19	91133	1	Carburetor Flange	
20	91617	1	Carburetor Assembly	
21	91130	1	Hub	
22	91129	1	KTR Housing Kit, DF752	
22a	91573		Coupler, Outer	
23	91160	1	hydraulic Pump	
24	HDW6433	2	Screw, 3/8-16 × 1"	
25	91765	1	Ring Gear	
26	91766	1	Flywheel	

... continued




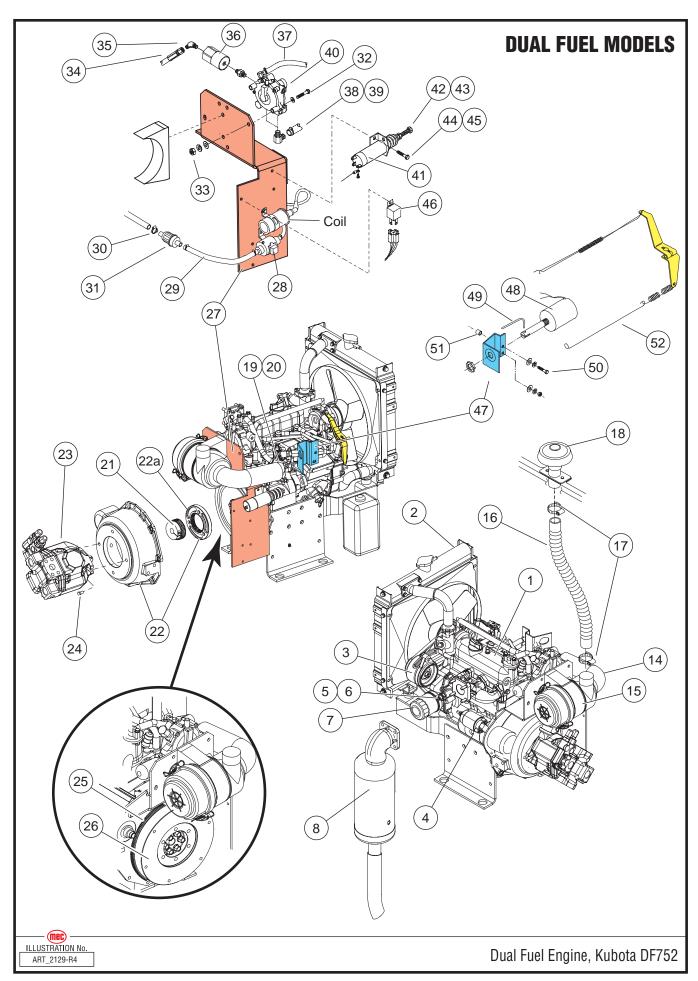

Engine – Dual Fuel (continued)

ITEM	PART NO.	QTY	DESCRIPTION
27	21020	1	Bracket, Components
28	91177	1	Fuel Pump
29	6458	as req	Hose, Fuel, 5/16
30	7788	5	Hose Clamp, 5/16
31	8514	1	Fuel Filter
32	50015	2	Screw, M8 x 50
33	50048	2	Nut, M8 Nylock
34	7406	1	Hose Assembly, LP
35	HDW6894	1	Elbow, 90° Brass
36	91132	1	Valve, lockoff
37	91197	10 in	LP Hose, ½"
38	91198	60 IN	Radiator Hose, 3/8"
39	91232	6	Hose Clamp, #8
40	9833	1	LPG Regulator
41	91119	1	Solenoid, Throttle
42	HDW9247	1	Screw, Cap Socket Head, 1/4–28 × 1.0"
43	HDW91231	2	Jamnut, 1/4–28
44	50028	6	Screw, M6 x 20
45	50047	6	Nut, M6 Nylock
46	91375	1	Relay, Throttle
47	20212	1	Choke Bracket
48	9502	1	Choke Solenoid
49	9498	1	Choke Linkage
50	HDW91283	1	Screw, M6-1.0 × 25
51	20204	1	Spacer
52	9252	1	Throttle Linkage




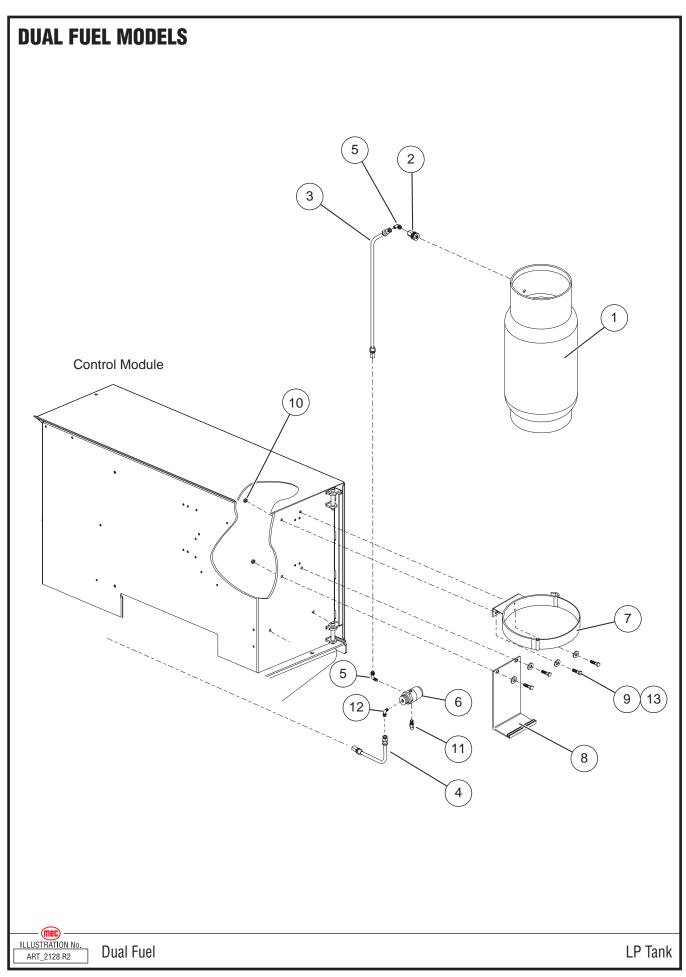

LP Tank - Dual Fuel

ITEM	PART NO.	QTY	DESCRIPTION
1	6859	1	LP Tank
2	6868	1	Quick Disconnect
3	6890	1	Hose Assembly, 30"
4	7406	1	Hose Assembly, 90"
5	HDW6894	2	Elbow, Brass, NPT to SAE 45°
6	6861	1	Bulkhead Filter
7	6860	1	Bracket, Tank Mount
8	19102	1	Tank Support Weldment
9	50031	4	Screw, M8 x 25
10	50048	4	Locknut, M8 Nylock
11	6938	1	Relief Valve
12	HDW6727	1	Elbow, Brass NPT to SAE 90
13	50001	4	Washer, M8 Flat




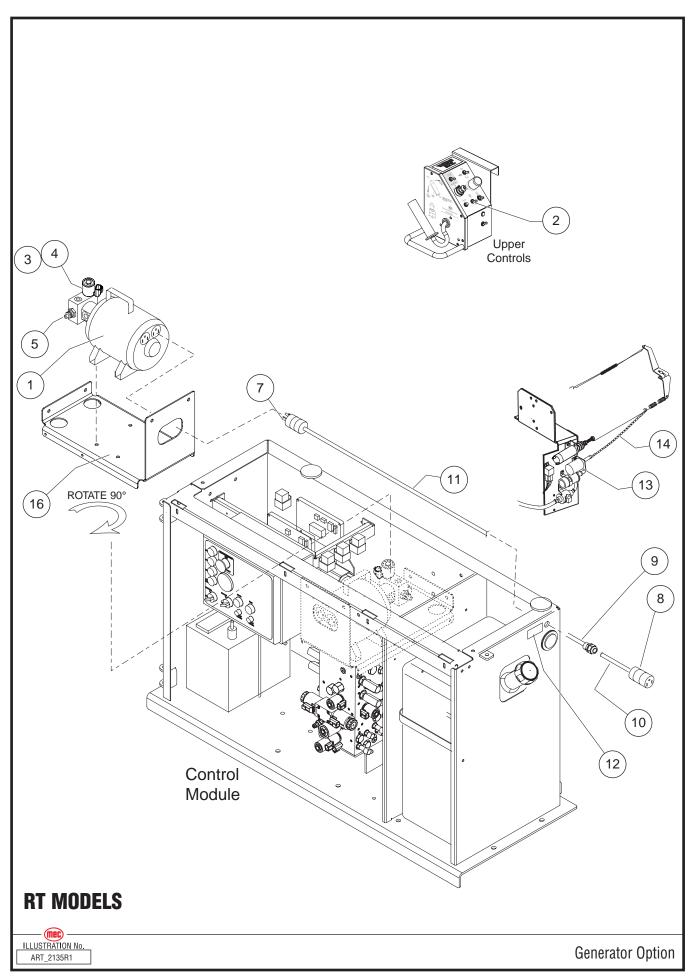

Generator Option, RT

ITEM	PART NO.	QTY	DESCRIPTION
Refer to	Section E for H	ose Kit	
1	91550	1	Generator, 2000 Watt
2	5630	1	Switch, Toggle
3	91551		Valve, Solenoid, 2-way, n.c included with item #1
4	91002		coil, 12V 10 Series included with item #1
5	91546		Needle Valve included with item #1
6			
7	91544	1	Plug, Male, 3 Prong
8	91545	2	Receptacle, Female
9	7594	1	Strain Relief
10	-		
11	7617	6 FT	Wire, 14GA, 3 conductor
12	91556	1	Label, AC Generator
13	9502	1	Solenoid, Generator-Throttle, Gas Engine
13	91119	1	Solenoid, Generator-Throttle, Diesel Engine
14	91469	2 FT	Chain, Sash #8
15	92196	1	Harness, Engine Intermediate, Generator Option
16	16369	1	Bracket, Generator Mount




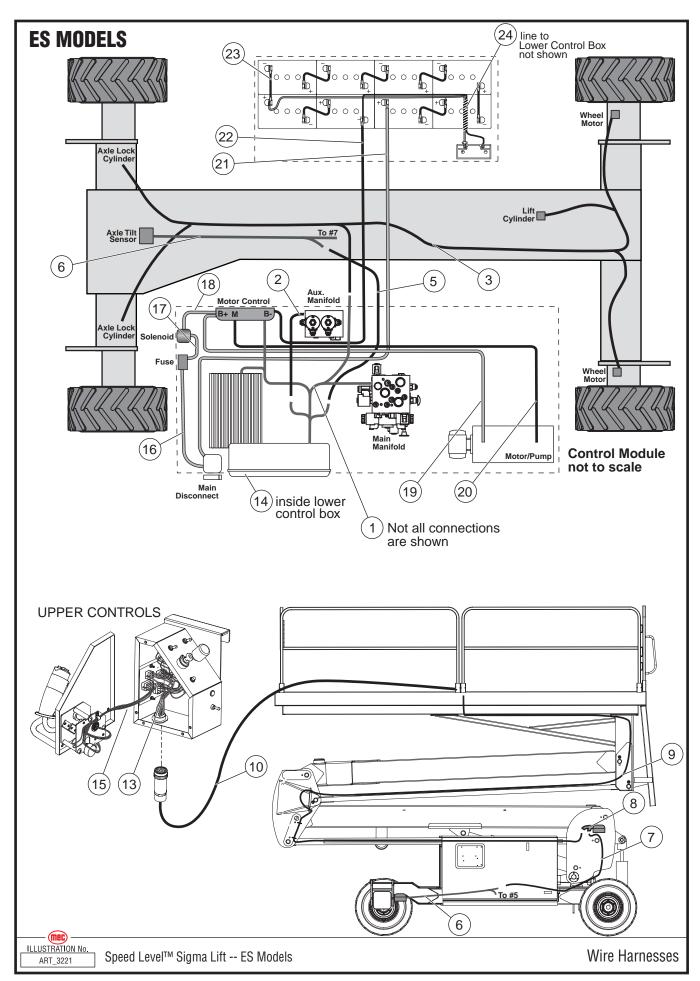

Wire Harness - Electric Models

ITEM	PART NO.	QTY	DESCRIPTION	
1	92145	1	Harness, Main, Lower Control Box to Valve Manifold and Modules	
2	92134	1	Harness, Main Harness to Level Manifold	
3	92135	1	Harness, Main Harness to Down Valve, Axle Cylinders, Wheel Bypass	
4				
5	92137	1	Harness, Communication, Main Harness to Axle CAN-Tilt	
6	92138	1	Harness, Communication, Axle CAN-Tilt Connection Adapter	
7	92139	1	Harness, Communication, Axle CAN-Tilt to Boom Pivot CAN-Tilt	
8	92140	1	Harness, Communication, Boom Pivot Angle CAN-Tilt Adapter	
9	92141	1	Harness, Communication, Boom Pivot Angle CAN-Tilt to Platform Bottom	
10	91780	1	Harness, Communication, Platform Bottom to Upper Control Box, Removable Control Box	
10	92196	1	Harness, Communication, Platform Bottom to Upper Control Box, Fixed Control Box	
11	0441	9441	55 ft	Cable, Power to Platform, 3084 (not shownconnects plug on module base to plug at platform)
''	3441	50 ft	Cable, Power to Platform, 2684 (not shownconnects plug on module base to plug at platform)	
12				
13	92143	1	Harness, Inside Upper Control Box Base Removable Control Box only	
14	92146	1	Harness, Lower Control Box Interior	
15	92193	1	Harness, Matrix Module to Joystick	
16	92150	1	Cable, Master Disconnect to Fuse	
17	92151	1	Cable, Fuse to Solenoid	
18	92151	1	Cable, Solenoid to Motor Controller B+	
19	92152	1	Cable, Red, Motor Controller B+ to Motor B+	
20	92153	1	Cable, Black, Motor Controller M to Motor B-	
21	92148	1	Cable, Battery+ to Master Disconnect	
22	92149	1	Cable, Battery- to Motor Controller B-	
23	6208	7	Cable, Battery Connection	
24	92147	1	Harness, Emergency Down	



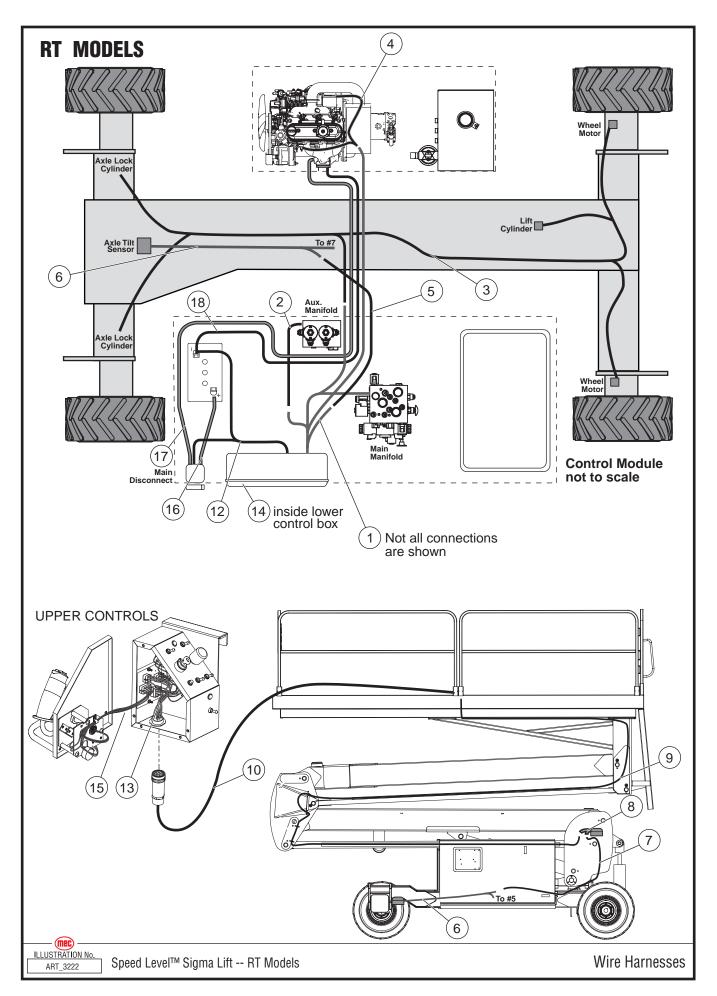

Wire Harness - RT Models

ITEM	PART NO.	QTY	DESCRIPTION	
1	92133	1	Harness, Main, Lower Control Box to Valve Manifold and Modules	
2	92134	1	Harness, Main Harness to Level Manifold	
3	92135	1	Harness, Main Harness to Down Valve, Axle Cylinders, Wheel Bypass	
4	92136	1	Harness, Engine, Main Harness to Engine	
5	92137	1	Harness, Communication, Main Harness to Axle CAN-Tilt	
6	92138	1	Harness, Communication, Axle CAN-Tilt Connection Adapter	
7	92139	1	Harness, Communication, Axle CAN-Tilt to Boom Pivot CAN-Tilt	
8	92140	1	Harness, Communication, Boom Pivot Angle CAN-Tilt Adapter	
9	92141	1	Harness, Communication, Boom Pivot Angle CAN-Tilt to Platform Bottom	
10	91780	1	Harness, Communication, Platform Bottom to Upper Control Box, Removable Control Box	
10	92196	1	Harness, Communication, Platform Bottom to Upper Control Box, Fixed Control Box	
11	9441	0441	55 ft	Cable, Power to Platform, 3084 (not shownconnects plug on module base to plug at platform)
11		50 ft	Cable, Power to Platform, 2684 (not shownconnects plug on module base to plug at platform)	
12	92142	1	Harness, 12V Power Supply to Lower Control Box	
13	92143	1	Harness, Inside Upper Control Box Base Removable Control Box only	
14	92144	1	Harness, Lower Control Box Interior	
15	92193	1	Harness, Matrix Module to Joystick	
16	92154	1	Cable, Battery+ to Master Disconnect	
17	92155	1	Cable, Master Disconnect to Engine Starter	
18	92156	1	Cable, Battery- to Engine	



NOTES:





SECTION G

DECALS, ANSI MODELS

Cont	ENTS	PAGE
	Decals, ES Models	G-3
	Decals, ES Models (continued)	G-5
	Decals, RT Models	G-9
	Decals, RT Models (continued)	G-11



ES MODELS - ANSI




(2)3084ES

7

3084ES SPEED LEVEL™

2684ES

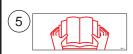



WARNING

SHEET LOADING GATE MUST BE IN LOWERED LOCKED POSITION BEFORE OPERATING FROM PLATFORM.

OPERATING PHOW PLATFORM.

*PLATFORM ENTRANCE MUST BE
PROPERLY CLOSED AND ALL
GUARDRAILS PROPERLY IN PLACE
AND SECURED BEFORE OPERATING
FROM PLATFORM.

FAILURE TO FOLLOW INSTRUCTIONS COULD CAUSE DEATH OR PERSONAL INJURY.

A WARNING

INSPECT MACHINE AND MAKE SURE THAT IT IS OPERATING PROPERLY, THAT ALL NAME PLATE AND SAFETY AND CONTROL DEGALS ARE IN PLACE AND LEGIBLE, AND THAT THE MACHINE IS IN ACCORDANCE WITH THE MANUFACTURERS MAINTENANCE REQUIREMENTS CONTAINED IN THE OPERATION AND MAINTENANCE MANUAL AND THE DAILY SAFETY CHECKLIST. OPERATE MACHINE WITH EXTREME CAUTION. WATCH FOR OBSTRUCTIONS WHICH MAY STRIKE PLATFORM, PERSONNEL, CONTROLS, OR MACHINE. OPERATE CONTROLS SLOWLY FOR SMOOTH PLATFORM MOTION.

FOR DRIVING WITH PLATFORM LOWERED

- DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD LIMIT CAPACITY. LOAD TO BE UNIFORMLY DISTRIBUTED. PLACE LOAD NEAR CENTER OF PLATFORM WHEN POSSIBLE.
- DO NOT DRIVE ON SIDE SLOPE IF PLATFORM IS OVER 5% OFF LEVEL.
- DO NOT DRIVE UP OR DOWN A GRADE OF OVER 40%.

FOR DRIVING WITH PLATFORM ELEVATED:

- DRIVE ONLY ON A SMOOTH, FIRM, AND PLANAR SURFACE FREE OF OBSTRUCTIONS.
- DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD CAPACITY.
- LOAD MUST BE UNIFORMLY DISTRIBUTED.
- IF TILT WARNING LIGHT ILLUMINATES OR TILT ALARM SOUNDS LOWER PLATFORM AND RE-LEVEL

- DO NOT EXCEED MAXIMUM SIDE FORCE AND MAXIMUM NUMBER OF OCCUPANTS. DO NOT USE WITHOUT GUARD RAILS IN PLACE, AND ENTRY GATE PROPERLY SECURED.

- AND ENTRY CATE PROPERLY SECURED.

 DO NOT USE IF WORK PLATFORM SNOT WORKING PROPERLY OR IT ANY PART IS DAMAGED OR WORN.

 DO NOT USE HEAR MOVING VEHICLES OR CRANES.

 DO NOT STAND OR SIT ON GUARDRALS,
 ALL PERSONNES SHALL ALWAYS MAINTAIN FIRM POOTING ON PLATFORM FLOOR.

 DO NOT USE WHALE UNIDER THE INFLUENCE OF ALCOHOL OR BORUS.
- ALCOHOL OR DRUGS.
 DO NOT OVERRIDE SAFETY DEVICES.
 DO NOT LEAVE MACHINE UNATTENDED WITH KEY
 IN THE SWITCH.
- DO NOT RAISE PLATFORM WHILE MACHINE IS ON A TRUCK, FORKLIFT, OR OTHER DEVICE OR VEHICLE. DO NOT USE LADDER, SCAFFOLDING, OR OTHER DEVICES TO INCREASE SIZE OR WORKING HEIGHT OF PLATFORM.
- DO NOT ENTER OR EXIT PLATFORM WHILE IN MOTION
- DO NOT RECHARGE BATTERIES NEAR SPARKS OR OPEN FLAME, BATTERIES EMIT HIGHLY EXPLOSIVE HYDROGEN GAS. DO NOT PERFORM SERVICE ON THE MACHINE WITHOU PROPERLY SUPPORTING ELEVATING ASSEMBLY.
- DO NOT ATTACH OVERHANGING LOADS O INCREASE PLATFORM SIZE.

IMPROPER OPERATION OF THIS MACHINE COULD CAUSE DEATH OR SERIOUS INJURY.

8

YOU MUST NOT OPERATE THIS MACHINE: UNLESS YOU HAVE BEEN AUTHORIZED TO USE AND TRAINED IN THE SAFE OPERATION OF THIS MACHINE

AINING INCLUDES COMPLETE KNOWLEDGE OF IE SAFETY AND OPERATION INSTRUCTIONS THE SAFETY AND OPERATION INSTRUCTIONS CONTAINED IN THE MANUFACTURERS MANUA ANSI MANUAL OF RESPONSIBILITIES, YOUR EMPLOYERS WORK RULES AND APPLICABLE GOVERNMENTAL REGULATIONS.

AN UNAUTHORIZED AND UNTRAINED OPERATOR SUBJECTS THEMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.



ELECTROCUTION HAZARD THIS MACHINE IS NOT INSULATED

THIS MACHINE DOES NOT PROVIDE PROTECTION CONTACT WITH OR PROXIMITY TO AN ELECTRICALLY CHARGED CONDUCTOR.

YOU MUST MAINTAIN A CLEARANCE OF AT LEAST TEN (10) FEET BETWEEN ANY PART OF THIS MACHINE OR 11S LOAD AND ANY ELECTRICAL LINE OR APPARATUS CARRYIN TO 50,000 YOUTS. ONE FOOT OF ADDITIONAL CLEARANCE IS REQUIRED FOR EVERY ADDITIONAL 30,000 VOLTS OR LESS.

DEATH OR SERIOUS INJURY WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCE





DO NOT ELEVATE PLATFORM OF UNEVEN OR SOFT SURFACES





DEATH OR SERIOUS INJURY WILL RESULT FROM IMPROPER USE OF THIS EQUIPMENT

9

USE OR OPERATION OF AN UNINSPECTED WORK PLATFORM COULD CAUSE DEATH, PERSONAL INJURY

O DO NOT OPERATE THIS WORK PLATFORM IF AN INSPECTION HAS NOT BEEN PERFORMED WITHIN 13 MONTHS OF THE LAST RECORDED INSPECTION DATE.

EAR | STAMP MONTHD/DAV/VEA D INSPECTION | 1ST YEAR 7TH YEAR STAMP MONTH/DAY/YEAR NEXT TO APPROPRIATE YEAR AFTER EACH INSPECTION. 8TH YEAR YEAR AFTER EACH INSPECTION.

- NOTICE CHANGE OF OWNERSHIP OF THIS WORK PLATFORM MUST
BE REPORTED TO MANUFACTURER:
MEC Areial Plutom Sides Corp. 3RD YEAR 9TH YEAR MEC Aerial Platform Sales Corp. 4780 E. Jensen Avenue Fresno, Califlornia 93725 Ph 10TH YEAR

(10)

WARNING

 LANYARD ANCHORAGE POINTS ARE RECOMMENDED FOR WORK POSITIONING RESTRAINTS ONLY.

USE OF FALL ARREST SYSTEMS ATTACHED TO ANCHORAGE POINTS ON MOBILE EQUIPMENT MAY CAUSE MACHINE TO TIP. RESULTING IN SERIOUS INJURY OR DEATH.

(11

CERTIFIED LANYARD ANCHORAGE POINT

(14)



2684 (12)

5TH YEAR













(17 LOCATE CONTROL BOX HERE FOR NORMAL OPERATION OF THIS UNIT


(21)

THIS MACHINE HAS BEEN CONSTRUCTED IN ACCORDANCE WITH CAN B354.2-01.


(13)

A WARNING


DISTANCE FROM GROUND TO LADDER WILL VARY WITH GROUND VARIATIONS. CHECK DISTANCE BEFORE LEAVING PLATFORM.

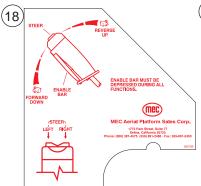

(19

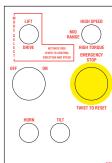

(20)

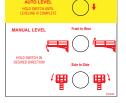

(mec) ILLUSTRATION No. ART_3124

Sigma Level

ANSI Speed Level™ ES Models: Sheet 1 of 4


Decals

Decals, ES Models, ANSI Specification

ITEM	PART NO.	QTY	DESCRIPTION
1	90719	1	Decal, MEC Oval
2	91987	2	3084ES Decal, MEC 3084ES
	92232	2	2684ES Decal, MEC 3084ES
3			
4			
5	8911	1	Decal, Manuals Inside
6	91869	1	Decal, Warning, Sheet Loading
7	91846	1	Decal, Warning Panel
8	91845	1	Decal, Danger, Electric - Tipover - Wind Rating
9	90718	1	Warning, Inspection Report
10	8606	1	Warning, Lanyard (option)
11	8605	5	Decal, Anchorage Point (option)
12	91847	2	3084 Decal, Capacity, 1500 LB
12	92228	2	2684 Decal, Capacity, 1700 LB
13	91849		Decal, Ladder Clearance
14	90739	1	Decal, Made in USA
15	91850	4	Decal, Crush Hazard
16	7156	1	Decal, Front
17	7155	1	Decal, Locate Control Box Here
18	90729	1	Decal, Upper Control Box, Side
19	91862	1	Decal, Upper Controls
20	91843	1	Decal, Level Controls
21	90794	1	CAN B354 (Canadian Only)

... continued




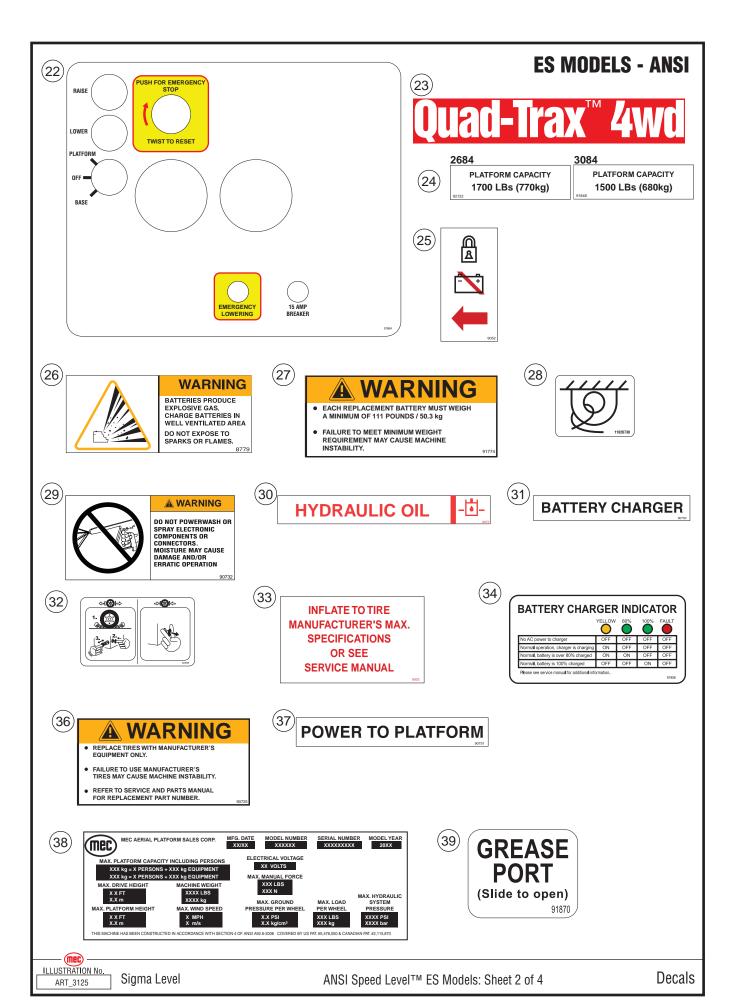


Decals, ES Models, ANSI Specification (continued)

ITEM	PART NO.	QTY	DESCRIPTION
22	91864	1	Decal, Lower Controls
23	91266	2	Decal, Quad Trax 4wd
24	91848	1	3084 Decal, Platform Capacity, Small
24	92122	1	2684 Decal, Platform Capacity, Small
25	9052	1	Decal, Battery Disconnect And Lock
26	8779	1	Warning, Battery, Explosive Gas
27	91774	1	Warning, Battery Replacement
28	11026730	2	Tie Down Point
29	90732	1	Decal, Warning, Pressure Wash
30	6873	1	Decal, Hydraulic Oil
31	90750	1	Decal, Battery Charger
32	92089	1	Decal, Brake Release
33	8502	4	Decal, Tire Inflation
34	91956	1	Decal, Battery Charge Indicator
35			
36	90725	4	Decal, Warning, Tire Replacement
37	90751	1	Decal, Power To Platform
38	91592	1	Serial Plate
39	91870	1	Decal, Greaseport



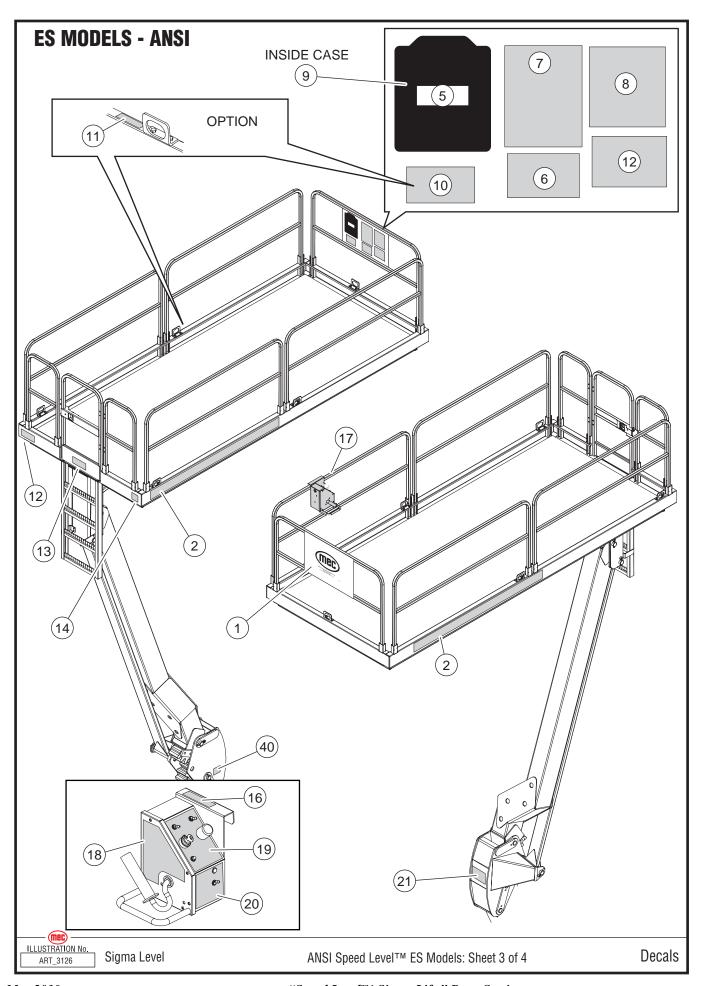

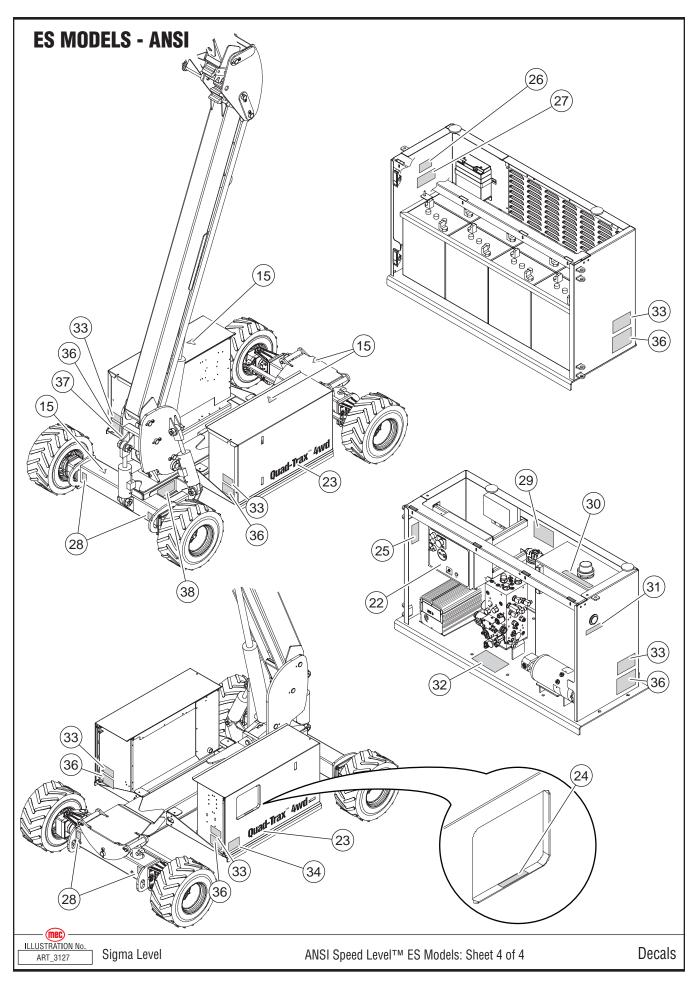




RT MODELS - ANSI

(2)<u>3084RT</u>

2684RT

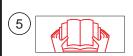

6 **A** WARNING

- SHEET LOADING GATE MUST BE IN LOWERED LOCKED POSITION BEFORE OPERATING FROM PLATFORM.
- OPERATING FROM PLATFORM.

 PLATFORM ENTRANCE MUST BE PROPERLY CLOSED AND ALL GUARDRAILS PROPERLY IN PLACE AND SECURED BEFORE OPERATING FROM PLATFORM.

FAILURE TO FOLLOW INSTRUCTIONS COULD CAUSE DEATH OR PERSONAL INJURY.

A WARNING 7

INSPECT MACHINE AND MAKE SURE THAT IT IS OPERATING PROPERLY, THAT ALL NAME PLATE AND SAFETY AND CONTROL DECALS ARE IN PLACE AND LEGBLE, AND THAT THE MACHINE IS IN ACCORDANCE WITH THE MANULEGISLE, AND THAT THE MACHINE IS IN ACCORDANCE WITH THE MANUFACTURERS MAINTENANCE REQUIREMENTS CONTAINED IN THE CONTROL AND MAINTENANCE MANULA MAD THE DAILY SAFETY CHECKLIST. OPERATE MACHINE WITH EXTREME CAUTION. WATCH FOR OBSTRUCTIONS WHICH MAY STRIKE PLATFORM, PERSONNEL, CONTROLS, OR MACHINE. OPERATE CONTROLS SLOWLY FOR SMOOTH PLATFORM MOTION.

FOR DRIVING WITH PLATFORM LOWERED:

- DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD LIMIT CAPACITY. LOAD TO BE UNIFORMLY DISTRIBUTED. PLACE LOAD NEAR CENTER OF PLATFORM WHEN POSSIBLE.
- DO NOT DRIVE ON SIDE SLOPE IF PLATFORM IS OVER 5% OFF LEVEL.
- DO NOT DRIVE UP OR DOWN A GRADE OF OVER 40%.

FOR DRIVING WITH PLATFORM ELEVATED

- DRIVE ONLY ON A SMOOTH, FIRM, AND PLANAL SURFACE FREE OF OBSTRUCTIONS.
- DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD CAPACITY.
- LOAD MUST BE UNIFORMLY DISTRIBUTED.
- IF TILT WARNING LIGHT ILLUMINATES OR TILT ALARM SOUNDS LOWER PLATFORM AND RE-LEVEL
- USE EXTREME CAUTION

10TH YEAR

OTHER HAZARDS

- DO NOT EXCEED PLATFORM LOAD CAPACITY.
 DO NOT EXCEED MAXIMUM SIDE FORCE AND
 MAXIMUM NUMBER OF OCCUPANTS.
 DO NOT USE WITHOUT GUARD RAILS IN PLACE,
 AND ENTRY GATE PROPERLY SECURED.
- AND ENTRY GATE PROPERTY SECURED.

 DO NOT USE IF WORK PLATFORM IS NOT WORKING PROPERTY OR IF ANY PART IS DAMAGED OR WORN. DO NOT USE NEAR MOVING VEHICLES OR CRANES.
- DO NOT STAND OR SIT ON GUARDRAILS, ALL PERSONNEL SHALL ALWAYS MAINTAIN FIRM FOOTING ON PLATFORM FLOOR.
- DO NOT USE WHILE UNDER THE INFLUENCE OF ALCOHOL OR DRUGS. DO NOT OVERRIDE SAFETY DEVICES. DO NOT LEAVE MACHINE UNATTENDED WITH KEY IN THE SWITCH.
- DO NOT RAISE PLATFORM WHILE MACHINE IS ON A TRUCK, FORKLIFT, OR OTHER DEVICE OR VEHICLE
- DO NOT USE LADDER, SCAFFOLDING, OR OTHER DEVICES TO INCREASE SIZE OR WORKING HEIGHT OF PLATFORM. -UKM. ENTER OR EXIT PLATFORM WHILE IN MOT
- ON NOT ENTER OR EXIT PLATFORM WHILE INDO NOT RECHARGE BATTERIES NEAR SPRINGS OR OPEN FLAME, BATTERIES EMIT HIGHLY EXPLOSIVE HYDROGEN GAS.

 DO NOT PERFORM SERVICE ON THE MACHINE WIT PROPERTY SUPPORTING SELEVATION ASSEMBLY.

IMPROPER OPERATION OF THIS MACHINE COULD CAUSE DEATH OR SERIOUS INJURY.

8

YOU MUST NOT OPERATE
THIS MACHINE:
UNLESS YOU HAVE BEEN AUTHORIZED TO
USE AND TRANNED IN THE SAFE OPERATION
OF THIS MACHINE.



ELECTRICALLY CHARGED CONDUCTOR.
YOU MUST MAINTAIN A CLEARANCE OF AT
LEASTTEN (10) FEET BETWEEN ANY PART
OF THIS MACHINE OR ITS LOAD AND ANY
ELECTRICAL LINE OR APPARATUS CARRY
TO 50,000 VOLTS. ONE FOOT OF ADDITION.
CLEARANCE IS REQUIRED FOR EVERY
ADDITIONAL 30,000 VOLTS OR LESS.

TIP-OVER HAZARDS



DO NOT DRIVE NEAR DROP-OFFS, HOLES, OPEN ELEVATOR SHAFTS, AND LOADING DOCKS



DO NOT ELEVATE PLATFORM ON UNEVEN OR SOFT SURFACES DO NOT DRIVE ONTO UNEVEN OR SOFT SURFACES WHEN ELEVATED







 NOTICE —

CHANGE OF OWNERSHIP OF THIS WORK PLATFORM MUST BE REPORTED TO MANUFACTURER: 4TH YEAR 5TH YEAR

(10)

WARNING

 LANYARD ANCHORAGE POINTS ARE RECOMMENDED FOR WORK POSITIONING RESTRAINTS ONLY.

USE OF FALL ARREST SYSTEMS ATTACHED TO ANCHORAGE POINTS ON MOBILE EQUIPMENT MAY CAUSE MACHINE TO TIP, RESULTING IN SERIOUS INJURY OR DEATH.

(11)

CERTIFIED LANYARD ANCHORAGE POINT



(12)2684













(17 LOCATE CONTROL BOX HERE FOR NORMAL OPERATION OF THIS UNIT

(21) THIS MACHINE HAS BEEN CONSTRUCTED IN ACCORDANCE WITH CAN B354.2-01.

(13)

A WARNING

DISTANCE FROM GROUND TO LADDER WILL VARY WITH GROUND VARIATIONS. CHECK DISTANCE BEFORE LEAVING PLATFORM.

(19 (18) NABLE BAR MUST BE DEPRESSED DURING ALL UNCTIONS. (mec) MEC Aerial Platform Sales Corp (20)

ILLUSTRATION No. ART_3128

Sigma Level

ANSI Speed Level™ RT Models: Sheet 1 of 4


Decals

Decals, RT Models, ANSI Specification

ITEM	PART NO.	QTY	DESCRIPTION
1	90719	1	Decal, MEC Oval
2	91990	2	3084RT Decal, SPEED LEVEL
	92231	2	2684RT Decal, SPEED LEVEL
3			
4			
5	8911	1	Decal, Manuals Inside
6	91869	1	Decal, Warning, Sheet Loading
7	91846	1	Decal, Warning Panel
8	91845	1	Decal, Danger, Electric - Tipover - Wind Rating
9	90718	1	Warning, Inspection Report
10	8606	1	Warning, Lanyard (option)
11	8605	5	Decal, Anchorage Point (option)
12	91847	2	3084 Decal, Capacity, 1500 LB
12	92228	2	2684 Decal, Capacity, 1700 LB
13	91849	1	Decal, Ladder Clearance
14	90739	1	Decal, Made in USA
15	91850	4	Decal, Crush Hazard
16	7156	1	Decal, Front
17	7155	1	Decal, Locate Control Box Here
18	90729	1	Decal, Upper Control Box, Side
19	91158	1	Decal, Upper Controls
20	91843	1	Decal, Level Controls
21	90794	1	CAN B354 (Canadian Only)

... continued




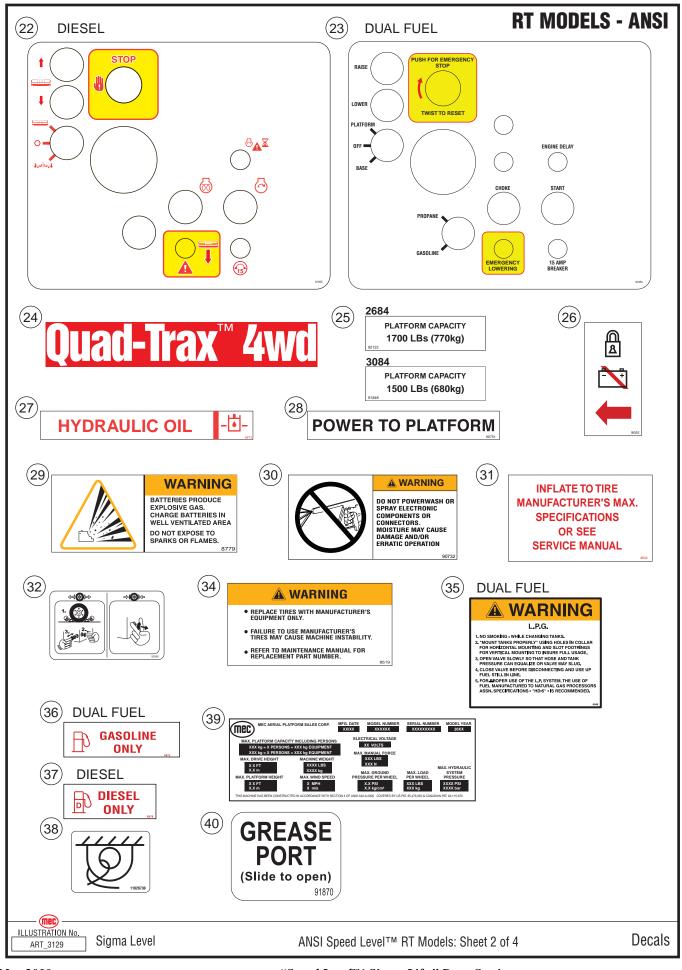


Decals, RT Models, ANSI Specification (continued)

ITEM	PART NO.	QTY	DESCRIPTION
22	91930	1	Decal, Lower Controls DIESEL
23	91854	1	Decal, Lower Controls DUAL FUEL
24	91266	2	Decal, Quad Trax 4wd
25	91848	1	3084 Decal, Platform Capacity, Small
20	92122	1	2684 Decal, Platform Capacity, Small
26	9052	1	Decal, Battery Disconnect And Lock
27	6873	1	Decal, Hydraulic Oil
28	90751	1	Decal, Power To Platform
29	8779	1	Warning, Battery, Explosive Gas
30	90732	1	Decal, Warning, Pressure Wash
31	8502	4	Decal, Tire Inflation
32	92089	1	Decal, Brake Release
33			
34	8519	4	Decal, Warning, Tire Replacement
35	6948	1	Decal, Warning, LPG DUAL FUEL
36	6872	1	Decal, Gasoline Only DUAL FUEL
37	9378	1	Decal, Diesel Only DIESEL
38	11026730	2	Tie Down Point
39	90751	1	Serial Plate
40	91870	1	Decal, Grease Port



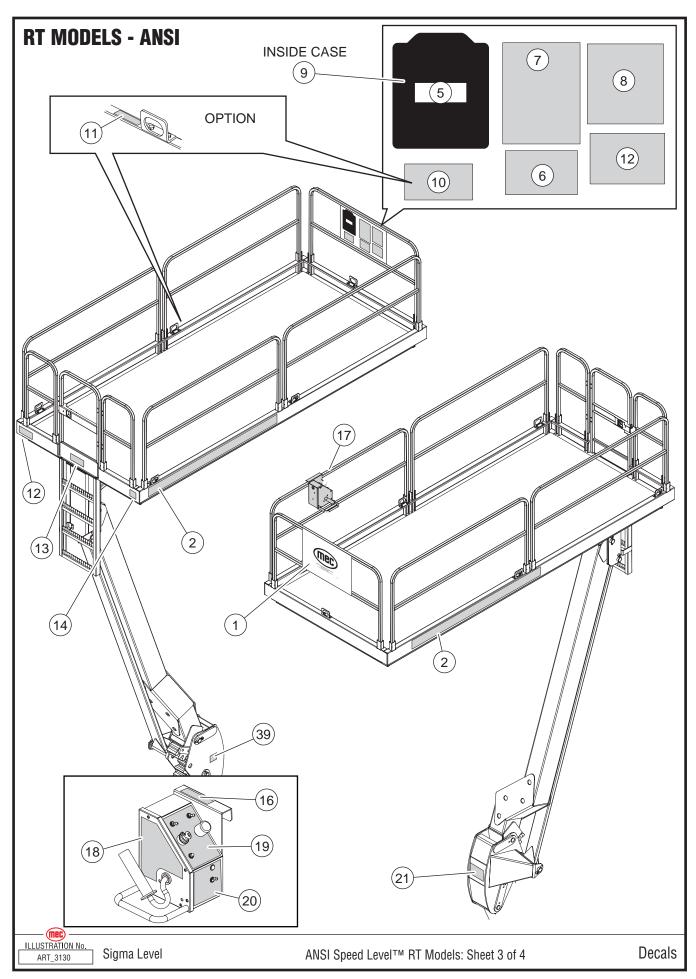

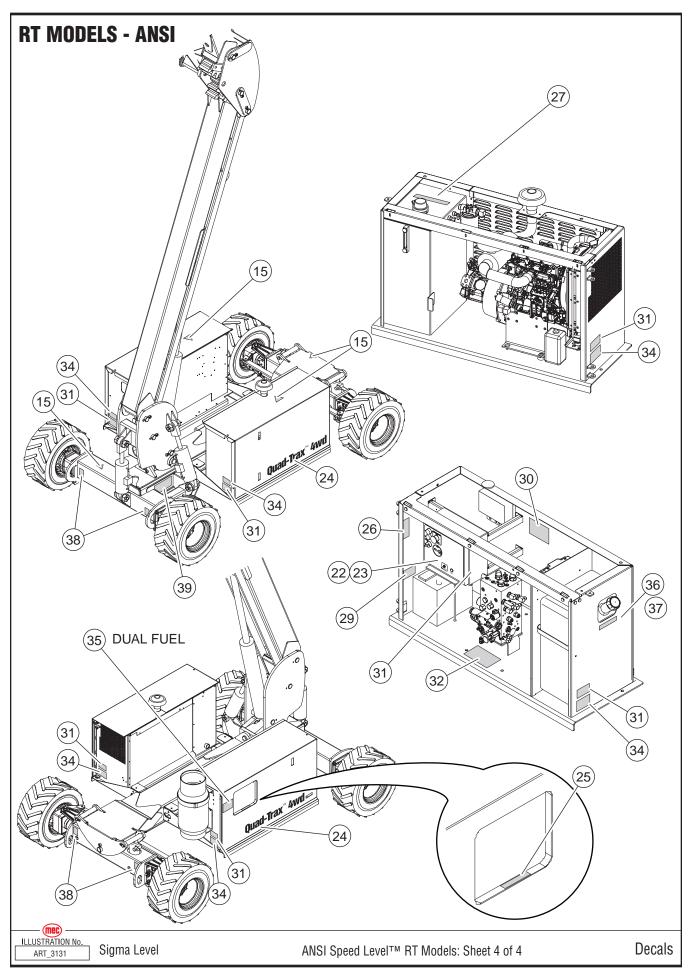

NOTES:





SECTION H

DECALS, CE MODELS

Cont	ENTS	PAGE
	Decals, ES Models	 . H-3
	Decals, ES Models (continued)	 . H-5
	Decals, RT Models	 . H-9
	Decals, RT Models (continued)	 H-11





ES MODELS - CE

(2)3084ES

mec 3084ES SPEED LEVEL

2684ES



6





- SHEET LOADING GATE MUST BE IN LOWERED LOCKED POSITION BEFORE OPERATING FROM PLATFORM.
- OPERATING FROM PLATFORM.

 **PLATFORM ENTRANCE MUST BE
 PROPERLY CLOSED AND ALL
 GUARDRAILS PROPERLY IN PLACE
 AND SECURED BEFORE OPERATING
 FROM PLATFORM.

FAILURE TO FOLLOW INSTRUCTIONS COULD CAUSE DEATH OR PERSONAL INJURY.

7 **A WARNING**

INSPECT MACHINE AND MAKE SURE THAT IT IS OPERATING PROPERLY, THAT ALL NAME PLATE AND SAFETY AND CONTROL DECALS ARE IN PLACE AND LEGBLE, AND THAT THE MACHINE IS IN ACCORDANCE WITH THE MANUFACTURERS AND THAT THAT REQUIREMENTS CONTAINED IN THE OPERATION AND MAINTENANCE REQUIREMENTS CONTAINED IN THE

OPERATE MACHINE WITH EXTREME CAUTION. WATCH FOR OBSTRUCTIONS WHICH MAY STRIKE PLATFORM, PERSONNEL, CONTROLS, OR MACHINE. OPERATE CONTROLS SLOWLY FOR SMOOTH PLATFORM MOTION.

FOR DRIVING WITH PLATFORM LOWERED:

- DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD LIMIT CAPACITY. LOAD TO BE UNIFORMLY DISTRIBUTED. PLACE LOAD NEAR CENTER OF PLATFORM WHEN POSSIBLE.
- DO NOT DRIVE ON SIDE SLOPE IF PLATFORM IS OVER 5% OFF LEVEL.
- DO NOT DRIVE UP OR DOWN A GRADE OF OVER 40%.

FOR DRIVING WITH PLATFORM ELEVATED:

- DRIVE ONLY ON A SMOOTH, FIRM, AND PLANAR SURFACE FREE OF OBSTRUCTIONS.
- DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD CAPACITY.
- . LOAD MUST BE UNIFORMLY DISTRIBUTED
- IF TILT WARNING LIGHT ILLUMINATES OR TILT ALARM SOUNDS LOWER PLATFORM AND RE-LEVEL
- USE EXTREME CAUTION

OTHER HAZARDS

- DO NOT EXCEED PLATFORM LOAD CAPACITY.
 DO NOT EXCEED MAXIMUM SIDE FORCE AND
 MAXIMUM NUMBER OF OCCUPANTS.
 DO NOT USE WITHOUT GUARD RAILS IN PLACE,
 AND ENTRY GATE PROPERLY SECURED.

 - AND ENTRY GALE PROPERTY SECURED.

 DO NOT USE IF WORK PLATFORM IS NOT WORKING
 PROPERLY OR IF ANY PART IS DAMAGED OR WORN
 DO NOT USE NEAR MOVING VEHICLES OR CRANES
 - DO NOT STAND OR SIT ON GUARDRAILS, ALL PERSONNEL SHALL ALWAYS MAINTAIN FIRM FOOTING ON PLATFORM FLOOR.
 - DO NOT USE WHILE UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.

 - ALCOHOL OR DRUGS.

 DO NOT OVERRIDE SAFETY DEVICES.

 DO NOT LEAVE MACHINE UNATTENDED WITH KEY IN THE SWITCH.
 - DO NOT RAISE PLATFORM WHILE MACHINE IS ON A TRUCK, FORKLIFT, OR OTHER DEVICE OR VEHICLE DO NOT USE LADDER, SCAFFOLDING, OR OTHER DEVICES TO INCREASE SIZE OR WORKING HEIGHT OF PLATFORM. DO NOT ENTER OR EXIT PLATFORM WHILE IN MOTI

 - DO NOT ENTIRY OR EXTITING PORNING HILLS IN M.
 DO NOT RECHARGE BATTERIES NEAR
 SPARKS OR OPEN FLAME, BATTERIES EMIT
 HIGHLY EXPLOSIVE HYDROGEN GAS.
 DO NOT PERFORM SERVICE ON THE MACHINE W
 PROPERLY SUPPORTING ELEVATING ASSEMBLY.

IMPROPER OPERATION OF THIS MACHINE COULD CAUSE DEATH OR SERIOUS INJURY

8

YOU MUST NOT OPERATE THIS MACHINE: UNLESS YOU HAVE BEEN AUTHORIZED TO USE AND TRAINED IN THE SAFE OPERATION OF THIS MACHINE.

AN UNAUTHORIZED AND UNTRAINED OPERATOR SUBJECTS THEMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.

YOU MUST MAINTAIN A CLEARANCE OF AT LEAST TEN (10) FEET BETWEEN ANY PART OF THIS MACHINE OR ITS LOAD AND ANY ELECTRICAL LIME OR APPARATUS CARRY! TO 50,000 VOLTS. ONE FOOT OF ADDITIONA CLEARANCE IS REQUIRED FOR EVERY ADDITIONAL 30,000 VOLTS OR LESS.

DEATH OR SERIOUS INJURY WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCE

TIP-OVER HAZARDS



DO NOT DRIVE NEAR DROP-OFFS, HOLES, OPEN ELEVATOR SHAFTS, AND LOADING DOCKS



DO NOT ELEVATE PLATFORM ON UNEVEN OR SOFT SURFACES











SERIOUS INJURY OR DEATH.

CERTIFIED LANYARD 11 ANCHORAGE POINT






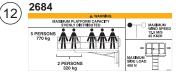

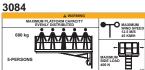




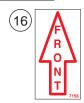




(13) **A WARNING** DISTANCE FROM GROUND TO LADDER WILL VARY WITH GROUND VARIATIONS. CHECK DISTANCE BEFORE LEAVING PLATFORM.

ANCHORAGE POINTS ON MOBILE EQUIPMENT MAY CAUSE MACHINE TO TIP, RESULTING IN

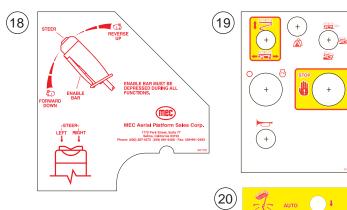

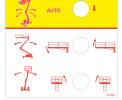



Sigma Level

CE Speed Level™ ES Models: Sheet 1 of 4


Decals

Decals, ES Models, CE Specification

ITEM	PART NO.	QTY	DESCRIPTION			
1	90719	1	Decal, MEC Oval			
2	91987	2	3084ES Decal, MEC 3084ES			
	92232	2	2684ES Decal, MEC 3084ES			
3			-			
4						
5	8911	1	Decal, Manuals Inside			
6	91869	1	Decal, Warning, Sheet Loading			
7	91846	1	Decal, Warning Panel			
8	91845	1	Decal, Danger, Electric - Tipover - Wind Rating			
9	90718	1	Warning, Inspection Report			
10	8606	1	Warning, Lanyard			
11	8605	5	Decal, Anchorage Point			
12	91944	2	3084 - Decal, Capacity, 1500 LB			
12	92121	2	2684 - Decal, Capacity, 1700 LB			
13	91849		Decal, Ladder Clearance			
14	90739	1	Decal, Made in USA			
15	91850	1	Decal, Crush Hazard			
16	7156	1	Decal, Front			
17	7155	1	Decal, Locate Control Box Here			
18	90729	1	Decal, Upper Control Box, Side			
19	91934	1	Decal, Upper Controls			
20	91932	1	Decal, Level Controls			
21						

... continued




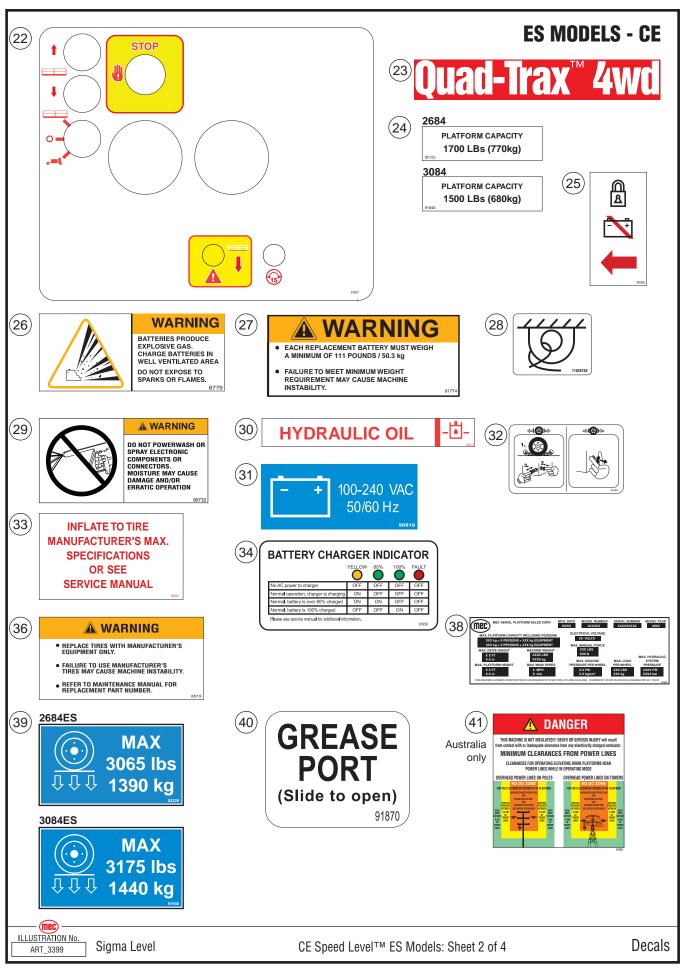


Decals, ES Models, CE Specification (continued)

ITEM	PART NO.	QTY	DESCRIPTION		
22	91931	1	Decal, Lower Controls		
23	91266	2	Decal, Quad Trax 4wd		
24	91848	1	3084 - Decal, Platform Capacity, Small		
24	92122	1	2684 - Decal, Platform Capacity, Small		
25	9052	1	Decal, Battery Disconnect And Lock		
26	8779	1	Varning, Battery, Explosive Gas		
27	91774	1	Warning, Battery Replacement		
28	11026730	1	Tie Down Point		
29	90732	1	Decal, Warning, Pressure Wash		
30	6873	1	Decal, Hydraulic Oil		
31	90919	1	Decal, Battery Charger		
32	92089	1	Decal, Brake Release		
33	8502	4	Decal, Tire Inflation		
34	91956	1	Decal, Battery Charge Indicator		
35	8867	1	Tag, Warning		
36	8519	4	Decal, Warning, Tire Replacement		
37	90751	1	Decal, Power To Platform		
38	91775	1	Serial Plate		
39	91946	4	3084ES - Decal, Wheel Load		
งฮ	92229	4	2684ES - Decal, Wheel Load		
40	91870	1	Decal, Grease Port		
41	91325	1	Decal, Danger, Electrocution Hazard (AUS Only)		



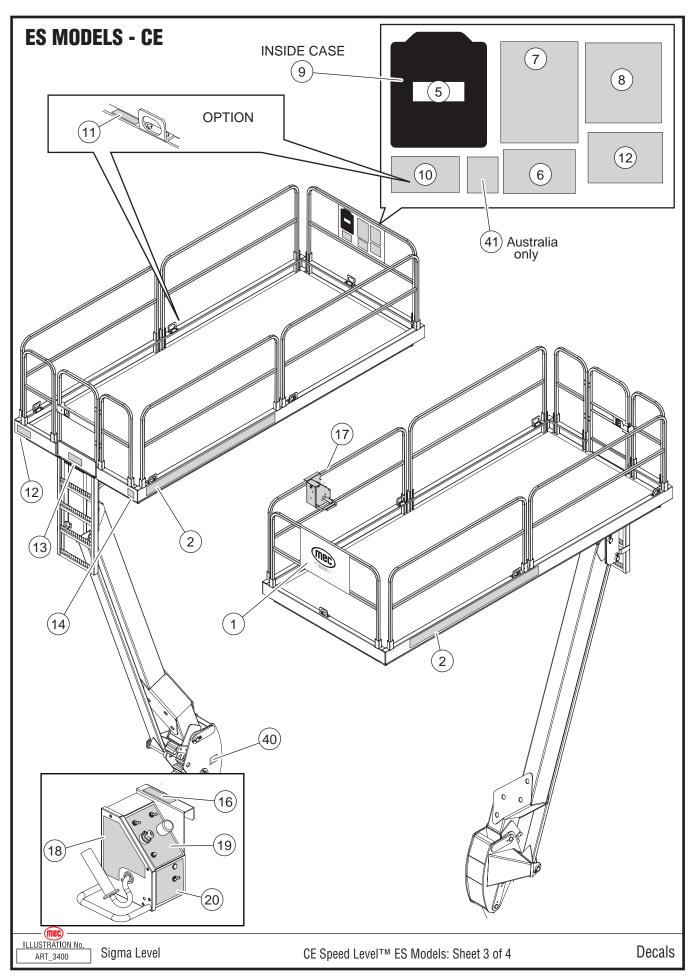

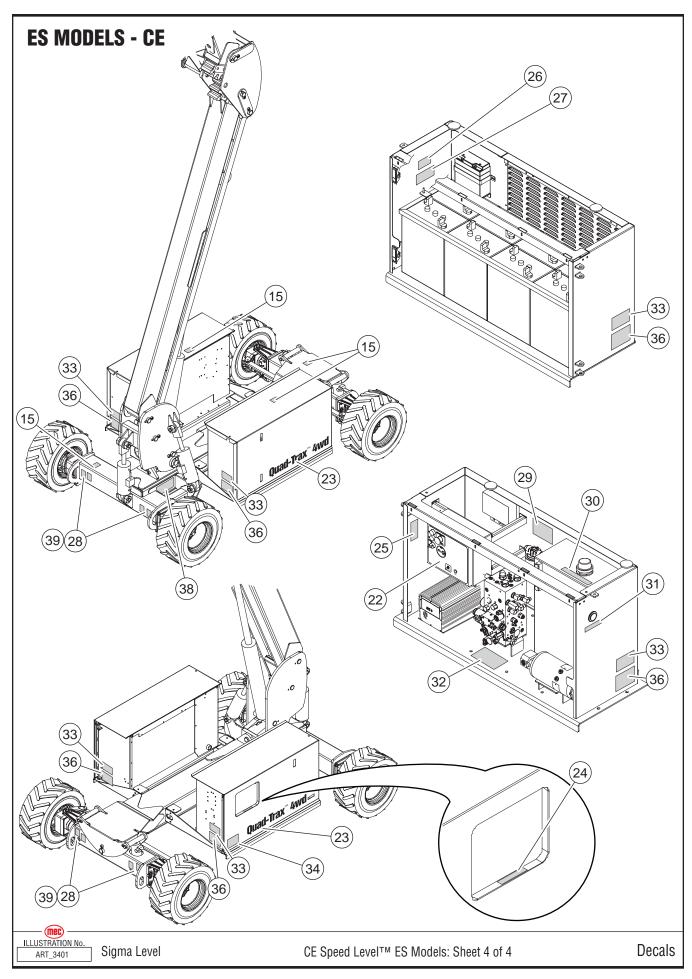



A WARNING

SHEET LOADING GATE MUST BE IN LOWERED LOCKED POSITION BEFORE OPERATING FROM PLATFORM.

OPERATING FROM PLATFORM.

**PLATFORM ENTRANCE MUST BE
PROPERLY CLOSED AND ALL
GUARDRAILS PROPERLY IN PLACE
AND SECURED BEFORE OPERATING
FROM PLATFORM.

FAILURE TO FOLLOW INSTRUCTIONS COULD CAUSE DEATH OR PERSONAL INJURY.

RT MODELS - CE

(2)<u>3084RT</u>

3084RT SPEED LEVEL® mec

2684RT



6





7 **A WARNING**

INSPECT MACHINE AND MAKE SURE THAT IT IS OPERATING PROPERLY, THAT ALL NAME PLATE AND SAFETY AND CONTROL DECALS ARE IN PLACE AND LEGBLE, AND THAT THE MACHINE IS IN ACCORDANCE WITH THE MANUFACTURERS AND THAT THAT REQUIREMENTS CONTAINED IN THE OPERATION AND MAINTENANCE REQUIREMENTS CONTAINED IN THE

OPERATE MACHINE WITH EXTREME CAUTION. WATCH FOR OBSTRUCTIONS WHICH MAY STRIKE PLATFORM, PERSONNEL, CONTROLS, OR MACHINE. OPERATE CONTROLS SLOWLY FOR SMOOTH PLATFORM MOTION.

FOR DRIVING WITH PLATFORM LOWERED:

- DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD LIMIT CAPACITY. LOAD TO BE UNIFORMLY DISTRIBUTED. PLACE LOAD NEAR CENTER OF PLATFORM WHEN POSSIBLE.
- DO NOT DRIVE ON SIDE SLOPE IF PLATFORM IS OVER 5% OFF LEVEL.
- DO NOT DRIVE UP OR DOWN A GRADE OF OVER 40%.

FOR DRIVING WITH PLATFORM ELEVATED:

- DRIVE ONLY ON A SMOOTH, FIRM, AND PLANAR SURFACE FREE OF OBSTRUCTIONS.
- DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD CAPACITY.
- . LOAD MUST BE UNIFORMLY DISTRIBUTED
- IF TILT WARNING LIGHT ILLUMINATES OR TILT ALARM SOUNDS LOWER PLATFORM AND RE-LEVEL
- USE EXTREME CAUTION

OTHER HAZARDS

- DO NOT EXCEED PLATFORM LOAD CAPACITY.
 DO NOT EXCEED MAXIMUM SIDE FORCE AND
 MAXIMUM NUMBER OF OCCUPANTS.
 DO NOT USE WITHOUT GUARD RAILS IN PLACE,
 AND ENTRY GATE PROPERLY SECURED.

 - AND ENTRY GALE PROPERTY SECURED.

 DO NOT USE IF WORK PLATFORM IS NOT WORKING
 PROPERLY OR IF ANY PART IS DAMAGED OR WORN
 DO NOT USE NEAR MOVING VEHICLES OR CRANES
 - DO NOT STAND OR SIT ON GUARDRAILS, ALL PERSONNEL SHALL ALWAYS MAINTAIN FIRM FOOTING ON PLATFORM FLOOR.
 - DO NOT USE WHILE UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.

 - ALCOHOL OR DRUGS.

 DO NOT OVERRIDE SAFETY DEVICES.

 DO NOT LEAVE MACHINE UNATTENDED WITH KEY IN THE SWITCH.
 - DO NOT RAISE PLATFORM WHILE MACHINE IS ON A TRUCK, FORKLIFT, OR OTHER DEVICE OR VEHICLE DO NOT USE LADDER, SCAFFOLDING, OR OTHER DEVICES TO INCREASE SIZE OR WORKING HEIGHT OF PLATFORM. DO NOT ENTER OR EXIT PLATFORM WHILE IN MOTI

 - DO NOT ENTIRY OR EXTITING PORNING HILLS IN M.
 DO NOT RECHARGE BATTERIES NEAR
 SPARKS OR OPEN FLAME, BATTERIES EMIT
 HIGHLY EXPLOSIVE HYDROGEN GAS.
 DO NOT PERFORM SERVICE ON THE MACHINE W
 PROPERLY SUPPORTING ELEVATING ASSEMBLY.

IMPROPER OPERATION OF THIS MACHINE COULD CAUSE DEATH OR SERIOUS INJURY

8

YOU MUST NOT OPERATE THIS MACHINE: UNLESS YOU HAVE BEEN AUTHORIZED TO USE AND TRAINED IN THE SAFE OPERATION OF THIS MACHINE.

AN UNAUTHORIZED AND UNTRAINED OPERATOR SUBJECTS THEMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.

YOU MUST MAINTAIN A CLEARANCE OF AT LEAST TEN (10) FEET BETWEEN ANY PART OF THIS MACHINE OR ITS LOAD AND ANY ELECTRICAL LIME OR APPARATUS CARRY! TO 50,000 VOLTS. ONE FOOT OF ADDITIONA CLEARANCE IS REQUIRED FOR EVERY ADDITIONAL 30,000 VOLTS OR LESS.

DEATH OR SERIOUS INJURY WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCE

TIP-OVER HAZARDS



DO NOT DRIVE NEAR DROP-OFFS, HOLES, OPEN ELEVATOR SHAFTS, AND LOADING DOCKS



DO NOT ELEVATE PLATFORM ON UNEVEN OR SOFT SURFACES









 LANYARD ANCHORAGE POINTS ARE RECOMMENDED. FOR WORK POSITIONING RESTRAINTS ONLY.


USE OF FALL ARREST SYSTEMS ATTACHED TO ANCHORAGE POINTS ON MOBILE EQUIPMENT MAY CAUSE MACHINE TO TIP, RESULTING IN SERIOUS INJURY OR DEATH.


11

CERTIFIED LANYARD ANCHORAGE POINT






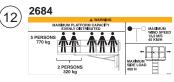

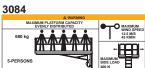





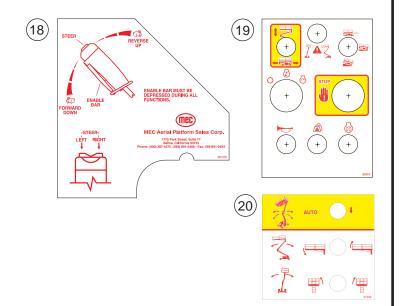



Sigma Level

CE Speed Level™ RT Models: Sheet 1 of 4


Decals

Decals, RT Models, CE Specification

ITEM	PART NO.	QTY	DESCRIPTION		
1	90719	1	Decal, MEC Oval		
2	91990	2	3084RT Decal, SPEED LEVEL		
	92231	2	2684RT Decal, SPEED LEVEL		
3					
4					
5	8911	1	Decal, Manuals Inside		
6	91869	1	Decal, Warning, Sheet Loading		
7	91846	1	Decal, Warning Panel		
8	91845	1	Decal, Danger, Electric - Tipover - Wind Rating		
9	90718	1	Warning, Inspection Report		
10	8606	1	Warning, Lanyard		
11	8605	5	Decal, Anchorage Point		
12	91944	2	3084 - Decal, Capacity, 1500 LB		
12	92121	2	2684 - Decal, Capacity, 1700 LB		
13	91849	1	Decal, Ladder Clearance		
14	90739	1	Decal, Made in USA		
15	91850	4	Decal, Crush Hazard		
16	7156	1	Decal, Front		
17	7155	1	Decal, Locate Control Box Here		
18	90729	1	Decal, Upper Control Box, Side		
19	91874	1	Decal, Upper Controls		
20	91932	1	Decal, Level Controls		
21					

... continued




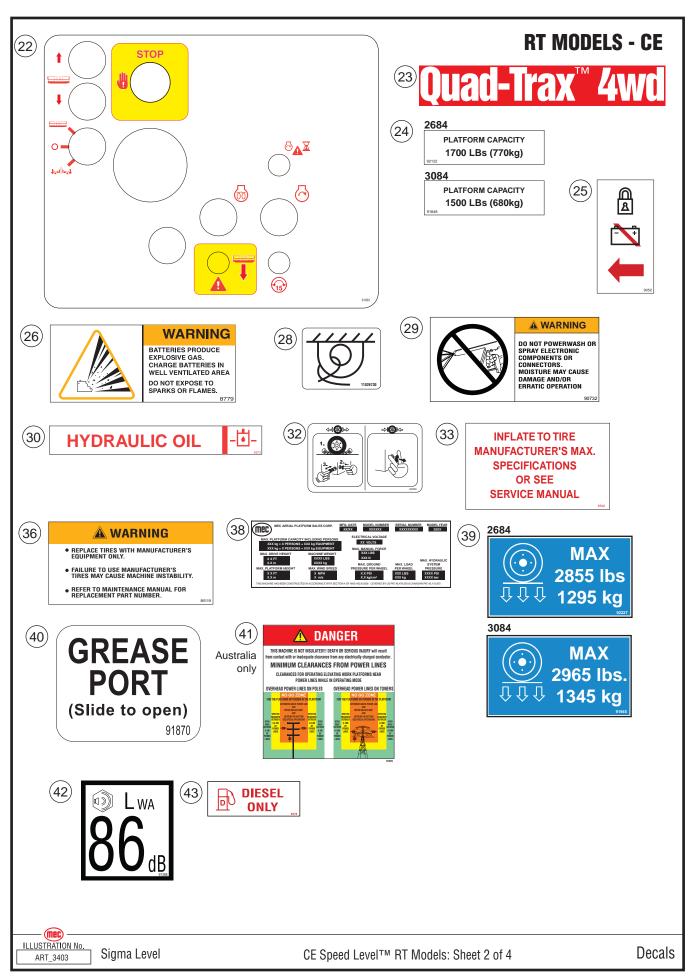


Decals, RT Models, CE Specification (continued)

ITEM	PART NO.	QTY	DESCRIPTION
22	91930	1	Decal, Lower Controls
23	91266	2	Decal, Quad Trax 4wd
24	91848	1	3084 - Decal, Platform Capacity, Small
24	92122	1	2684 - Decal, Platform Capacity, Small
25	9052	1	Decal, Battery Disconnect And Lock
26	8779	1	Warning, Battery, Explosive Gas
27			
28	11026730	1	Tie Down Point
29	90732	1	Decal, Warning, Pressure Wash
30	6873	1	Decal, Hydraulic Oil
31			
32	92089	1	Decal, Brake Release
33	8502	4	Decal, Tire Inflation
34			
35	-		
36	8519	4	Decal, Warning, Tire Replacement
37	-		
38	91775	1	Serial Plate
39	91945	4	3084RT - Decal, Wheel Load
39	92227	4	2684RT - Decal, Wheel Load
40	91870	1	Decal, Grease Port
41	91325	1	Decal, Danger, Electrocution Hazard (AUS Only)
42	91388	1	Decal, Noise Level
43	9378	1	Decal, Diesel Only



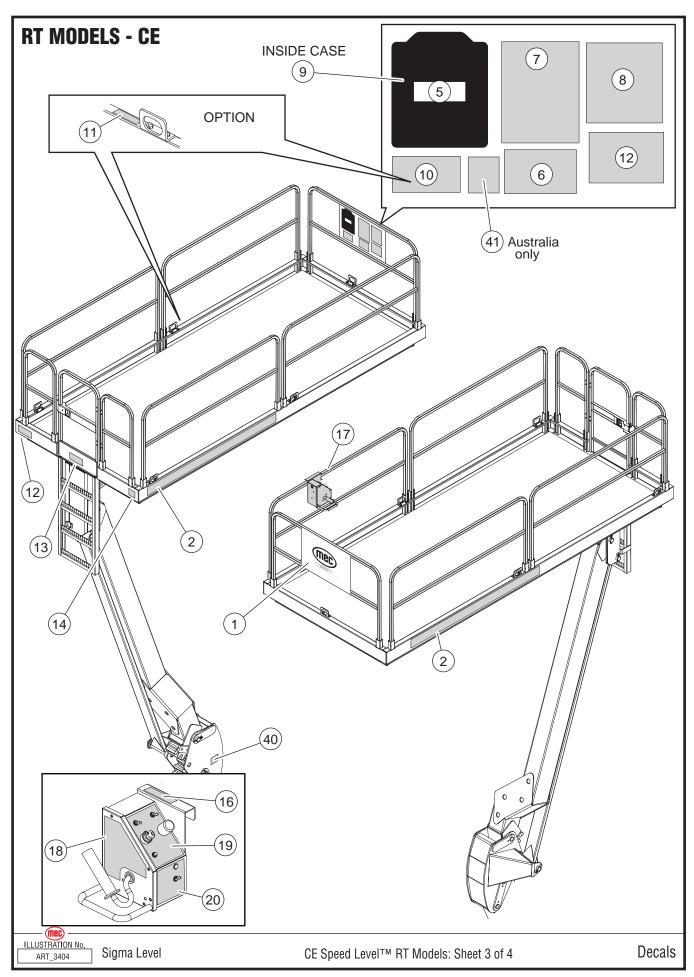

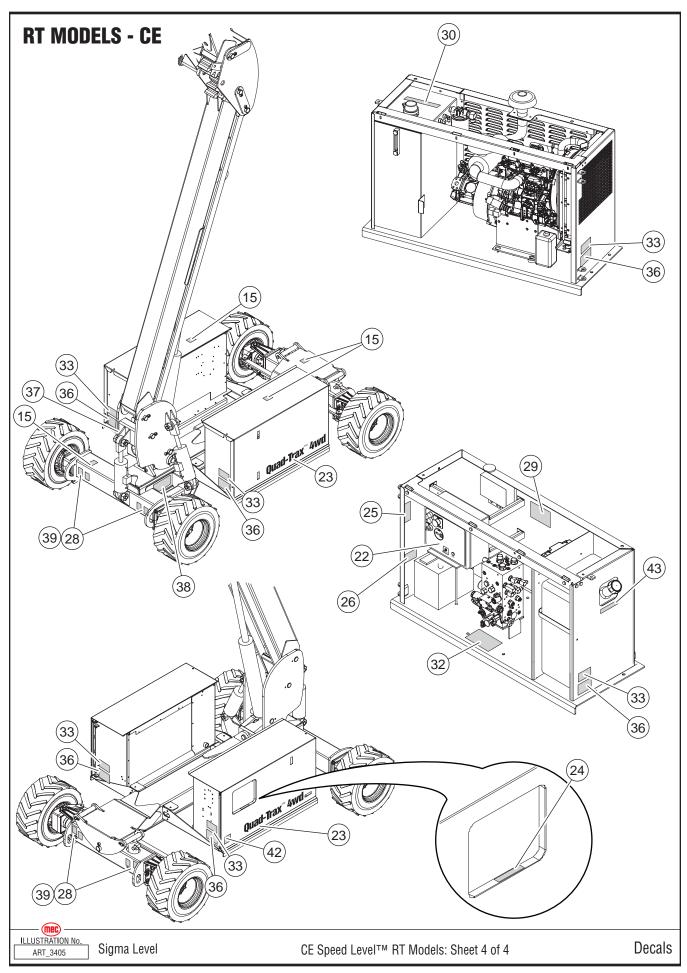

NOTES:





Service Parts Order Form Fax to 559-263-9631

Please fill out complete	tely				
Date:	·	Ordered By: Your Fax No.: Ship to:			
Bill to:					
		-			
Purchase Order I	Number	Ship VIA			
**All orders MUST h	ave a Purchase Order Number	**Fed Ex shipments require Fed Ex account number			
Part Number	Description		Quantity	Price	
All backordered part below:	ts will be shipped when available	via the same sl	nip method as orig	ginal order unless noted	

- Ship complete order only no backorders
- Ship all available parts and contact customer on disposition of backordered parts
- other (please specify)





Limited Owner Warranty

MEC Aerial Platform Sales Corp. warrants its equipment to the original purchaser against defects in material and/or workmanship under normal use and service for one (1) year from date of registered sale or date the unit left the factory if not registered. MEC Aerial Platform Sales Corp. further warrants the structural weldments of the main frame and scissor arms to be free from defects in material or workmanship for five (5) years from date of registered sale or date unit left the factory if not registered. Excluded from such warranty is the battery(s) which carries a ninety (90) day warranty from described purchase date. Warranty claims within such warranty period shall be limited to repair or replacement, MEC Aerial Platform Sales Corp's option, of the defective part in question and labor to perform the necessary repair or replacement based on MEC Aerial Platform Sales Corp's then current flat rate, provided the defective part in question is shipped prepaid to MEC Aerial Platform Sales Corp. and is found upon inspection by MEC Aerial Platform Sales Corp. to be defective in material and/or workmanship. MEC Aerial Platform Sales Corp. shall not be liable for any consequential, incidental or contingent damages whatsoever. Use of other than factory authorized parts; misuse, improper maintenance, or modification of the equipment voids this warranty. The foregoing warranty is exclusive and in lieu of all other warranties, express or implied. All such other warranties, including implied warranties of merchantability and of fitness for a particular purpose, are hereby excluded. No Dealer, Sales Representative, or other person purporting to act on behalf of MEC Aerial Platform Sales Corp. is authorized to alter the terms of this warranty, or in any manner assume on behalf of MEC Aerial Platform Sales Corp. any liability or obligation which exceeds MEC Aerial Platform Sales Corp's obligations under this warranty.



Aerial Platform Sales Corp.