



[Click Here To View
Item at
www.GapPower.com](http://www.GapPower.com)

*Sales • Rentals
Parts & Service*



Form No. 3379-667 Rev A

Count on it.

Parts Catalog

21in Walk-Behind Aerator

Model No. 23515—Serial No. 313000001 and Up

Model No. 33515—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame Assembly..... 4

Engine and Fuel Tank Assembly 6


Drive Assembly..... 8

Handle Assembly 10

Height Linkage Assembly 12

Tine Assembly 14


Frame Assembly

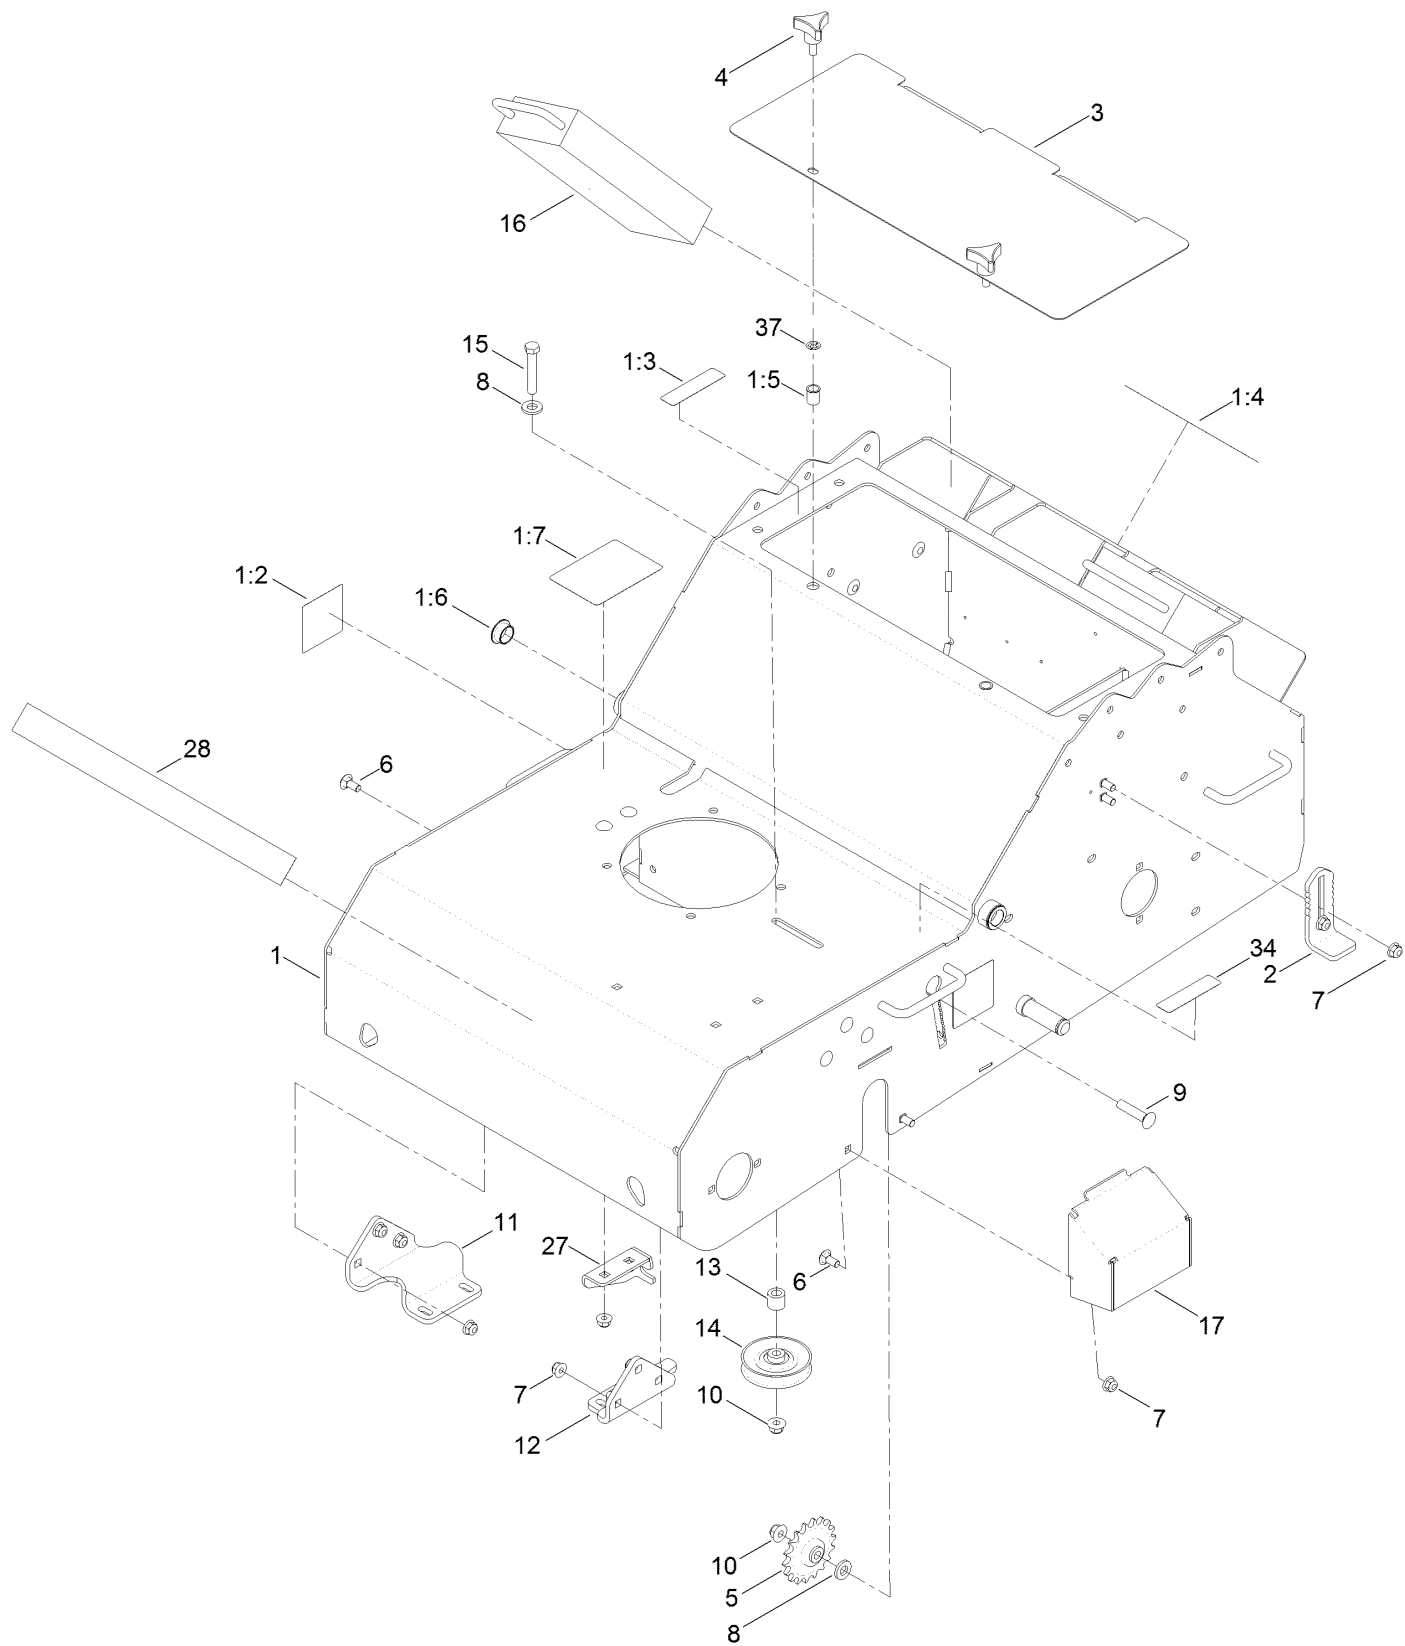

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9867	1	Frame ASM	9	3231-29	2	Screw-CARR
1:2	121-6150	2	Decal-Warning	10	104-8301	3	Nut-Flange, NI
1:3	119-0217	1	Decal-Danger	11	121-4948-03	1	Bracket-Mount Axle, RH
1:4	126-0651	1	Decal-Warning	12	121-4949-03	1	Bracket-Mount Axle, LH
1:5	32148-7	2	Nut-Insert	13	121-6087	1	Bushing-Idler
1:6	108519	2	Bushing-Bronze	14	62-4530	1	Pulley
1:7	126-1209	1	Decal-Service Aid	15	323-11	1	Screw-HH
2	116-9886	2	Stop-Depth	16	121-6080	2	Weight-Aerator
3	126-0974-01	1	Cover-Access	17	121-1981-01	2	Cover-Transaxle
4	109-3351	2	Knob	27	121-6056	1	Bracket-Mounting, Cable
5	121-4915	2	Sprocket-Idler	28	121-6176	1	Decal
6	3230-1	16	Bolt-CARR	34	117-2718	1	Decal-Arrester, Spark
7	104-8300	16	Nut-Flange, NI	37	117-2749	2	Nut-Push
8	87-7480	3	Washer				

Engine and Fuel Tank Assembly

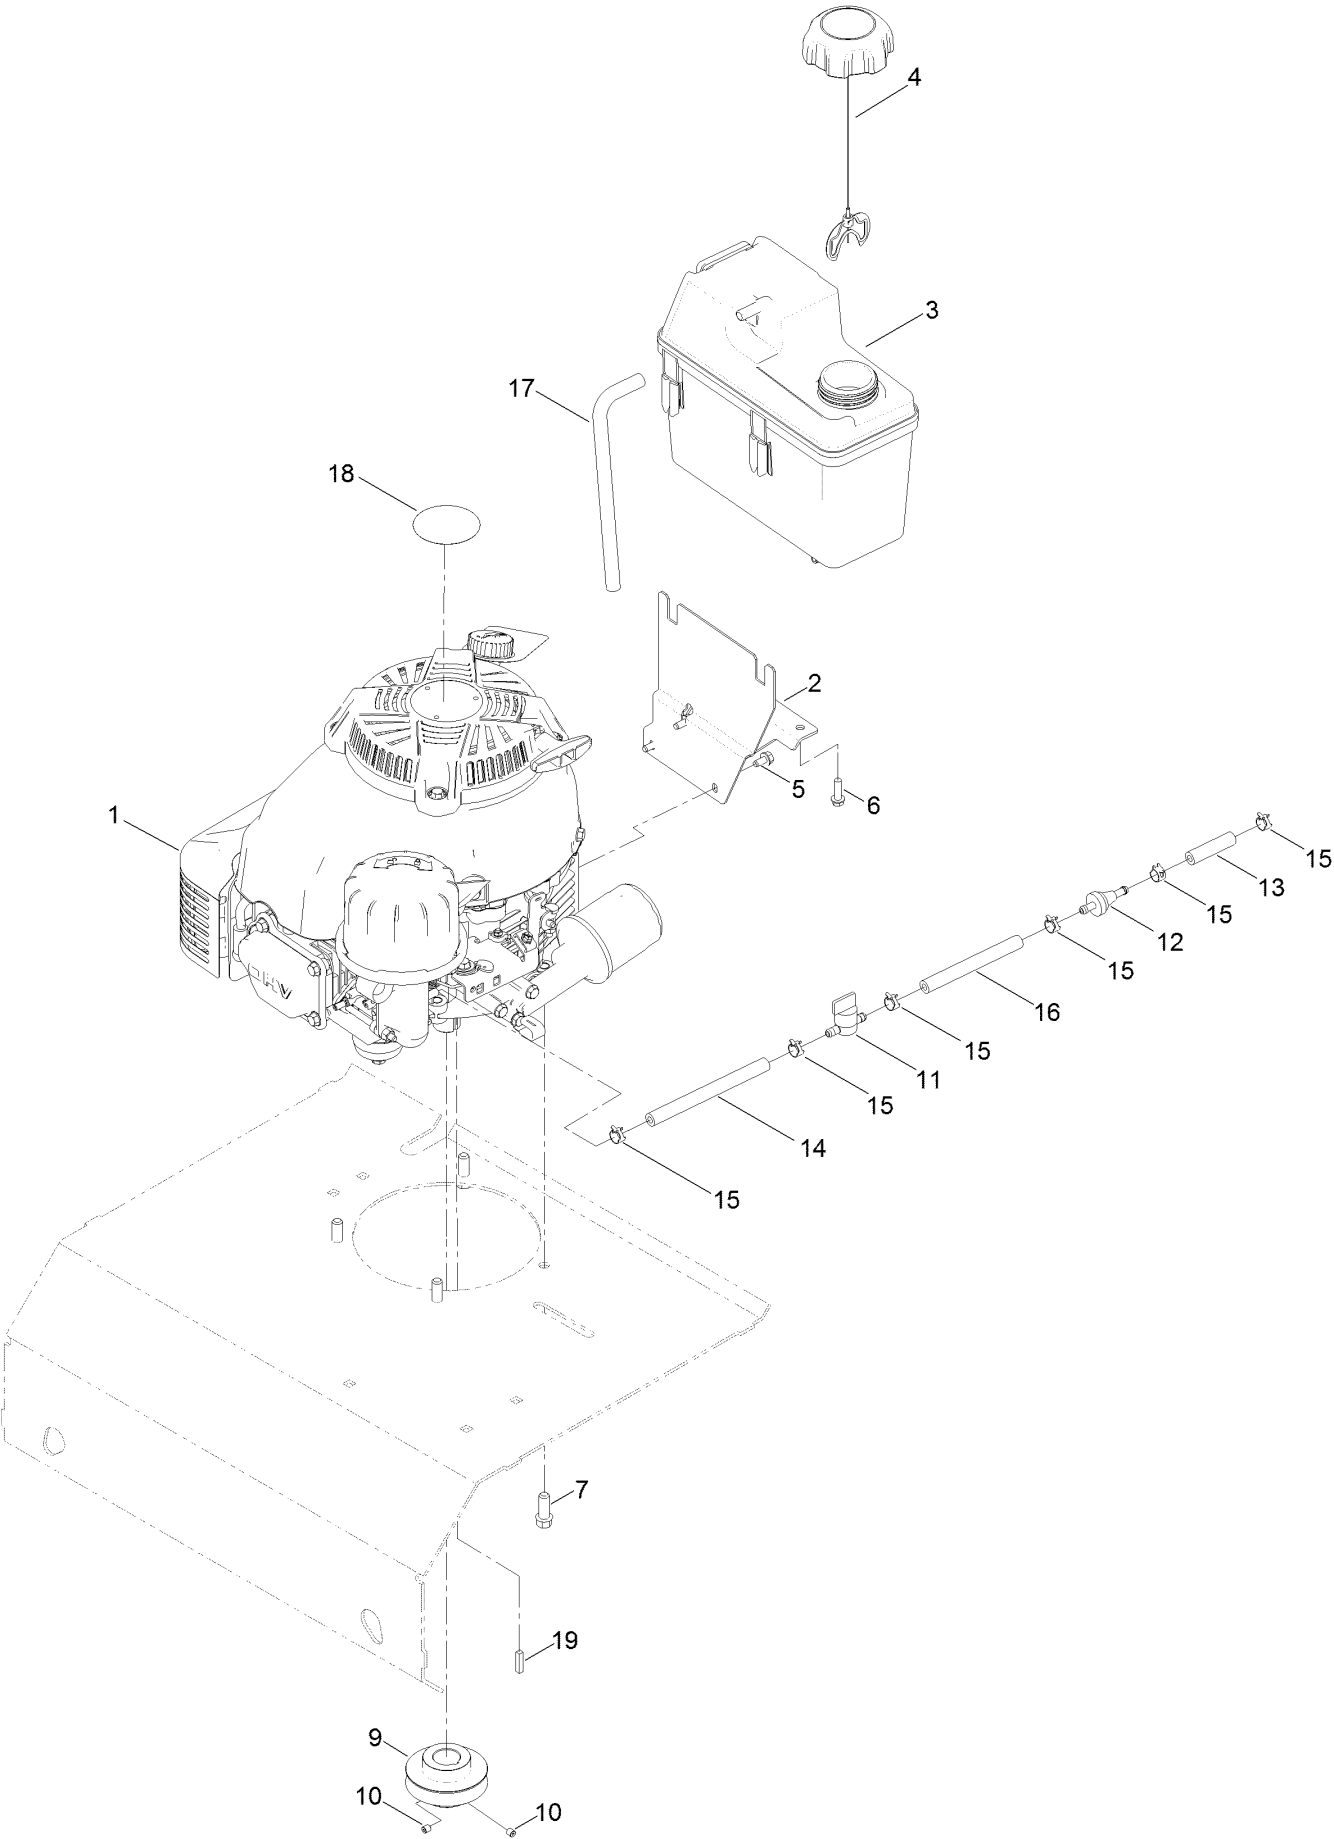

Engine and Fuel Tank Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kawasaki, Fj180V-Bm02-M ● ■	11	1-603770	1	Valve-Fuel
2	115-0954-03	1	Tank Mount ASM	12	71-9280	1	Filter-Fuel
3	125-5066	1	Tank ASM	13	99-9415	1	Hose-Fuel
4	109-6776	1	Cap-Ratchet, Tethered	14	109-0300	1	Hose-Fuel
5	104-2628	3	Screw-HWH	15	2412-98	6	Clamp-Hose
6	46-8091	2	Screw-HWH	16	109-0650	1	Hose-Fuel
7	95-1726	4	Screw-Taptite	17	115-0962	1	Hose-Vent, Canister
9	126-0839	1	Pulley-Driver	18	110-0520	1	Decal
10	3245-35	2	Screw-Set, HSH ▲	19	6366	1	Key

● Not serviced separately

▲ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Obtain parts from www.kawpowerepc.com

Drive Assembly

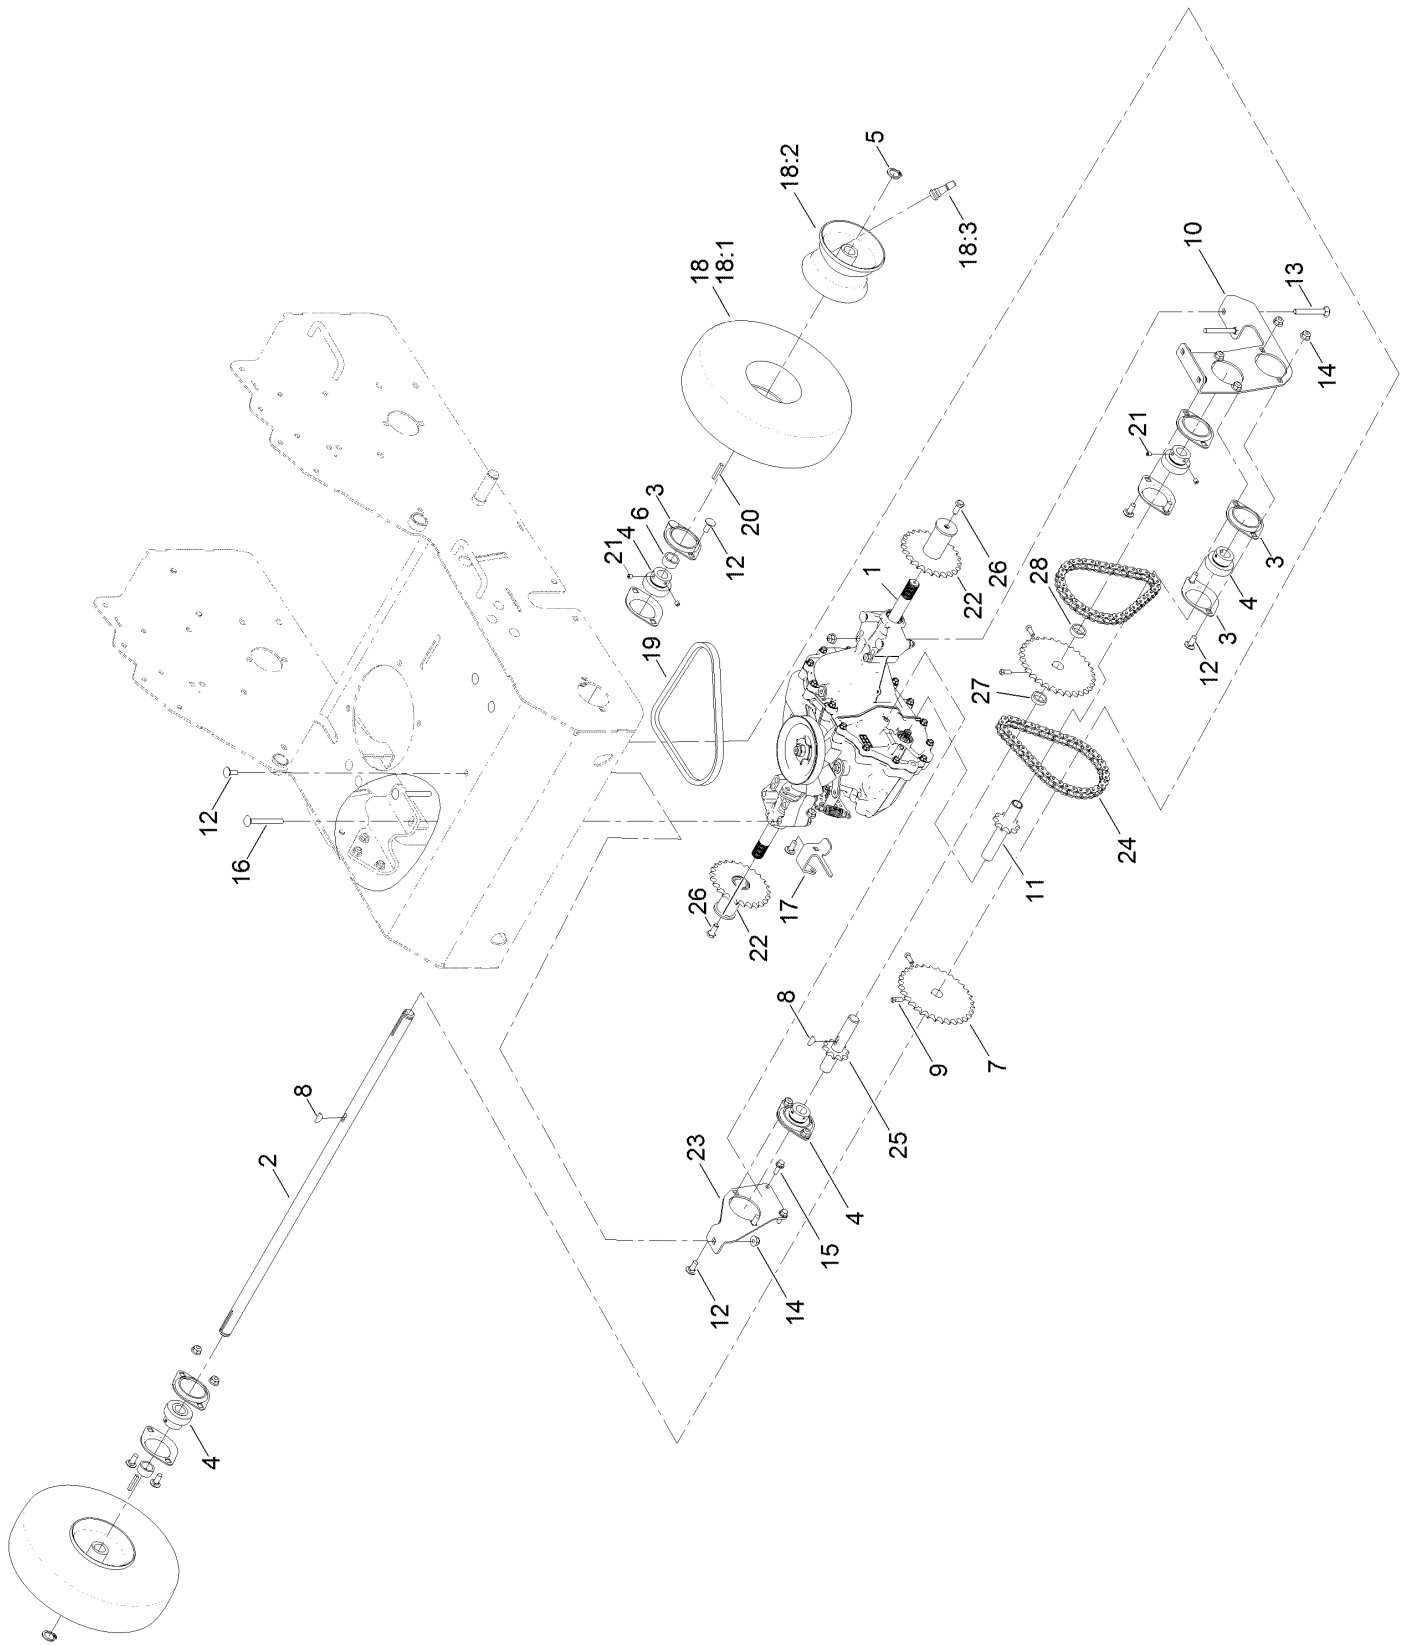


Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4899	1	Transaxle ASM	17	121-6067	1	Angle-Control
2	121-4927	1	Shaft-Wheel	18	120-3550	2	Wheel ASM
3	105-9714	10	Flange-Bearing	18:1	121-6081	1	Tire
4	120-9350	5	Bearing-Lock, Collar	18:2	121-6082	1	Wheel-Rim
5	32120-93	2	Ring-Retaining	18:3	5108	1	Valve
6	121-4931	2	Spacer-Wheel	19	121-1999	1	Belt-Drive
7	121-4934	2	Sprocket	20	92-0049	2	Key-Square
8	3257-5	2	Key-Woodruff	21	3245-35	10	Screw-Set, HSH ●
9	3241-5	4	Screw-Set ●	22	116-9860	2	Sprocket ASM
10	121-4936-03	1	Plate-Bearing	23	121-4932-03	1	Bracket-Support, Shaft
11	121-4937	1	Shaft-Output	24	121-6105	2	Chain-Drive Wheel
12	3230-23	14	Screw-CARR	25	121-6108	1	Shaft-Jack
13	3230-8	2	Screw-CARR	26	3235-6	2	Screw-HH ●
14	104-8300	20	Nut-Flange, NI	27	105-3828	1	Spacer
15	3234-4	2	Screw-HHF	28	94-9524	1	Spacer-Control
16	3230-9	4	Screw-CARR				

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


Handle Assembly

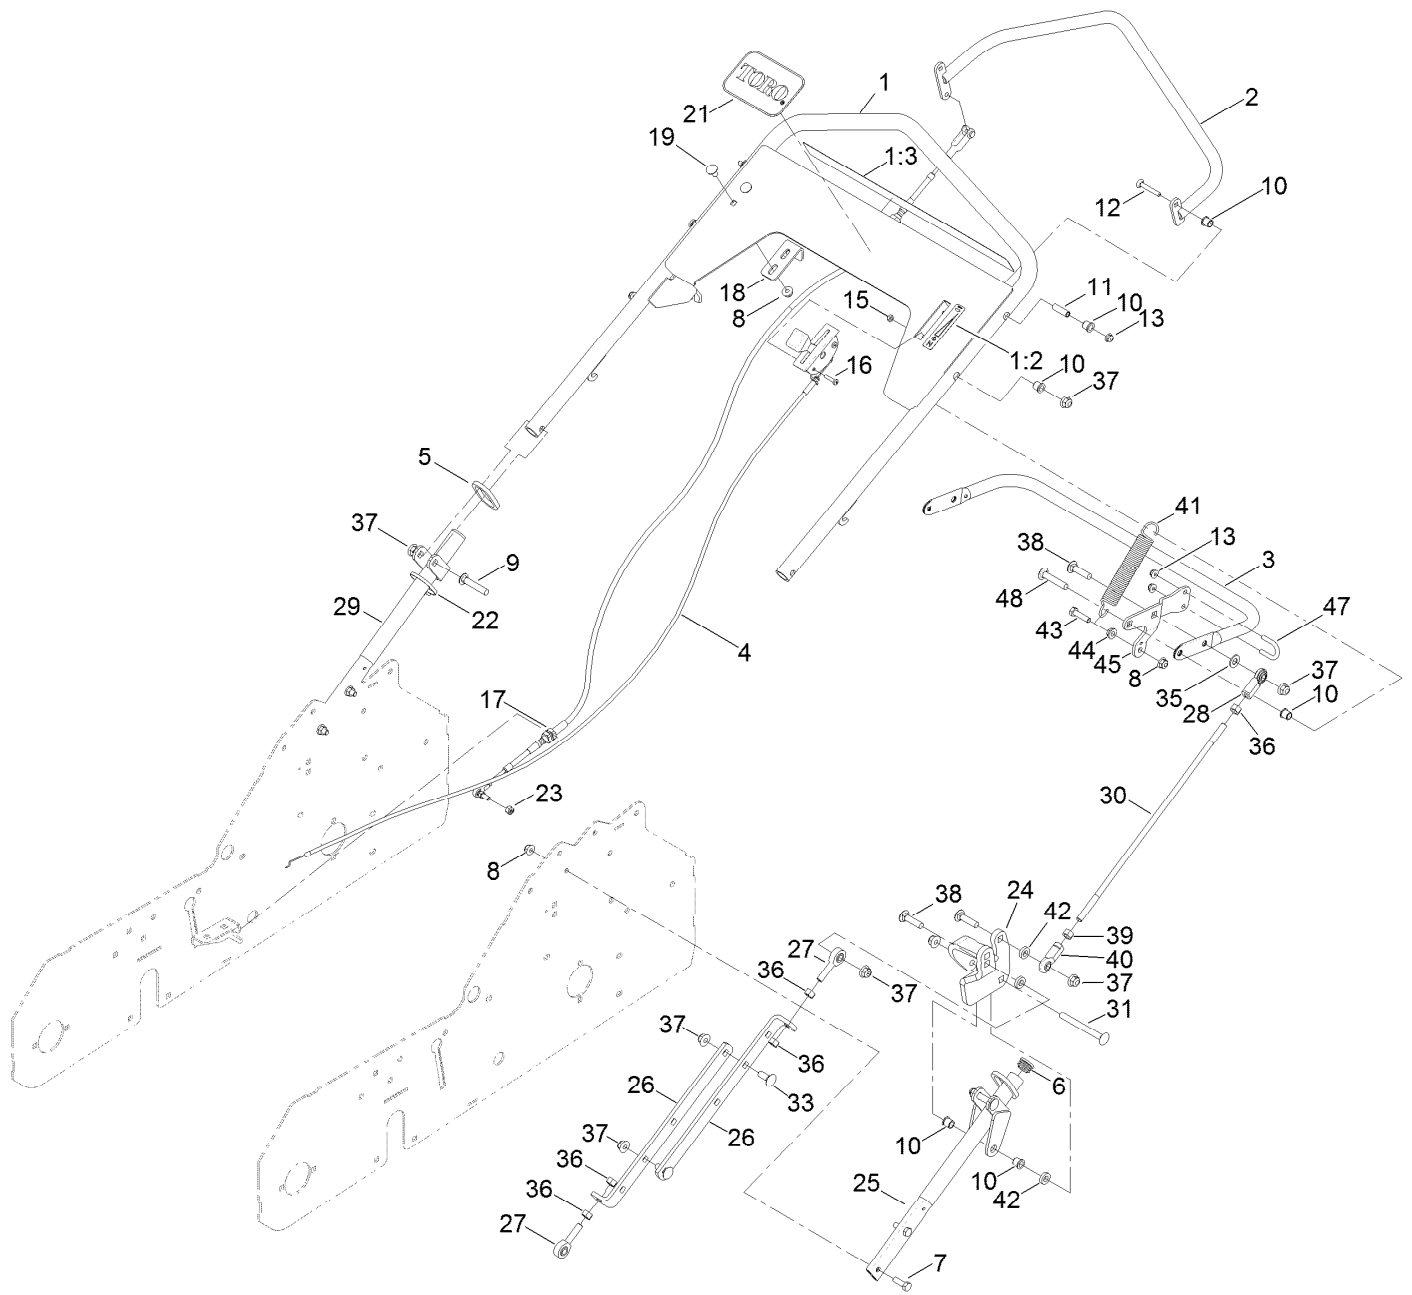

Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0639	1	Handle ASM	24	126-1656-03	1	Bracket-Trunnion
1:2	121-6151	1	Decal-Throttle, Choke	25	116-9883-03	1	Lower Handle ASM
1:3	116-8699	1	Decal-Aerator Control Panel	26	126-0841-03	2	Link-Lift
2	121-6053-03	1	Tube-Control	27	1-613204	2	Balljoint
3	116-9873-03	1	Tube-Handle Lift	28	103-0608	1	Joint-Ball, End
4	116-9898	1	Control-Throttle	29	121-1893-03	1	Handle-Lower
5	121-6202	2	Ring-Handle Lock	30	116-9893	1	Rod-Upper Link
6	121-4870	2	Plug	31	3231-24	1	Screw-CARR
7	322-5	4	Screw-HH	33	3231-2	2	Bolt-CARR
8	104-8300	7	Nut-Flange, NI	35	3256-24	1	Washer-Flat
9	3231-6	2	Screw-CARR	36	3219-3	5	Nut-Hex
10	103-9928	10	Bearing	37	104-8301	9	Nut-Flange, NI
11	121-6060	3	Bushing-Pivot	38	3231-4	3	Screw-CARR
12	3229-5	3	Screw-CARR	39	3219-20	1	Nut-Hex, LH
13	104-7201	5	Nut-HF	40	103-1167	1	Joint-Ball End, LH
15	3296-2	2	Nut-Lock, NI	41	106-2177	1	Spring-Extension
16	3250-27	2	Screw-PPH	42	80-7730	3	Spacer
17	121-6068	1	Cable	43	322-6	1	Screw-HH
18	121-6057	1	Angle-Stop	44	32128-20	1	Nut-HF
19	3230-18	2	Screw-CARR	45	126-1657-03	1	Bracket-Spring
21	67-1300	1	Decal	47	01-170-0040	1	U-Bolt
22	3290-378	1	Tie-Cable	48	117-9971	1	Bolt-Carriage
23	3296-3	1	Nut-Lock				


Height Linkage Assembly

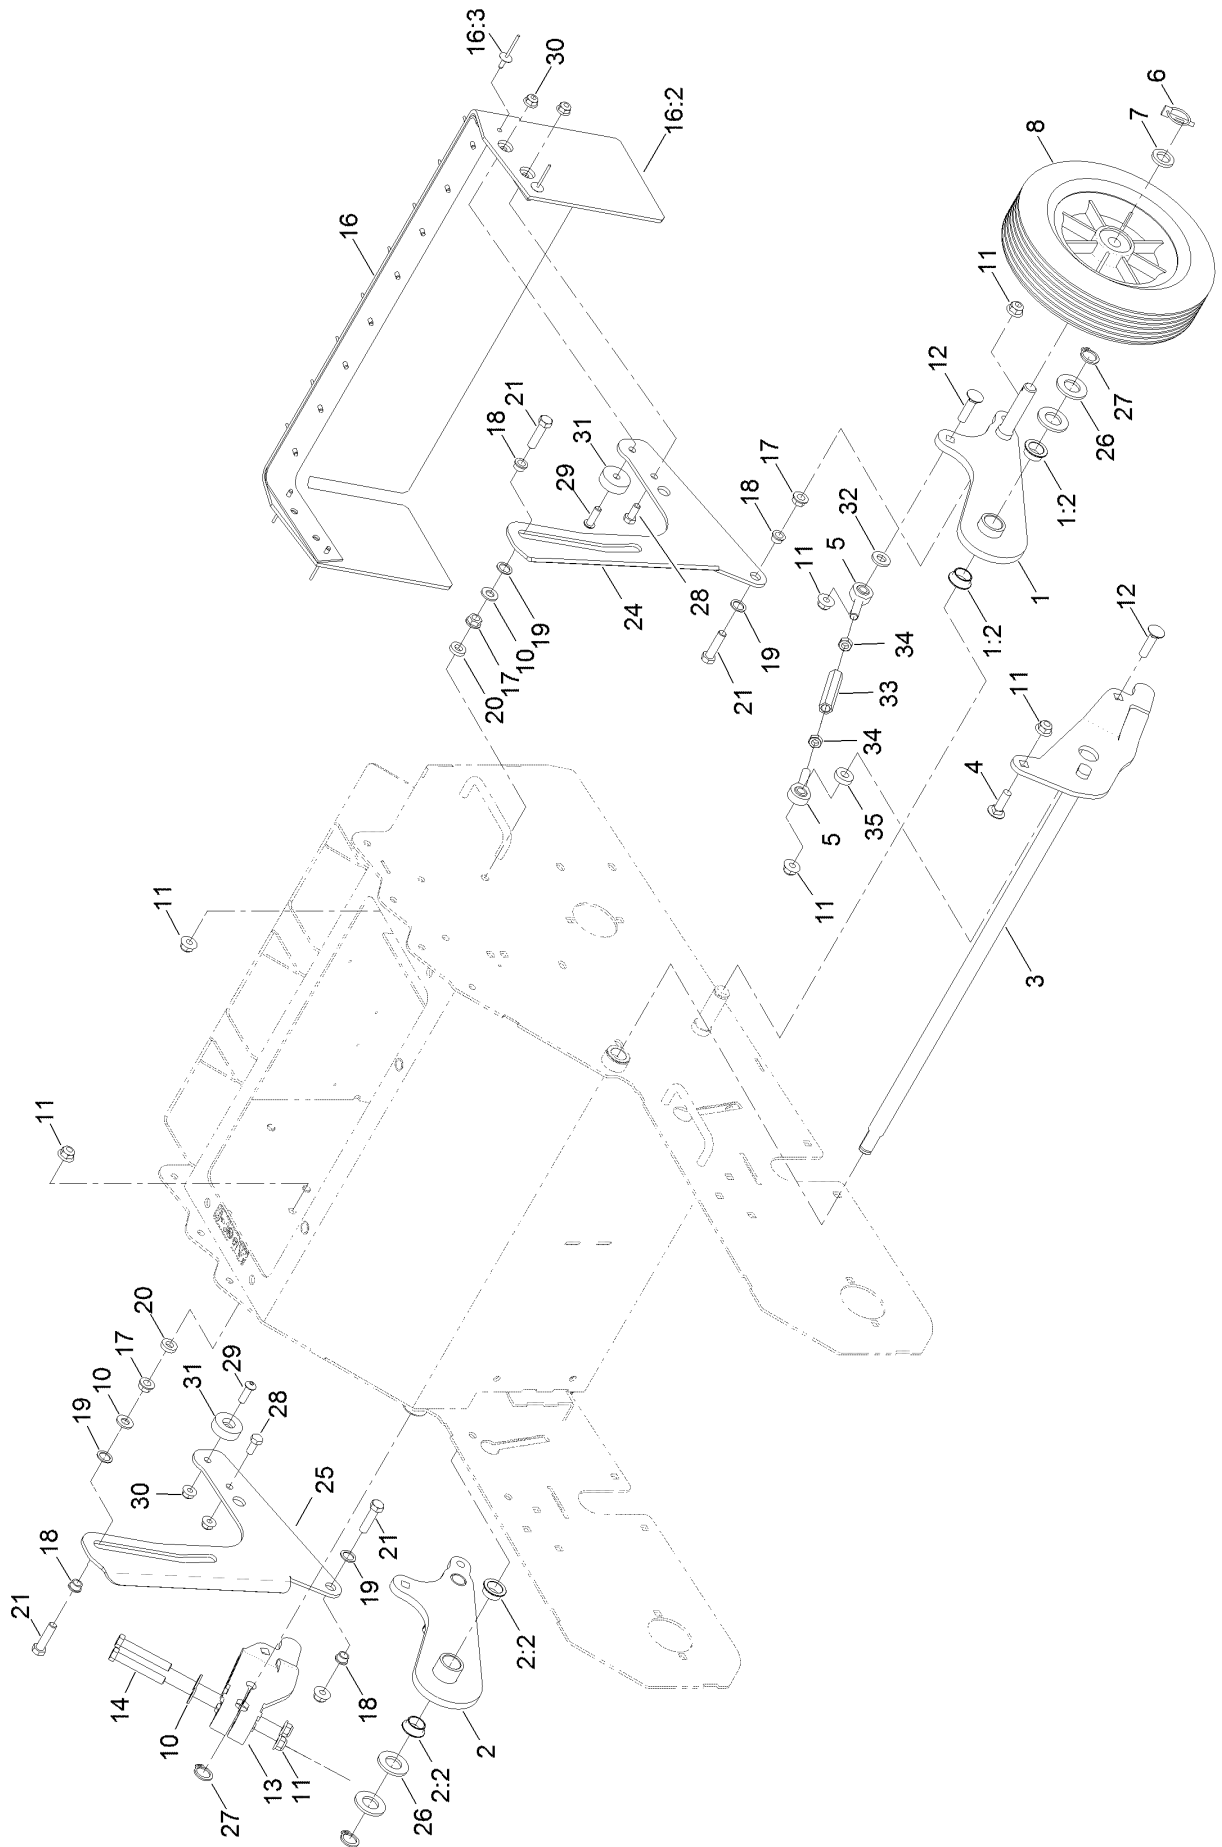

Height Linkage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0829	1	Wheel Arm ASM	17	3290-357	4	Nut-HHF, Whiz
1:2	108519	2	Bushing-Bronze	18	1-603735	4	Bushing-Flanged
2	126-0830	1	Wheel Arm ASM	19	94-8196	4	Washer-Nylon
2:2	108519	2	Bushing-Bronze	20	80-7730	2	Spacer
3	126-1343	1	Shaft-Pivot	21	323-8	4	Screw-HH
4	3231-25	1	Bolt-CARR	24	126-0824-01	1	Arm-Guard LH
5	1-613204	4	Balljoint	25	126-0825-01	1	Arm-Guard RH
6	3290-495	2	Pin-Klik	26	3256-28	4	Washer-Flat
7	63-9710	2	Spacer-Bearing	27	32120-93	3	Ring-Retaining
8	121-4897	2	Wheel-Transport	28	322-3	2	Screw-HH
10	3256-24	4	Washer-Flat	29	109-4872	2	Screw-Hsph
11	104-8301	11	Nut-Flange, NI	30	104-8300	4	Nut-Flange, NI
12	3231-4	4	Screw-CARR	31	116-8331	2	Guide-Trail Arm
13	126-1345-03	1	Arm-Lift RH	32	87-7480	2	Washer
14	323-12	2	Screw-HH	33	116-9855	2	Rod-Lift Link
16	126-0564	1	Guard-Foot	34	3220-3	4	Nut-HJ
16:2	116-9884	1	Shield-Foot	35	5-0652	2	Spacer
16:3	3269-20	12	Rivet-Pop				

Tine Assembly

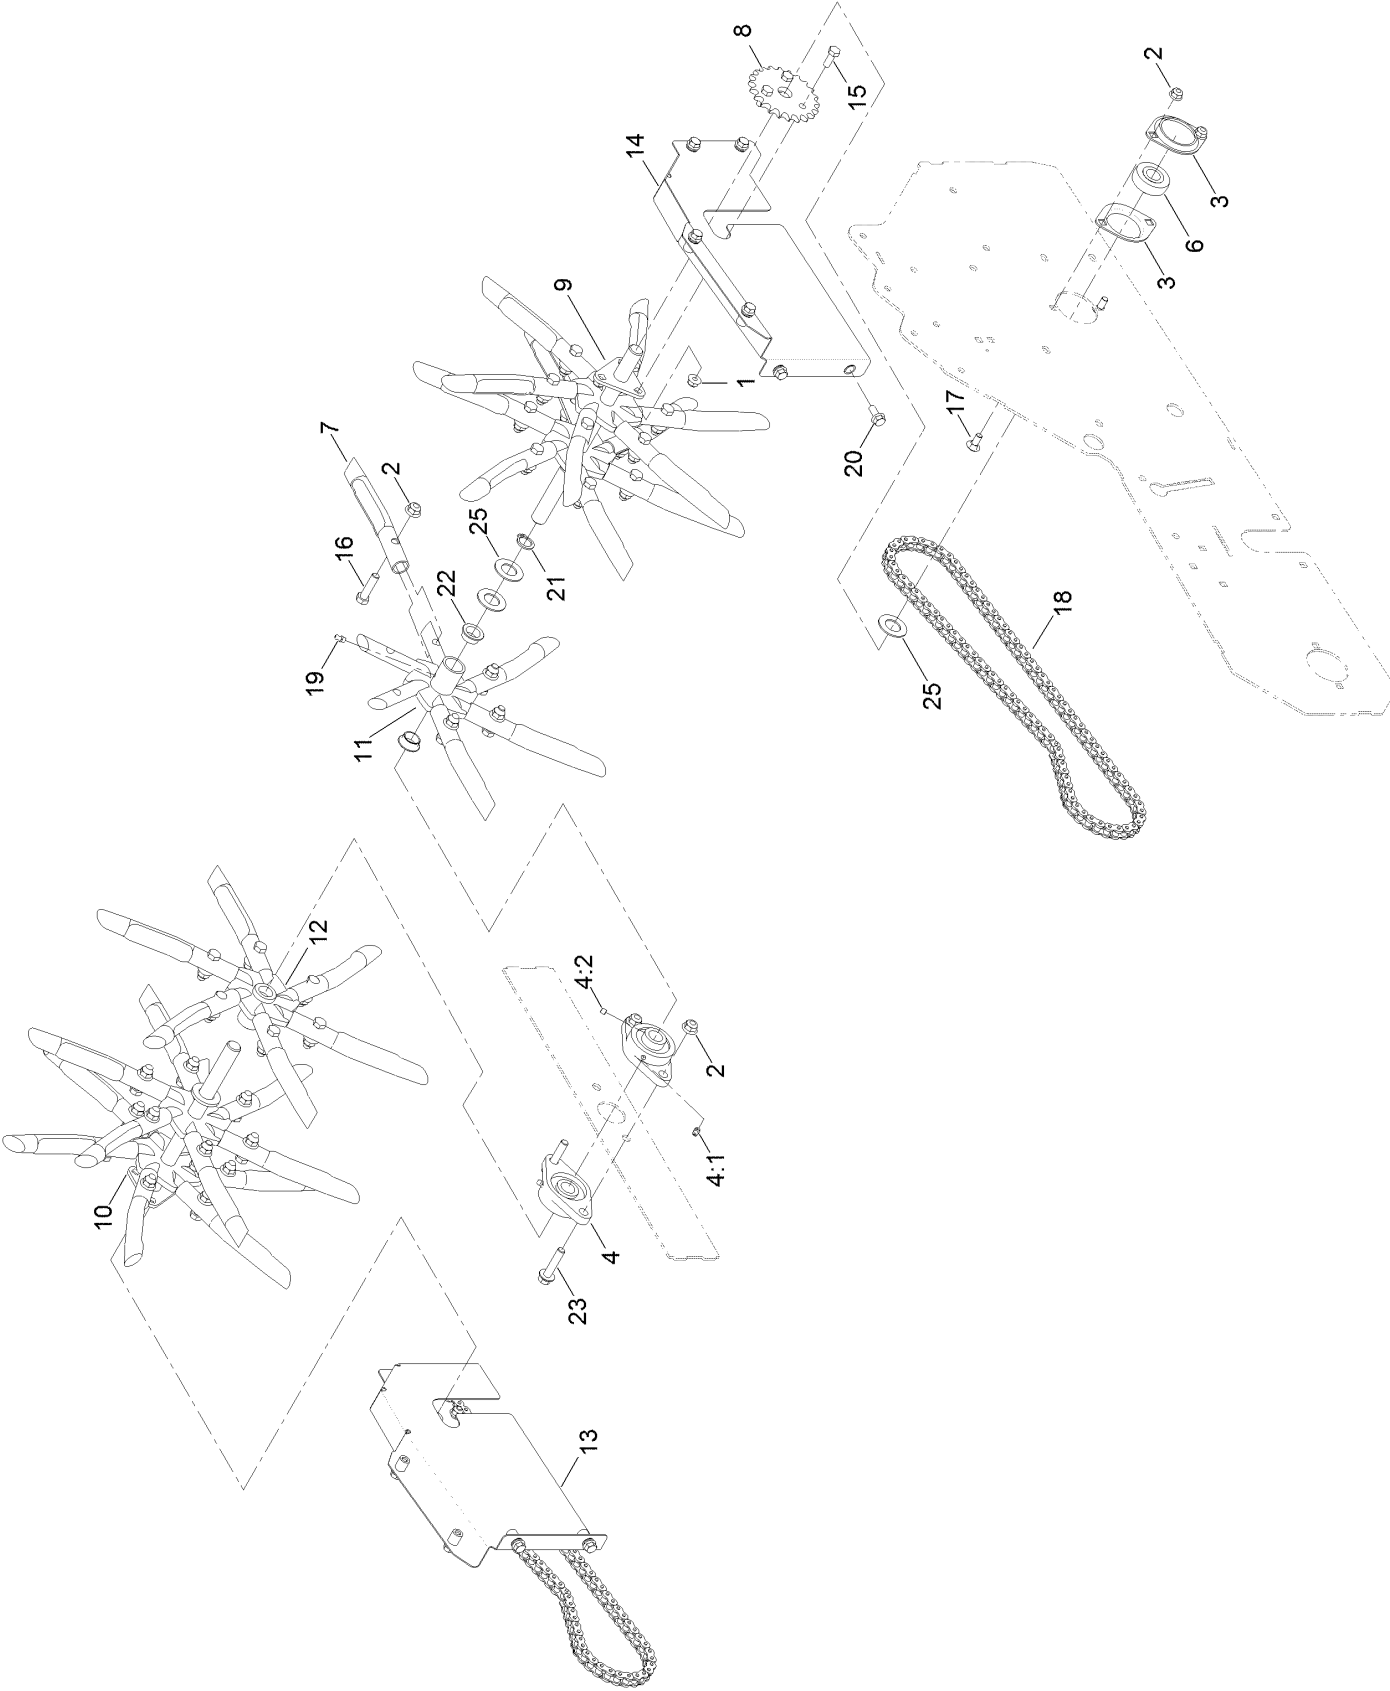

Tine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-8300	10	Nut-Flange, NI	13	126-1204	1	Chain Guard ASM, RH
2	104-8301	38	Nut-Flange, NI	14	126-1206	1	Chain Guard ASM, LH
3	105-9714	4	Flange-Bearing	15	322-4	6	Screw-HH
4	106-7126	2	Bearing-Flange	16	323-8	36	Screw-HH
4:1	302-58	1	Fitting-Straight	17	3230-1	4	Bolt-CARR
4:2	3245-35	2	Screw-Set, HSH	18	121-6107	2	Chain-Drive
6	120-9350	2	Bearing-Lock, Collar	19	302-19	2	Fitting-Grease
7	121-4894	36	Tine-Coring	20	3234-47	12	Screw-HHF
8	116-9896	2	Sprocket-#40 22T	21	32120-93	2	Ring-Retaining
9	121-4930	1	Tine-Wheel LH	22	108519	4	Bushing-Bronze
10	121-6072	1	Tine-Wheel RH	23	3234-19	2	Screw-HHF
11	121-6099	1	Tine-Spyder, Wa	25	69-8930	6	Washer
12	121-6096	1	Tine-Spyder, Wa				



Count on it.