

E-Trowel

Battery Powered Troweler



OPERATOR'S MANUAL

• READ BEFORE USE •

Welcome to the E-Trowel, a new and improved concrete polisher for the job site, outdoors or indoors, no odor, no fumes... Your new E-Trowel can give you many years of service if you follow these safety precautions and service suggestions to keep it running at its best.

Table of Contents	
Safety	2
Preparing Your Troweler for Use ...	4
Operating Instructions	7
Service & Maintenance	8

WARNING!

Never operate while intoxicated

Never ride on a troweler

Keep all objects animals and persons other than the operator at least three feet away from the troweler while operating. Rotating parts may cause bodily injury or damage the machine if they strike objects.

!Failure to follow warnings and safe operating instructions as outlined in this manual could lead to bodily harm or death!


Always remove batteries before lifting, tilting, or rocking your troweler.

Use **E-Trowel** batteries only! Using non-approved batteries may permanently damage your machine.

Use **E-Trowel** charger only! Using non-approved chargers may permanently damage your batteries.

Never allow troweler to get wet. Water can damage electronics.

E-Trowel

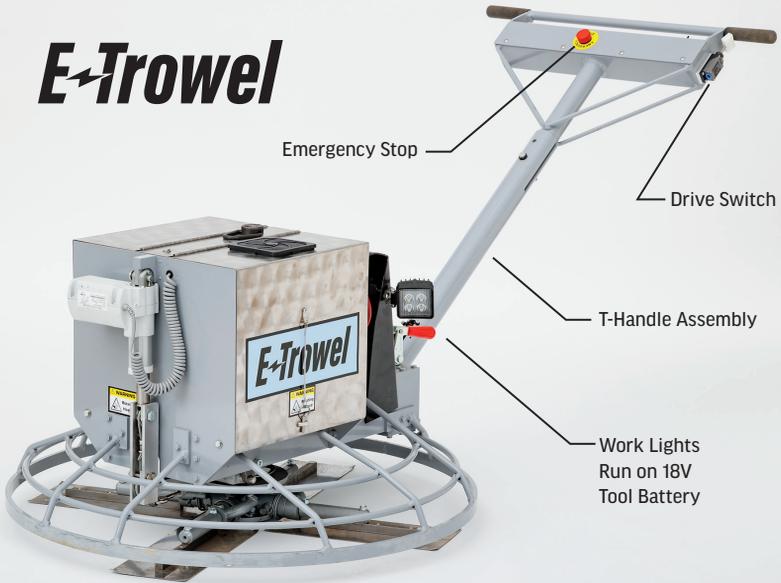



CAUTION! **Rotating Hazard**

Never place hands or feet inside the safety guard.



CAUTION! **Rotating Parts**

Be sure that all guards and safety features are functioning properly before use.

Preparing Your Troweler for Use


!Always remove batteries before lifting, tilting, or rocking your troweler!

!Batteries must stay in an upright position at all times.


Flipping or tilting batteries can cause permanent damage to the battery!



1 With the troweler located in the work area, install handle.

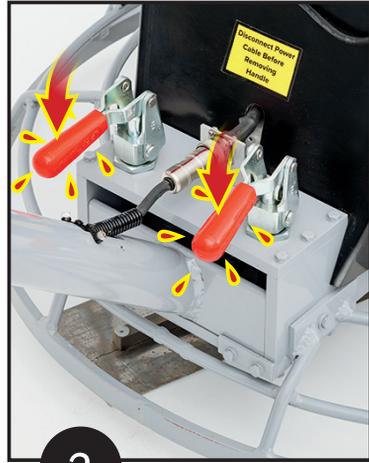

2 Check to make sure the handle is securely attached to the base with the two red clamps pressed firmly into the down position.

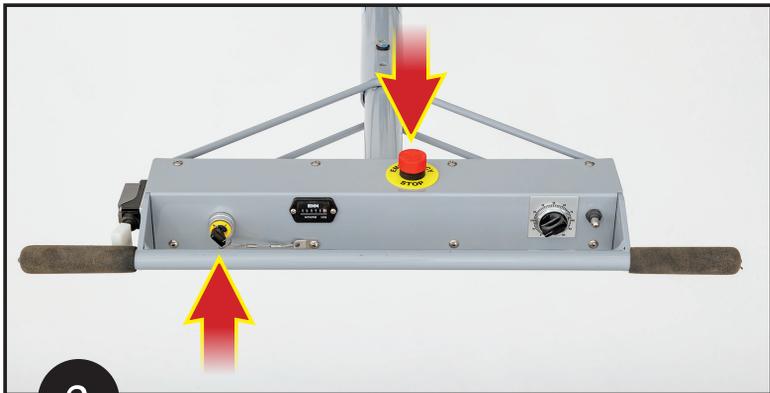


3 Make sure that the red safety stop is depressed, and the power switch is turned to the OFF position.



4

Connect the controller cable to the base by inserting the cable connector into the receiving end on the base, and turning $\frac{1}{4}$ turn clockwise.

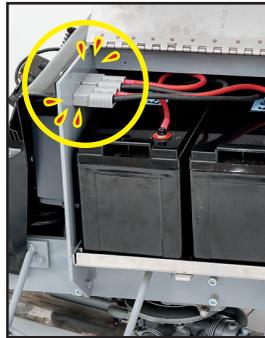

5


Open the battery cover and place batteries in the machine. Connect battery cables.



6

Close battery cover and secure with latches

OPERATING YOUR TROWELER

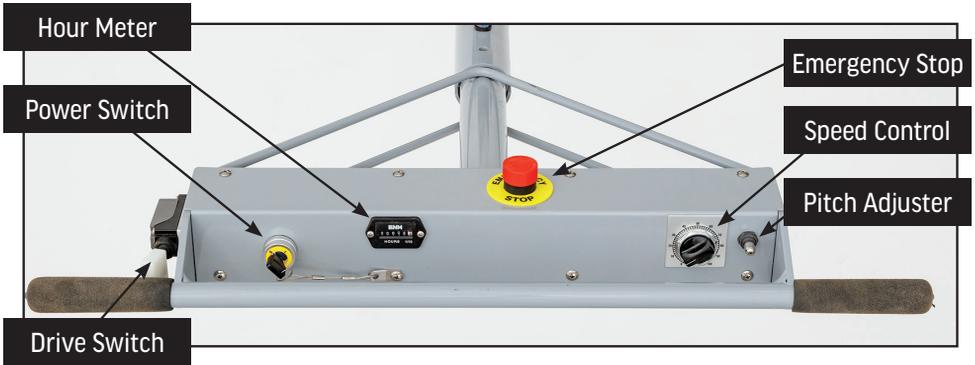

1. Make sure that the red Emergency Stop button is in the up position.
2. Turn machine speed to 0.
3. Turn power switch to the ON position.
4. While firmly holding both handles, press the white drive switch inward to allow the machine to energize.
5. Select speed using the speed control.
6. To adjust trowel pitch, use the toggle switch.
7. After use, remove batteries from the machine before attempting to move it from the work area.
8. Recharge batteries after each use.

**!Always keep batteries right side up.
Tilting or flipping batteries can cause permanent damage!**

Any time the troweler is not in operation, the red EMERGENCY STOP should be depressed, and the power switch turned to the off position.

**Never allow troweler to get wet.
Water can damage electronics.**

SERVICE AND MAINTENANCE

Cleaning your machine after each use will contribute greatly to its longevity. Be sure to remove all dirt and debris. Do not use a pressure washer. Use a brush or rag only.

Inspect the machine before and after every use for damage or unusual wear.

E-Trowel

69 Lancaster Ave.
Christiana, PA 17509

717-786-0173