



Click Here To View
Item at
www.GapPower.com

Sales • Rentals
Parts & Service



Illustrated Parts & Packing List

528 Gandrud Road, Owatonna, MN 55060

For a complete distributor & dealer list go to www.gandy.net

2820SS Slice 'n Seed 20-inch Walk Behind Overseeder w/ Disc Assembly

(All Parts & Hardware in Place Unless Otherwise Specified)

1	28122-1	Main Deck	Use: 1 Decal, Caution (N02-0028-002)
2	28122-45	Weight Bar	Use: 2 Hex Bolt (1/2 x 2-1/2) (C03-0500-101) 2 Whiz Flange Nut (1/2) (C01-0500-030)
1	L01-0008-010	Gas Engine, Honda 8 HP (RA2A)	Use: 4 Carriage Bolt (3/8 x 1-1/2) (C04-0375-061) 4 Whiz Flange Nut (3/8) (C01-0375-030)
1	28122-47	Pulley Bushing, Motor Shaft (1-1/2 O.D. x .891 I.D. x .563)	Use: 1 Socket Set Screw (5/16 x 1/4) (C06-0312-010)
1	G02-3750-000	Pulley, 3 V-Belt	Use: 1 Taper Lock, 7/8 Bore (J04-0875-000) 1 Key, Stepped (28122-50) 1 Metric Hex Hd Flange Bolt (M8 x 25mm) (C43-0800-025) 1 Wrought Washer (5/16) (C02-0312-030) 1 Lock Washer (5/16) (C02-0312-010)
1	G02-3625-000	Pulley Belt Tightener (3-5/8 O.D. x 2 Wide x 1/2 Bore)	Use: 1 Carriage Bolt (1/2 x 3-3/4) (C04-0500-150) 1 Bushing (3/4 O.D. x 1.438) (28122-19) 1 SAE Washer (5/8) (C02-0625-020) 1 Lock Washer (1/2) (C02-0500-010) 1 Hex Nut (1/2) (C01-0500-010)
2	M05-0034-066	V-Belt, Gates Powerated, 6934 (From Engine to Cutter Blade Shaft)	
1	G06-0816-000	Speed Reducer, Dayton 4Z859	Use: 4 Carriage Bolt (3/8 x 1) (C04-0375-040) 4 Whiz Flange Nut (3/8) (C01-0375-030)
1	28122-23	Gear Box Shaft	
1	28122-20	Shaft Connector (Connects shaft to gear box)	Use: 1 Key (3/16 x 1) (28122-49) 2 Socket Set Screw (1/4 x 1/4) (C06-0250-020)
1	D05-0625-010	Bearing (5/8 Bore)	
1	D09-0625-010	Locking Collar (For D05-0625-010 Bearing)	
2	D10-0625-010	Flangette (For D05-0625-010 Bearing)	Use: 2 Carriage Bolt (5/16 x 3/4) (C04-0312-031) 2 Whiz Flange Nut (5/16) (C01-0312-030)

1	G02-3250-000	Pulley, V-Belt (3.25 O.D. x .625 Bore) Use: 1 Key (3/16 x 1) (28122-49)
1	G02-2625-000	Pulley, V-Belt Idler (2-5/8 O.D.) (Belt Tightener) Use: 1 Carriage Bolt (3/8 x 2-1/2) (C04-0375-100) 1 Bushing (3/4 O.D. x 7/8 Long) (28122-53) 1 SAE Washer (1/2) (C02-0500-020) 1 Wrought Washer (3/8) (C02-0375-030) 1 Lock Washer (3/8) (C02-0375-010) 1 Hex Nut (3/8) (C01-0375-010)
1	M05-0022-050	V-Belt, Gates Powerated 6822 (From Engine to 5/8 Shaft)
1	28122-22	Front Shaft (3/4 x 32-1/4)
2	D05-0750-030	Bearing (For 3/4 Shaft) Use: 2 Carriage Bolt (5/16 x 3/4) (C04-0312-031) 2 Whiz Flange Nut (5/16) (C01-0312-030)
1	G01-0750-003	Sprocket 20-Tooth #41, 3/4 Bore Use: 1 Key (3/16 x 1) (28122-49)
2	R02-0011-012	Tire (410/350-4) Use: 2 Clevis Pin (5/16 x 1-3/8) (C22-0312-090) 2 Cotter Pin (3/32 x 3/4) (C20-0093-020)
1	28122-8	Sprocket/Pulley (28-Tooth #41, 1-inch Bore) Use: 1 2 Socket Set Screw (1/4 x 1/2) (C06-0250-050)
1	G01-0018-010	Sprocket 18-Tooth Idler Use: 1 Carriage Bolt (1/2 x 1-3/4) (C04-0500-070) 1 SAE Washer (5/8) (C02-0625-020) 1 Lock Washer (1/2) (C02-0500-010) 1 Hex Nut (1/2) (C01-0500-010)
2.54 Ft.....	F02-0041-000	Roller Chain #41 (60-Rollers) (From Gear Box to Front Shaft) Use: 1 Connector Link #41 (F02-0041-001)
1	28122-9	Foot Step/Guard Use: 2 Carriage Bolt (3/8 x 1) (C04-0375-040) 2 Whiz Flange Nut (3/8) (C01-0375-030)
1	28122-13	Tightener Plate (Bolts to 28122-9)
1	G02-3500-050	Pulley Idler w/Bearings (3-1/4 O.D. x 1/2 Bore) Use: 1 Bushing (3/4 O.D. x 1.58) (28122-17) 1 Carriage Bolt (3/8 x 4) (C04-0375-0160) 2 SAE Washer (3/8) (C02-0375-020) 1 SAE Washer (5/8) (C02-0625-020) 1 Lock Washer (3/8) (C02-0375-010) 1 Hex Nut (3/8) (C01-0375-010)
1	28122-2	Handle Use: 1 Decal, Raise/Lower (N02-0064-080) 1 Adjustment Knob, Depth (28122-43) 1 Locking Bar (28122-44) 1 Carriage Bolt (3/4 x 6) (C04-0750-200) 4 Carriage Bolt (3/8 x 1) (C04-0375-040) 4 Whiz Flange Nut (3/8) (C01-0375-030) 2 Eye Bolt (3/8) (C16-0375-011) 4 Wrought Washer (3/8) (C02-0375-030) 2 Lock Nut, Nylon (3/8) (C01-0375-041)


1	M14-0054-000	Throttle Assembly w/Matching Dummy Grip (Use the following parts to connect throttle cable to carburetor)
	Use:	1 Holder, Wire (M14-0054-001)
		1 Circlip (5mm) (M14-0054-002)
		2 Screw, Pan Hd (M4 x 8mm) (M14-0054-003)
		1 Spring Ext #61 (.344 x 4") (E00-0344-040)
1	M14-0060-000	Throttle Cable (60-inch Long)
1	28122-6	Lift Bracket Lever
	Use:	1 Grip (1/2 x 4) (J01-0500-400)
1	28122-27	Link Pin (For 28122-6)
	Use:	2 Bushing (3/4 O.D. x 2.33 Long) (28122-18)
		2 Hex Bolt (5/16 x 1) (C03-0312-041)
		2 Lock Washer (5/16) (C02-0312-010)
1	28122-3	Wheel Lift
	Use:	2 Wheel Toggle Link (28122-7)
		1 Hex Bolt (1/2 x 2-1/2) (C03-0500-101)
		4 Wrought Washer (1/2) (C02-0500-030)
		1 Lock Nut, Center Point (C01-0500-040)
2	R02-0011-013	Tire w/ Bearings (410/350-4)
	Use:	2 Wrought Washers (3/4) (C02-0750-030)
		2 Cotter Pin (3/16 x 1-1/4) (C20-0187-030)
1	28122-4	Foot Guard
	Use:	2 Bushing (3/4 O.D. x 11/16 Long) (28122-16)
		2 Hex Bolt (1/2 x 1-3/4) (C03-0500-071)
		2 SAE Washer (3/4) (C02-0750-020)
		2 Wrought Washer (1/2) (C02-0500-030)
		2 Lock Washer (1/2) (C02-0500-010)
1	28122-5	Shut-Off Handle, Hopper
	Use:	1 Hex Bolt (3/8 x 3) (C03-0375-121)
		3 Wrought Washer (3/8) (C02-0375-030)
		1 Lock Nut, Nylon (3/8) (C01-0375-041)
		1 Grip (.25 x 1.0 x 4 Black) (J01-0250-100)
1	28122-14	Belt Guard, Right (Engine Pulley Side)
	Use:	4 Carriage Bolt (1/4 x 5/8) (C04-0250-020)
		4 Whiz Flange Nut (1/4) (C01-0250-030)
1	28122-21	Guard Mount, Cover (4.16 Long x 5/8 Hex)
	Use:	1 Hex Bolt (5/16 x 3/4) (C03-0312-030)
		1 Lock Washer (5/16) (C02-0312-010)
1	28122-11	Belt Guard Cover, Right (Engine Pulley Side)
	Use:	5 Pan Hd Screw (1/4 x 1/2) (C07-0250-072)
		5 Lock Washer (1/4) (C02-0250-010)
		1 Decal, Caution (N02-0028-002)
1	0197102-1	Bracket, Manual Holder (Bolted to 28122-15 Guard)
	Use:	2 Carriage Bolt (3/8 x 3/4) (C04-0375-030)
		2 SAE Washer (1/2) (C02-0500-020)
		2 Whiz Flange Nut (3/8) (C01-0375-030)
1	M10-0005-004	Manual Holder
	Use:	2 Cable Tie (5/16 x 15-1/4) (L04-0005-000)


1	28122-15	Belt Guard, Left (Hopper Pulley Side)
		Use: 4 Carriage Bolt (1/4 x 5/8) C04-0250-020
		4 Whiz Flange Nut (1/4) (C01-0250-030)
1	28122-12	Belt Guard Bracket
1	M05-B055-000	V-Belt (55-inch) (From Hopper Pulley to Gear Box)
1	28122-10	Belt Guard Cover, Left
		Use: 7 Pan Hd Screw (1/4 x 1/2) (C07-0250-072)
		7 Lock Washer (1/4) (C02-0250-010)
		1 Decal, Caution (N02-0028-002)


1	2820-B	Disc Assembly
1	28122-28	Seed Plate
1	28122-32	Enclosure, Left End Seed Plate
	Use:	4 Carriage Bolt (5/16 x 3/4) (C04-0312-030)
		4 Whiz Flange Nut (5/16) (C01-0312-030)
		1 Clevis Pin (1/4 x 1-3/4) (C22-0250-120)
		1 Cotter Pin (3/32 x 3/4) (C20-0093-020)
1	28122-33	Enclosure, Right End Seed Plate
	Use:	4 Carriage Bolt (5/16 x 3/4) (C04-0312-030)
		4 Whiz Flange Nut (5/16) (C01-0312-030)
		1 Clevis Pin (1/4 x 1-3/4) (C22-0250-120)
		1 Cotter Pin (3/32 x 3/4) (C20-0093-020)
1	28122-29	Shaft, Disc (3/4-16 x 25-5/16)
	Use:	2 Slotted Hex Nut (3/4-16) (C01-0750-070)
		2 Cotter Pin (3/16 x 1-1/4) (C20-0187-030)
		4 Jam Nut, Fine Thread (3/4-16) (C01-0750-060)
		2 SAE Washer (3/4) (C02-0750-020)
		4 Lock Washer (3/4) (C02-0750-010)
2	D05-0750-030	Bearing (3/4 bore)
	Use:	4 Carriage Bolt (5/16 x 3/4) (C04-0312-030)
		4 Whiz Flange Nut (5/16) (C01-0312-030)
10	M03-0008-000	Disc Blade (8-inch w/1-1/4 Bore)
9	2894-6	Spacer (1-1/2 O.D. x 1.993 Long)
1	28122-38	Spacer (1-1/2 O.D. x 1.088 Long)
10	2894-11	Scraper, Disc
	Use:	20 Hex Bolt (1/4 x 1-3/4) (C03-0250-070)
		20 Spring (.360 x 1-1/4 Long) (E00-0360-012)
		20 Lock Nut, Nylon (1/4) (C01-0250-040)
2	28122-46	Pressure Rod
	Use:	4 Cotter Pin (5/32 x 3/4) (C20-0156-010)
		4 Collar, Locking Pressure Rod (2606837-5)
		4 Sq. Head Set Screw (3/8 x 3/8) (C05-0375-010)
		2 Compression Spring (E00-0725-040)
		6 Wrought Washer (3/8) (C02-0375-030)
10	28122-48	Flex Tubing (18-inch Long)
	Use:	10 Hex Bolt (1/4 x 3/4) (C03-0250-030)
		10 Whiz Flange Nut (1/4) (C01-0250-030)
		10 Hose Clamp #12 Mini (5/8 to 1-1/4) (M11-0012-010)
1	28122-39	Spring Guard
	Use:	2 Hex Bolt (1/4 x 3/4) (C03-0250-030)
		2 Lock Washer (1/4) (C02-0250-010)


1 2820-E Disk Blade Assembly


- | | | |
|---|--------------|--|
| 1 | 2822-26 | Axle, Blade Shaft |
| 5 | 2893-51 | Blade, Saw Tooth, 30 Deg (14Ga) |
| 5 | 2893-52 | Blade, Saw Tooth, 90 Deg (14Ga) |
| 2 | 2893-44 | Bearing & Flangette |
| | | Use: 4 Carriage Bolt (5/16 x 3/4) (C04-0312-031) |
| | | 4 Lock Washer (5/16) (C02-0312-010) |
| | | 4 Hex Nut (5/16) (C01-0312-010) |
| 9 | 2893-27 | Spacer (1-3/8 O.D. x 1.926) |
| 1 | 28122-30 | Spacer (1-3/8 O.D. x .585) (One Grove) |
| 1 | 28122-31 | Spacer (1-3/8 O.D. x 1.142) (Two Groves) |
| 1 | 28122-25 | Bushing (1-3/8 O.D. x .827) (By V-Belt Pulley) |
| 1 | G02-3500-000 | Pulley, Double V-Belt (3.50 O.D. x 1-inch Bore) |
| | | Use: 1 Key (1/4 x 1-3/8) (5508336-6) |
| 2 | C01-1000-040 | Slotted Hex Nut (1"-14) |
| | | Use: 2 Cotter Pin (3/16 x 1-1/4) (C20-0187-030) |

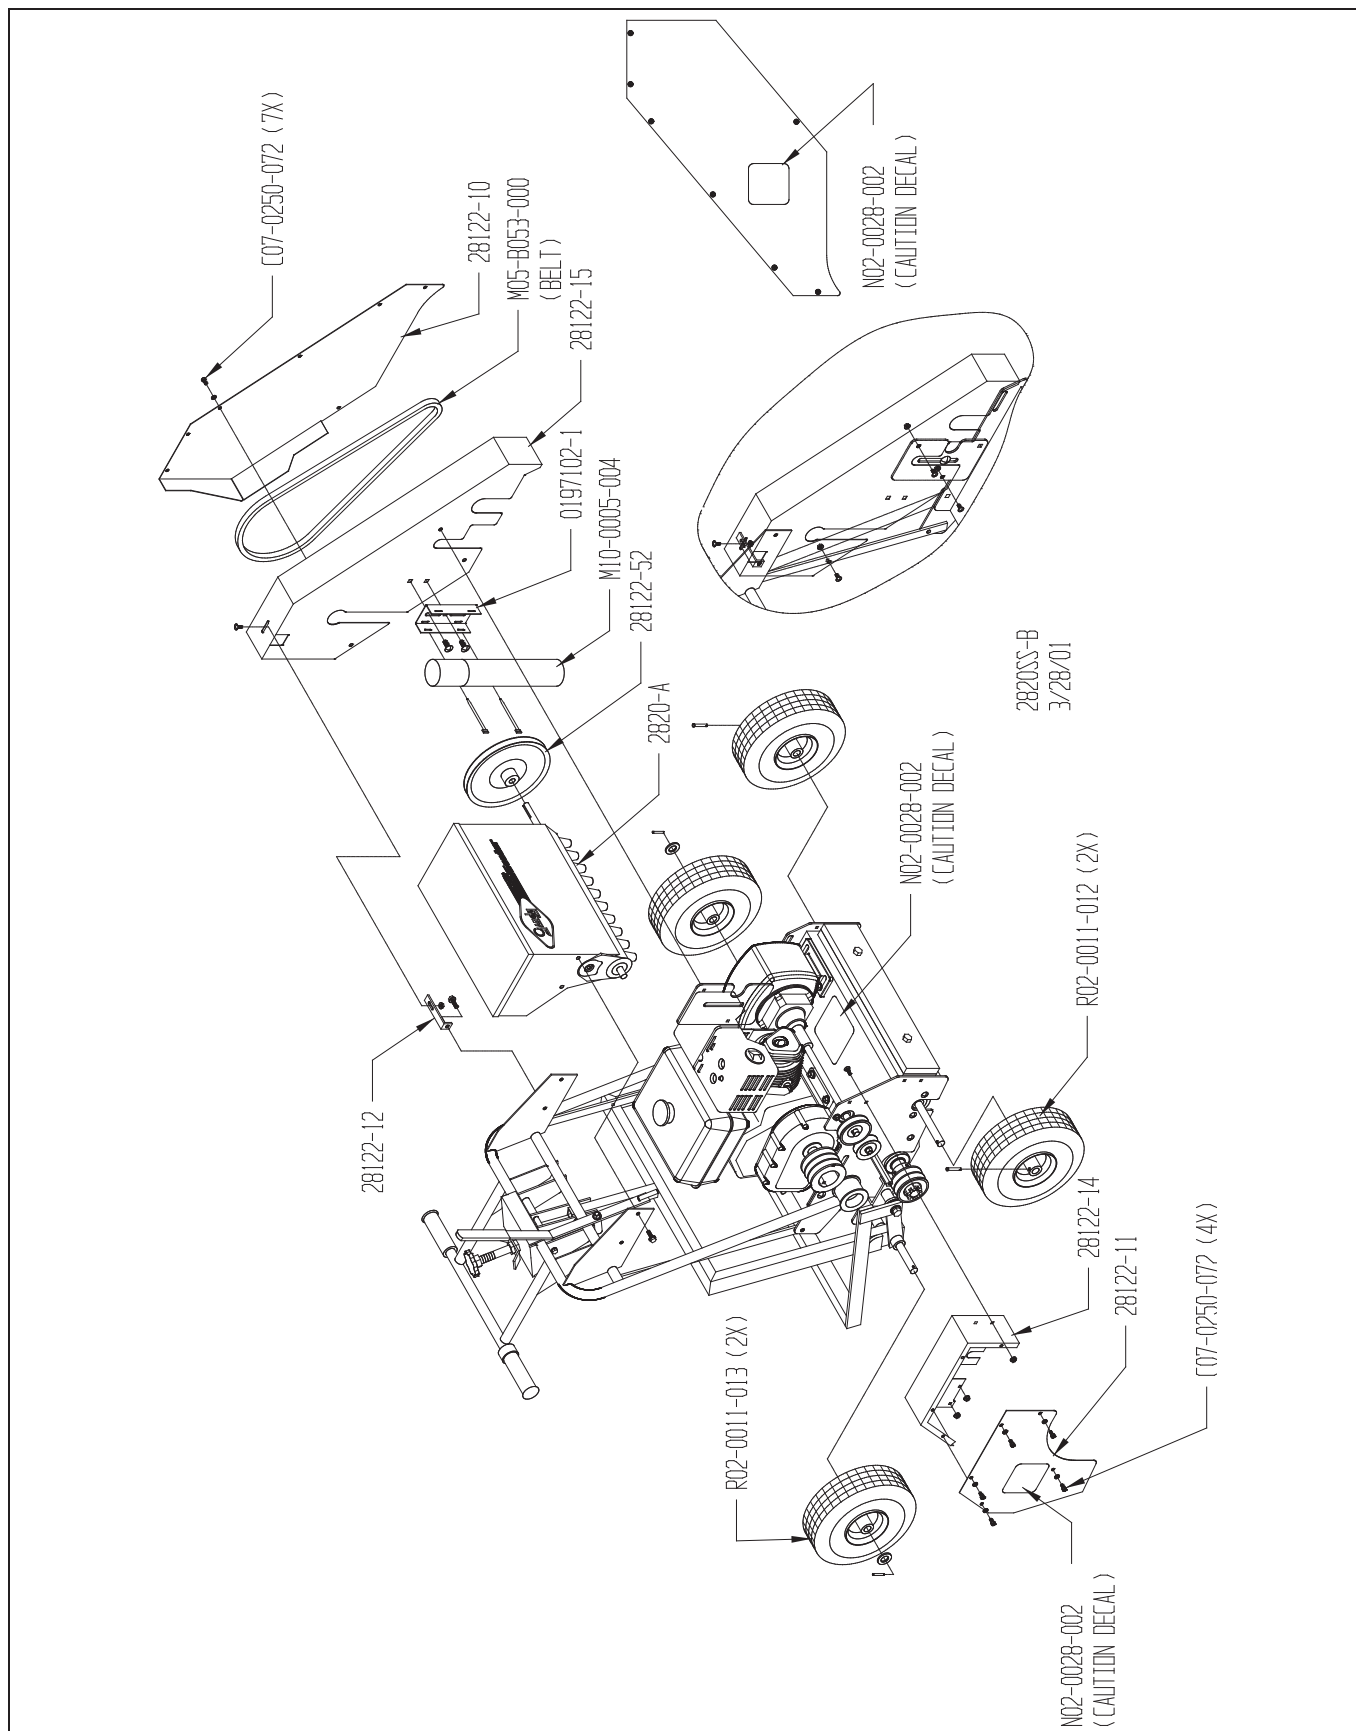


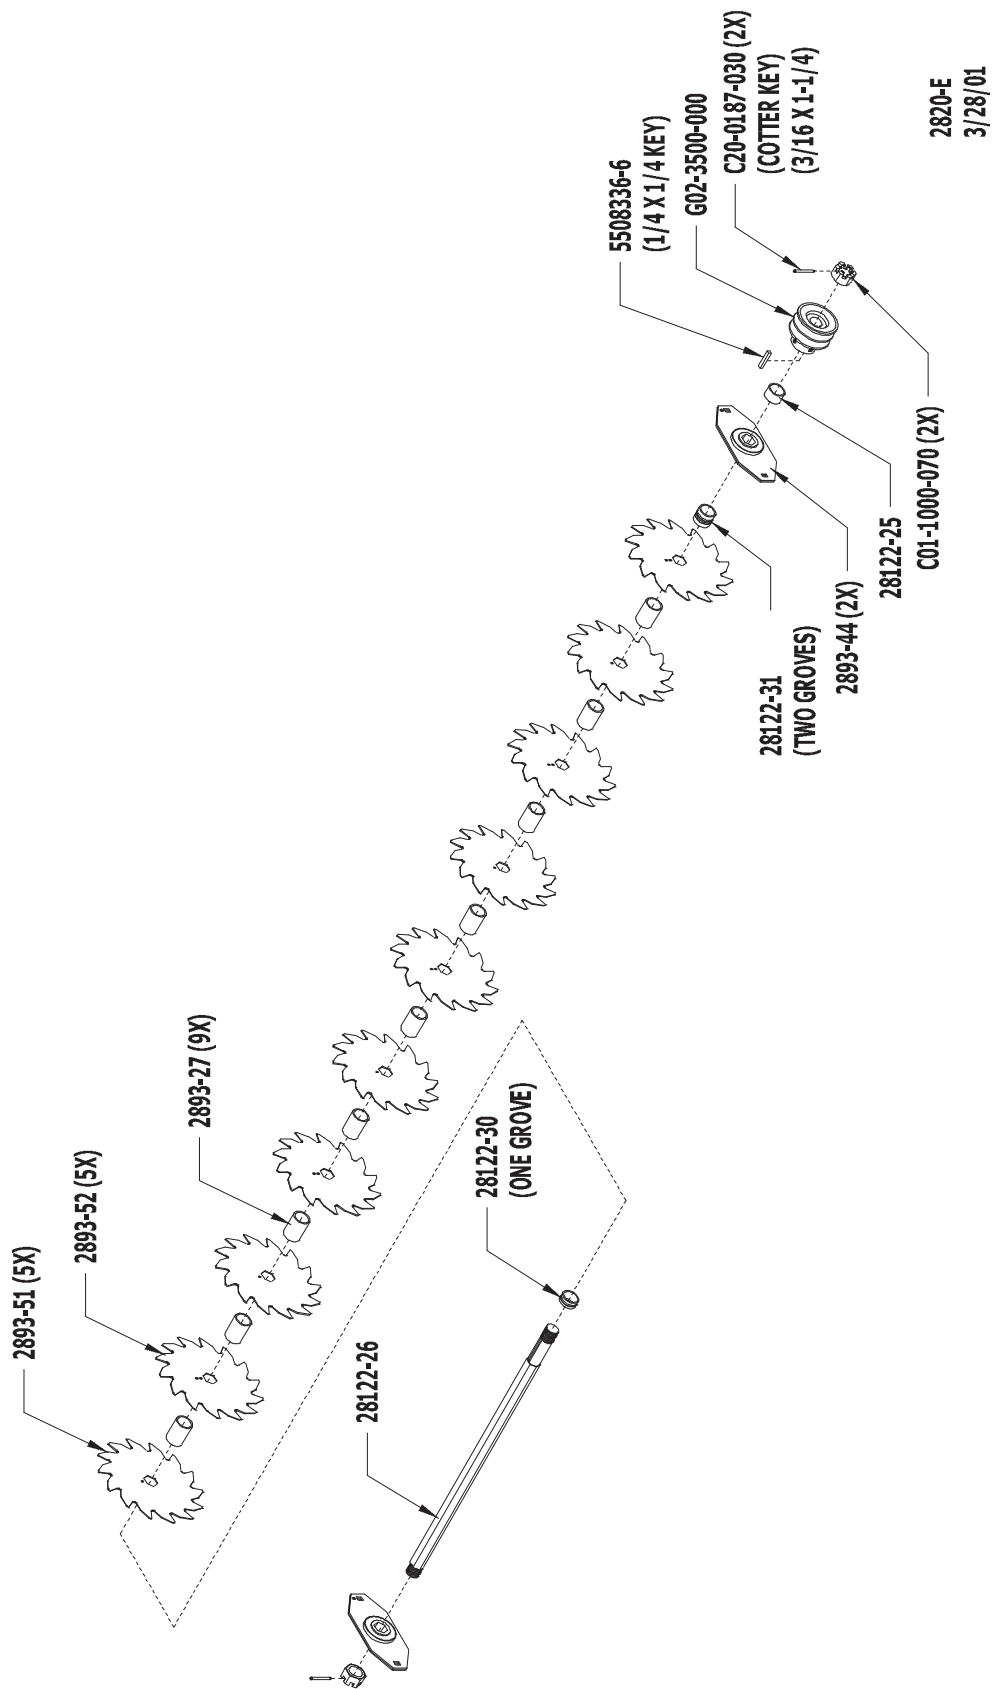

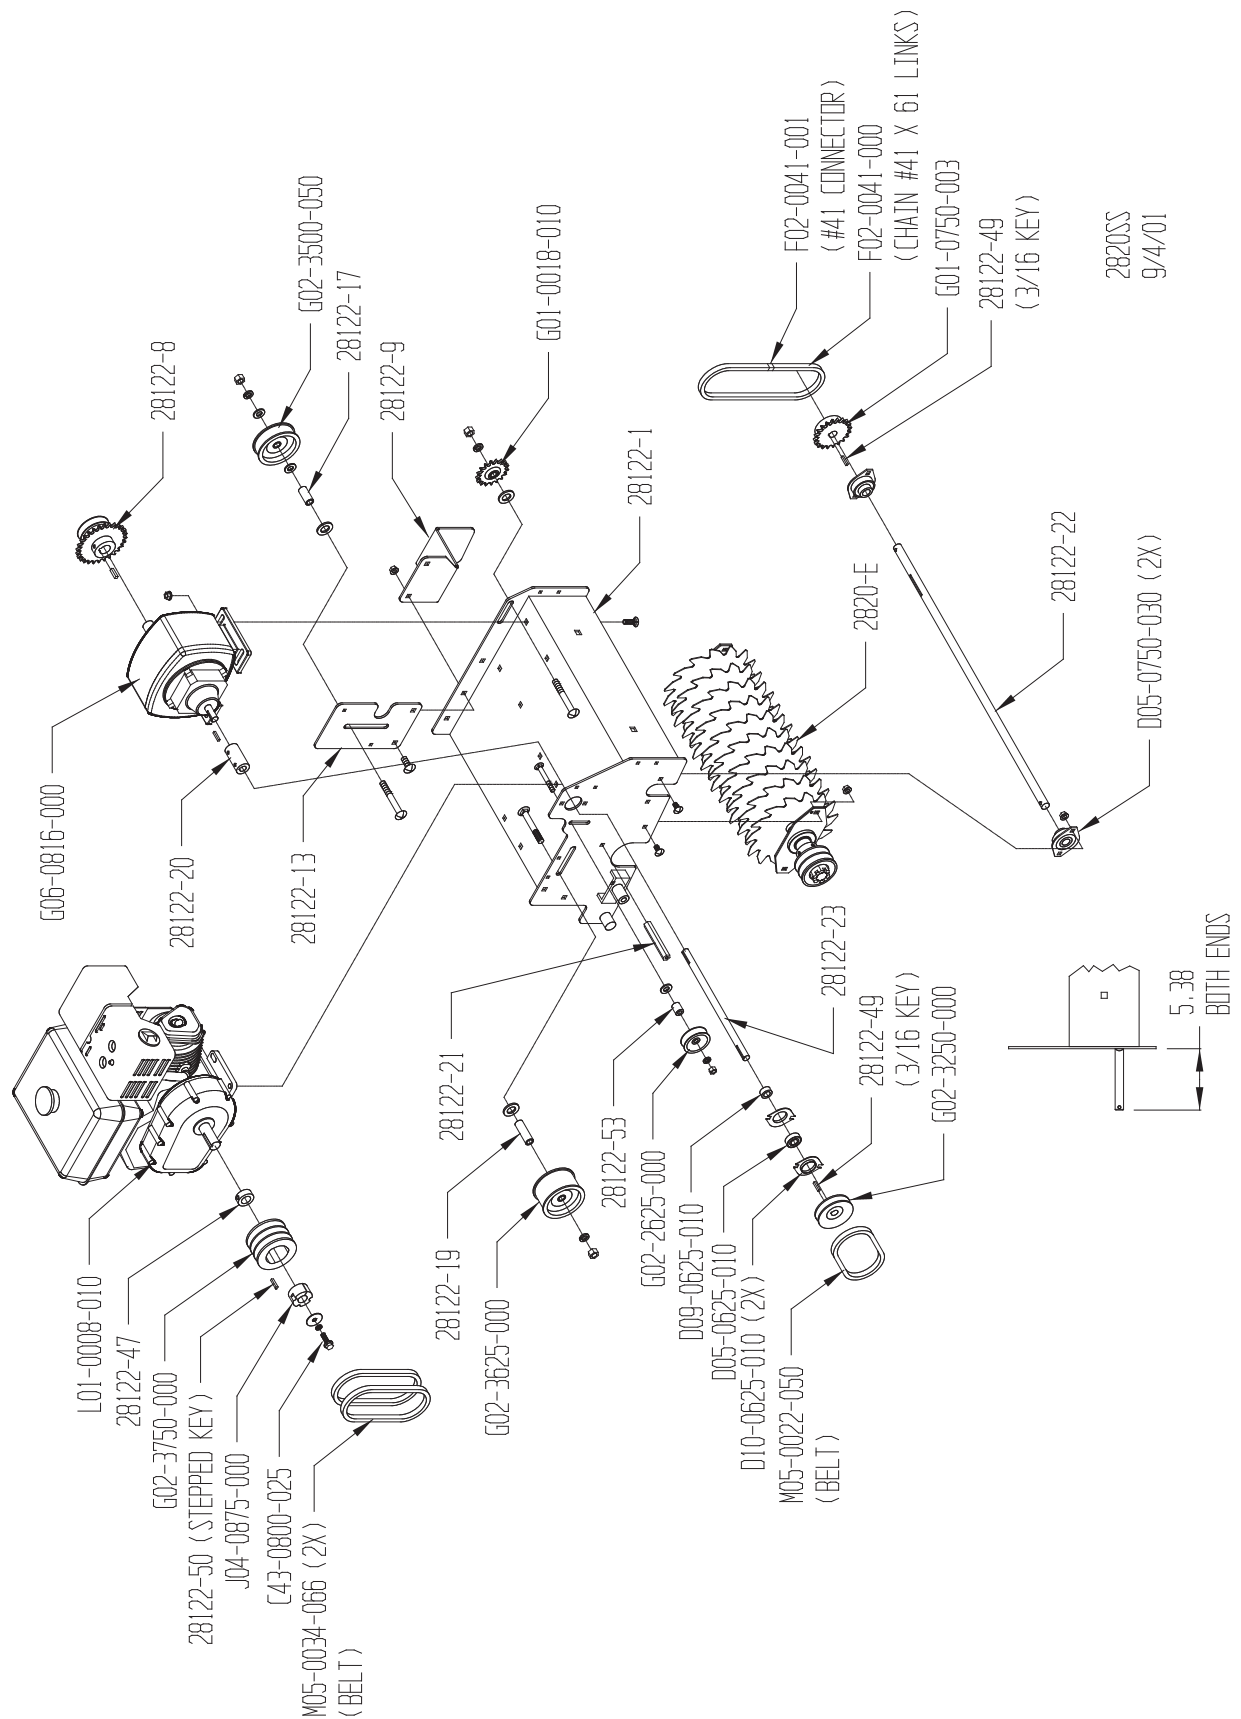


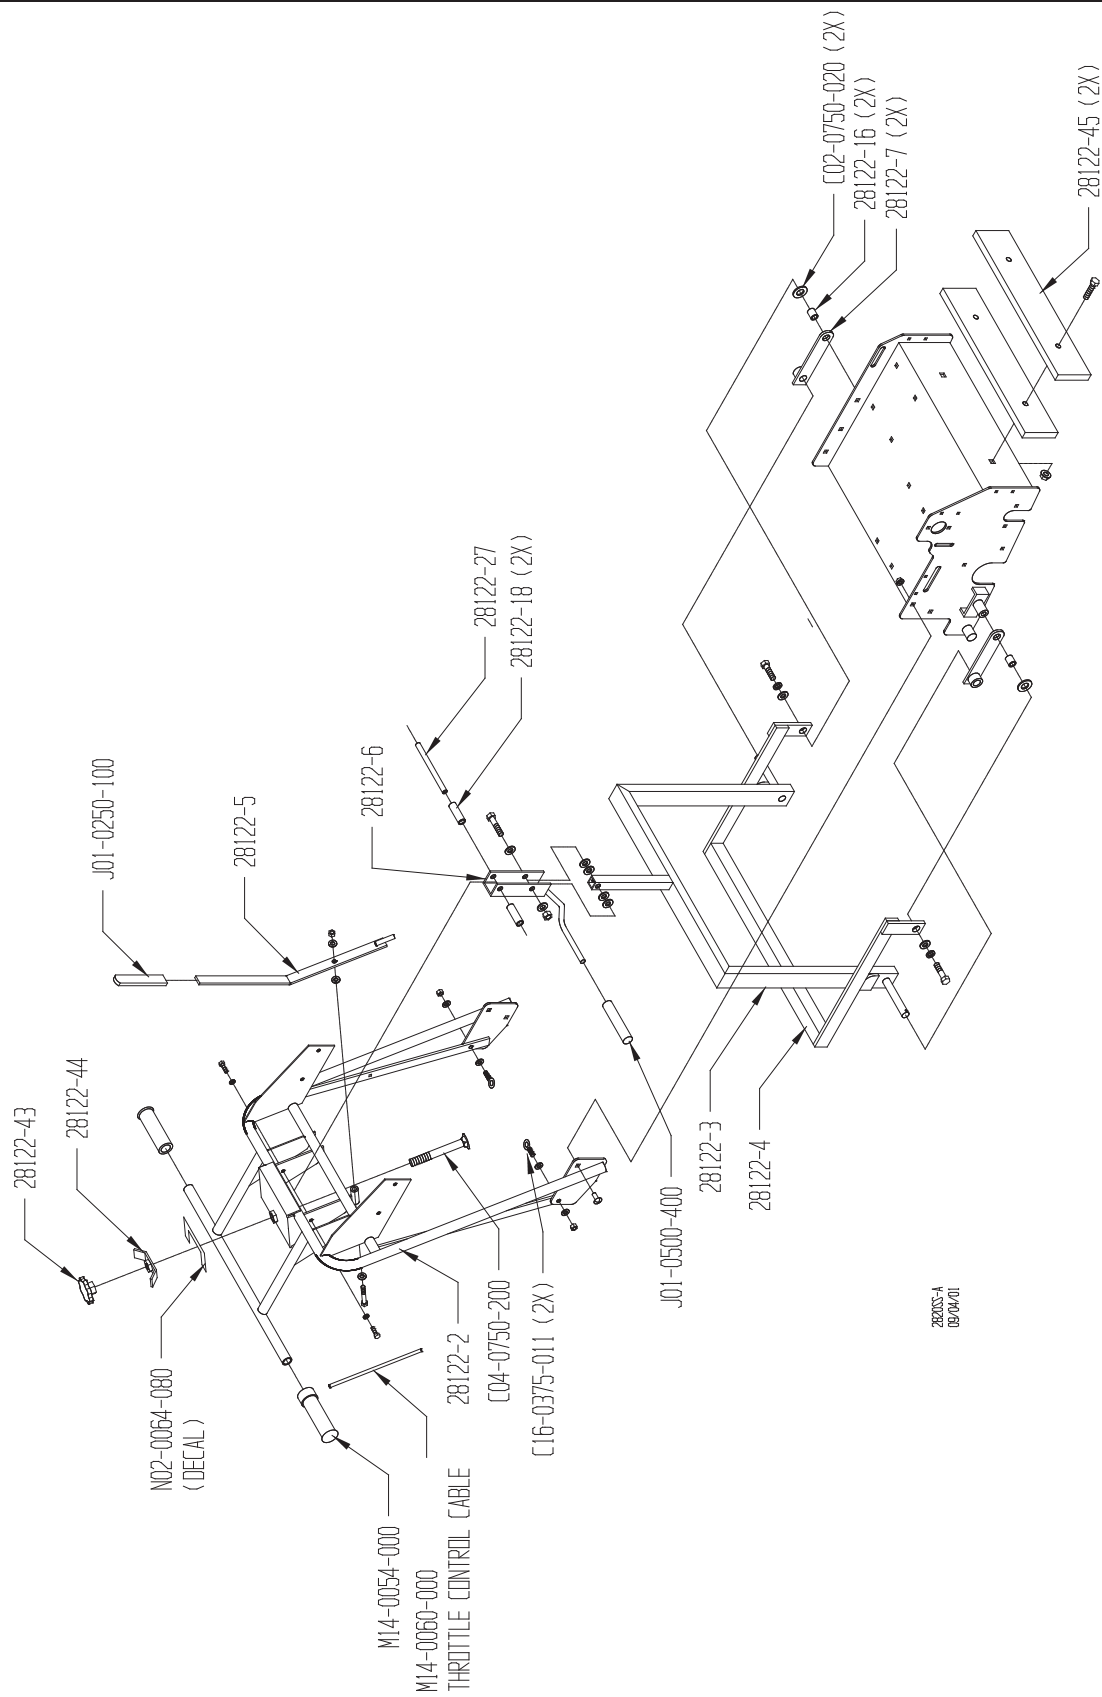

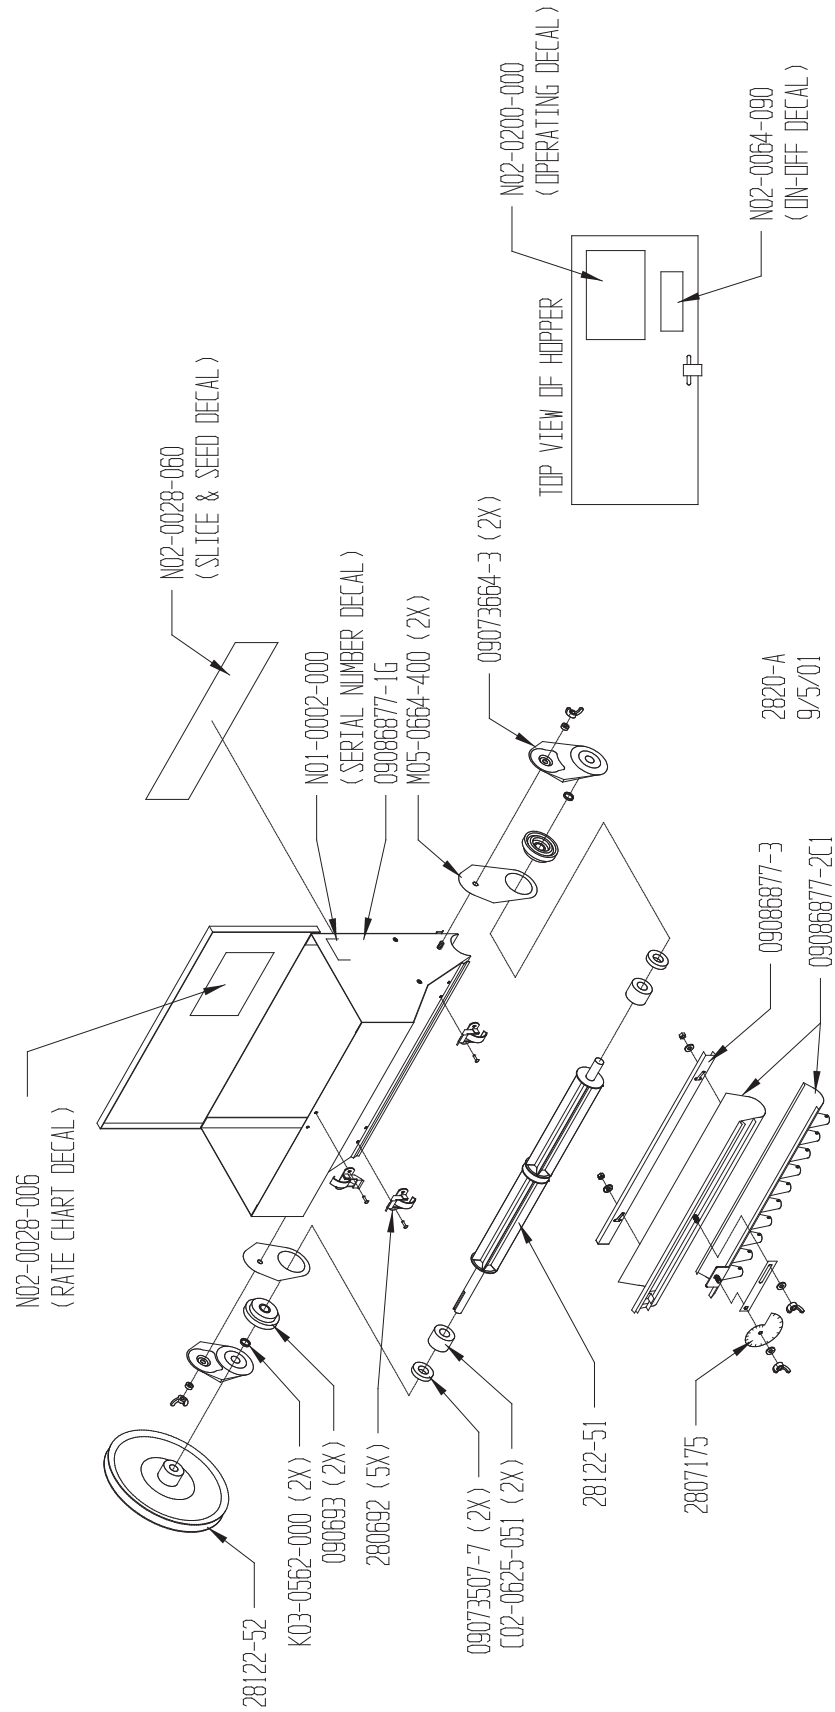

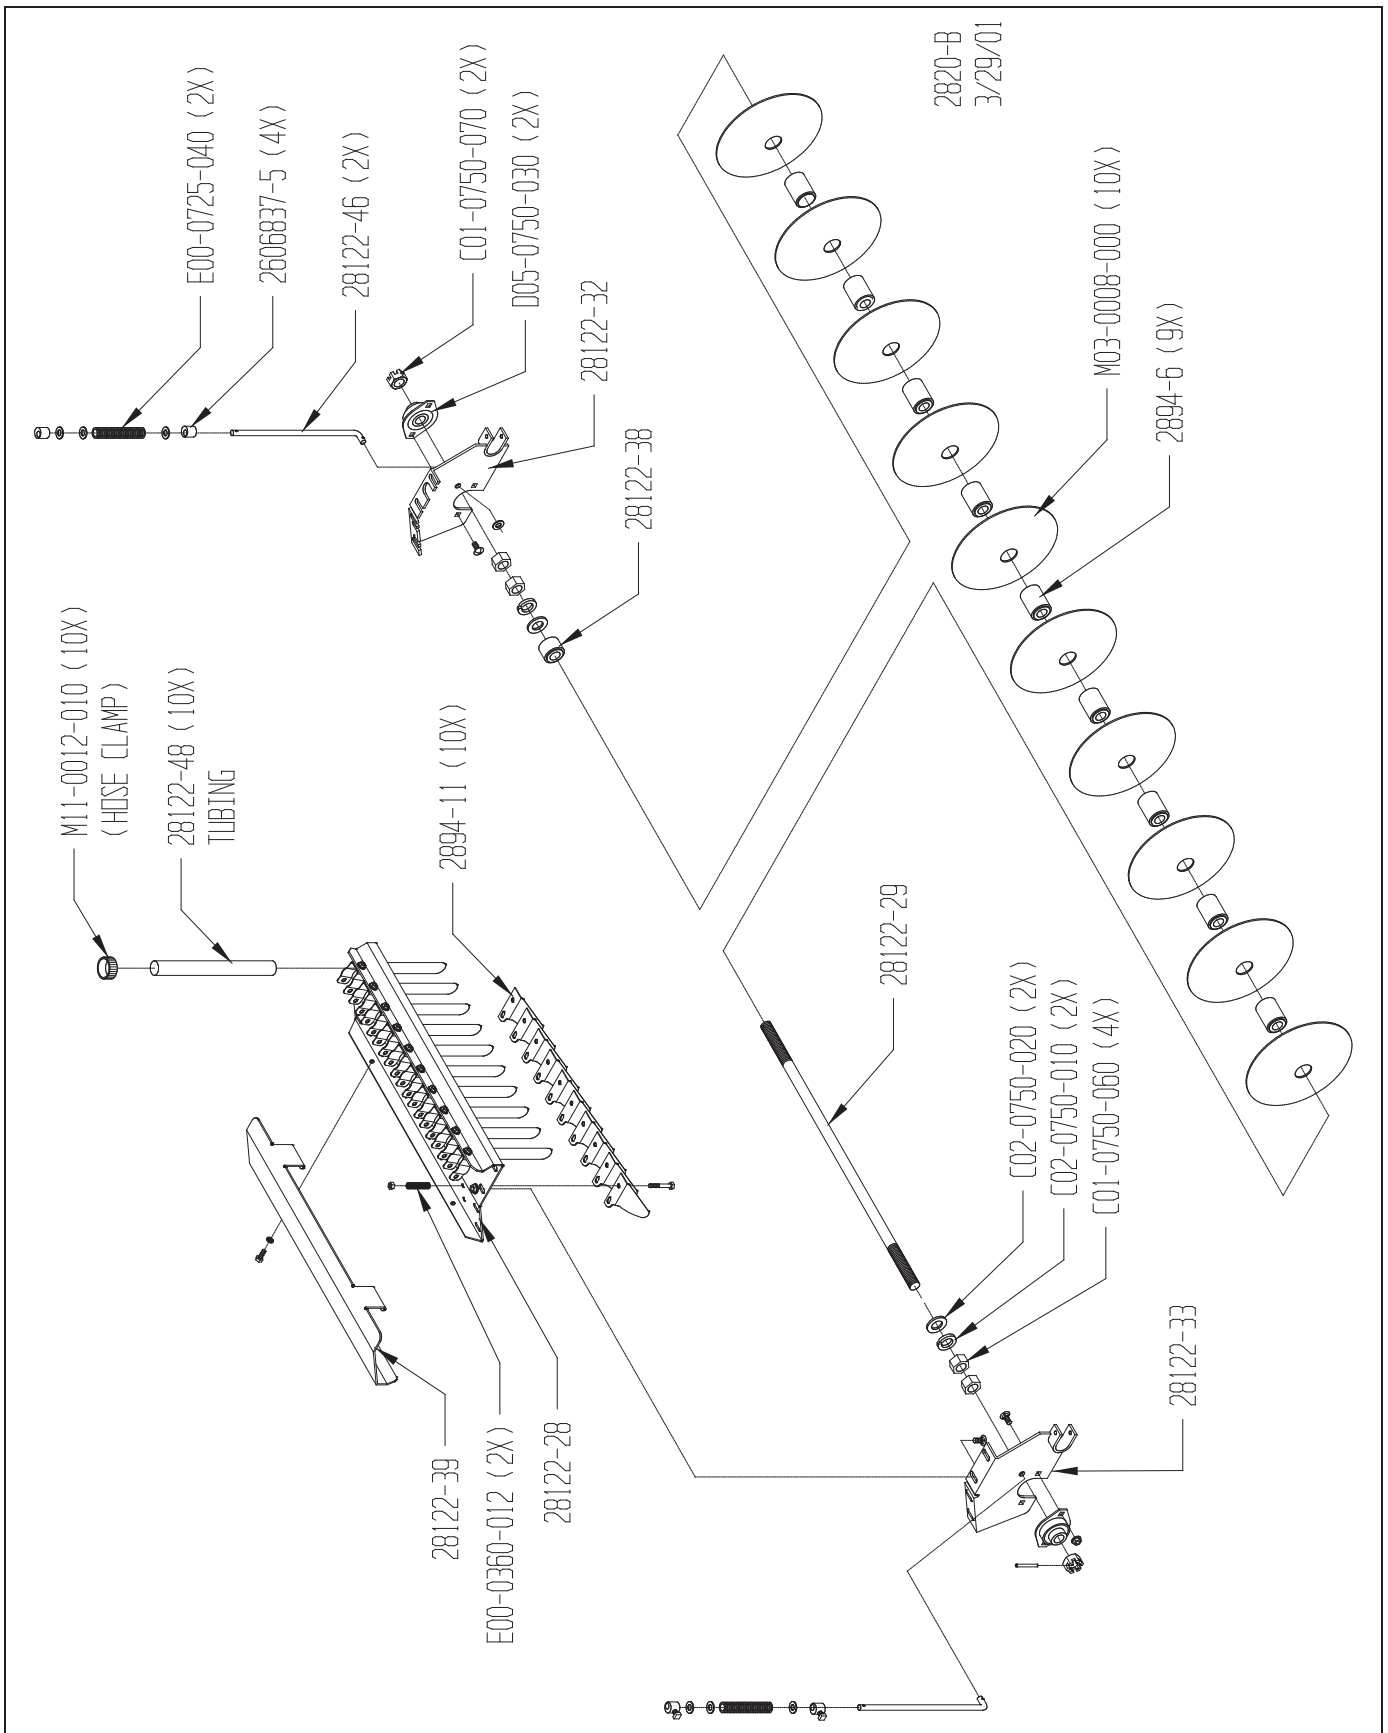

Throttle Cable Connection

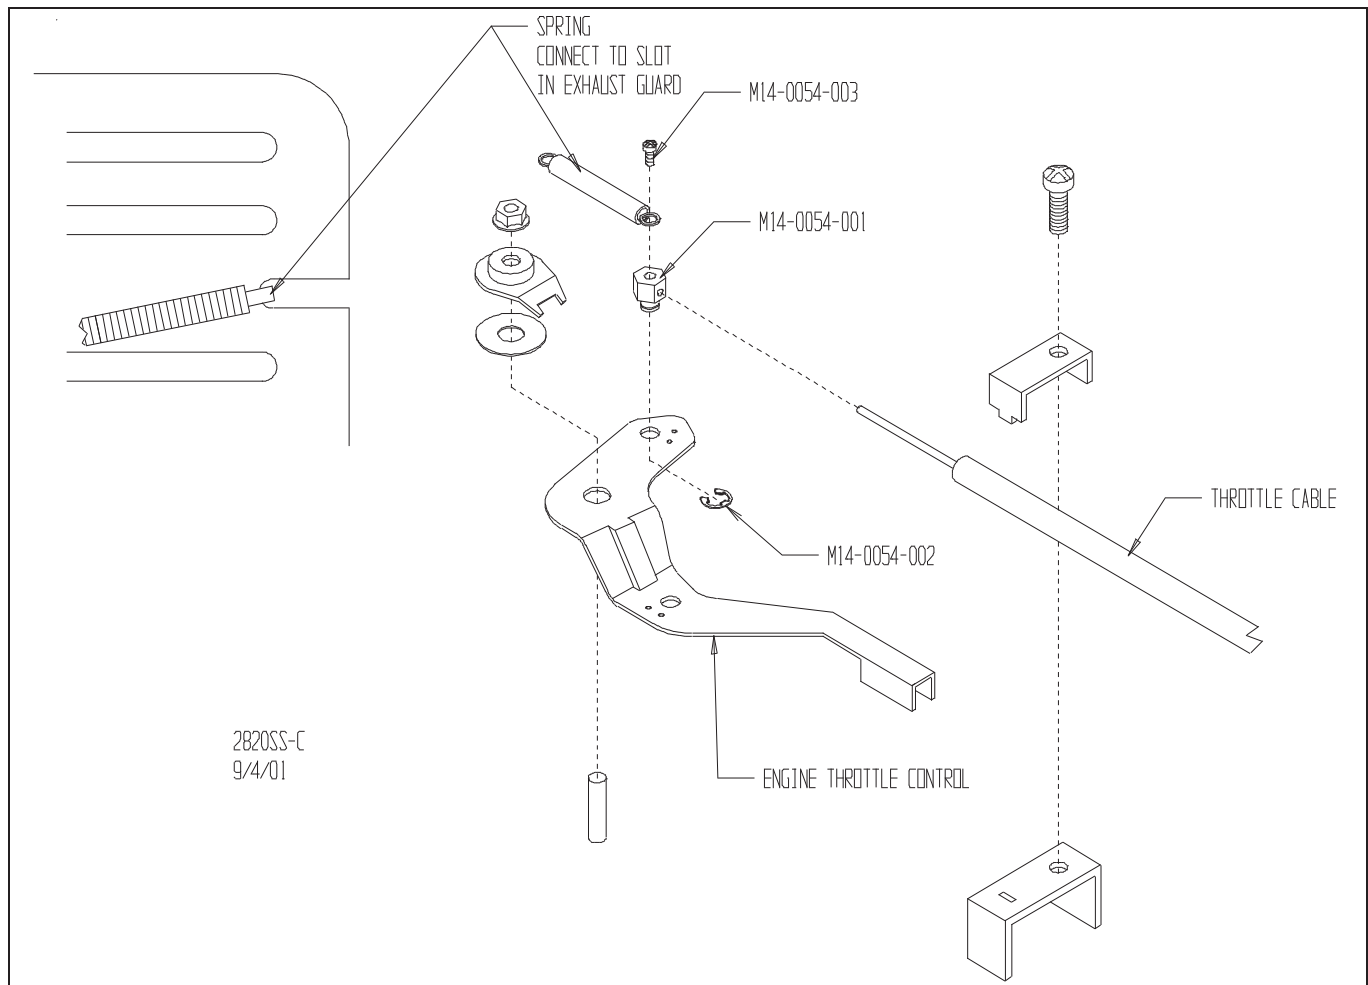

Drawings: 2820SS-B, 2820-E, 2820SS, 2820SS-A, 2820-A, 2820-B, 2820SS-C
November 9, 2010
Revised From (9/4/01)
(2820SS)
Printed in the USA